


Position of Parts in Engine Compartment

[RHD 2ZZ-GE]

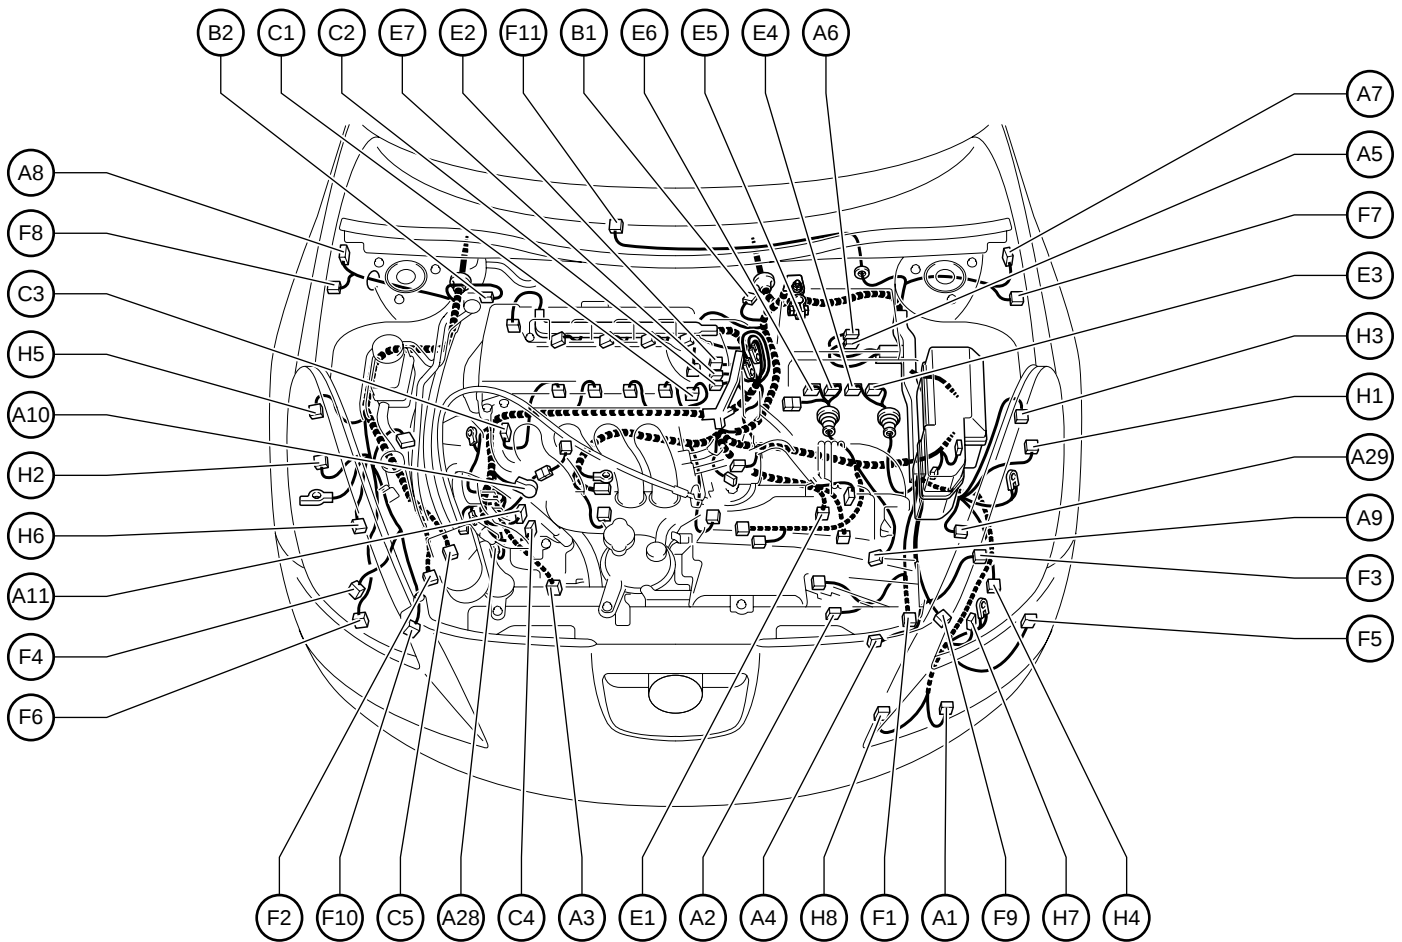

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Magnetic Clutch and Lock Sensor
- A 4 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 5 ABS Actuator
- A 6 ABS Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Air Flow Meter
- A10 Alternator
- A11 Alternator
- A28 Air Pump Motor
- A29 Air Pump Relay

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve (VVL)
- C 3 Camshaft Timing Oil Control Valve (VVT)
- C 4 Crankshaft Position Sensor
- C 5 Cruise Control Actuator

- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 4 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 5 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 7 Oil Pressure SW (VVTL)

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F10 Front Turn Signal Light RH
- F11 Front Wiper Motor

- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight LH (High)
- H 4 Headlight LH (Low)
- H 5 Headlight RH (High)
- H 6 Headlight RH (Low)
- H 7 Horn (High)
- H 8 Horn (Low)