

■ BODY ECU

1. General

The functions of the previous door control relay, the integration relay, and the daytime running light relay have been integrated into a single body ECU. As a result, the system has been simplified and its serviceability has been improved.

2. Operation

The body ECU provides the functions listed below.

Door Lock Control	Locking and unlocking of all doors through the power door lock switch
	Key-linked all doors lock and unlock
	Key-confine prevention
	Prohibiting unlocking by the door lock switches
	Double locking system control *2
	Wireless door lock remote control
Light Control	Illuminated entry system control
	Battery save (dome light OFF and timer control when door is ajar)
	Intelligent light OFF control when doors are locked
	Headlight high beam operation control*3
	Daytime running light system control*4
Power Window Control*1	Key-off operation timer control
Multiplex Communication Control	Multiplex communication output control with meter ECU
	Multiplex communication control with wireless door control receiver
Warning Light and Buzzer	Door ajar warning light
	Seat belt warning light for driver
	Seat belt warning light for front passenger
	Light reminder buzzer

*1: This control is also used for moon roof control on models with a moon roof.

*2: Only for European RHD model.

*3: Only for European LHD model and Australia model.

*4: Only for European LHD model with DRL System.