



REMOVAL

REMOVE DRIVE BELT

- (a) Loosen the pivot bolt.
- (b) Loosen the drive belt tension by turning adjusting bolt and remove the drive belt.