

## DISASSEMBLY


### 1. REMOVE HEATER CONTROL CABLES

- (a) Using a screwdriver, open the claw of the cable clamp and disconnect the outer cable.

#### HINT:

Tape the screwdriver tip before use.

- (b) Remove the inner cable from the heater control assembly.

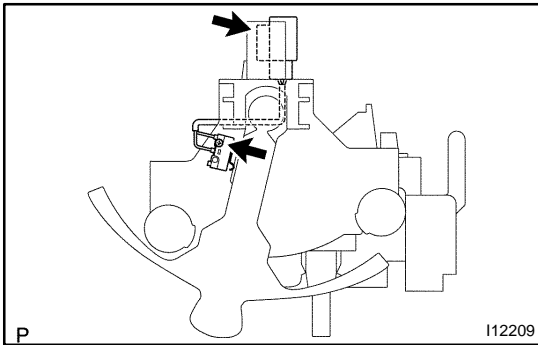

### 2. Two way flow heater models: REMOVE HEATER SWITCH

- (a) Disconnect the connector clamp.
- (b) Remove the screw and heater switch.