


INSPECTION

1. Two way flow heater models: INSPECT HEATER SWITCH CONTINUITY

Check the continuity exists between terminals while switch is pressed.


If no continuity exists, replace the heater switch.

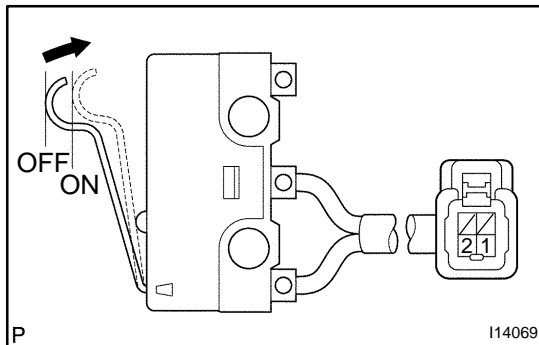

2. Two way flow heater models: INSPECT DEF. MODE SWITCH CONTINUITY

Check the continuity exists between terminals while switch is pressed.

If no continuity exists, replace the heater switch.

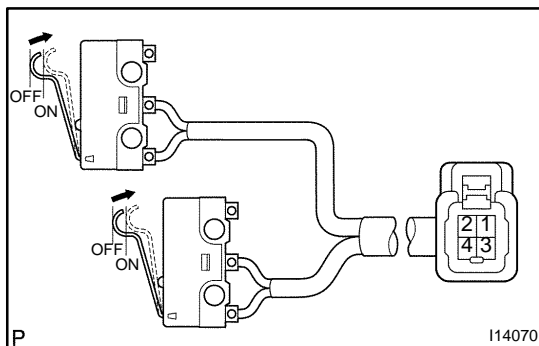

3. w/ A/C and two way flow heater models: INSPECT HEATER SWITCH CONTINUITY

Check the continuity exists between terminal 1 and 2 while switch is pressed.

If no continuity exists, replace the heater switch.

4. w/ A/C and two way flow heater models: INSPECT DEF. MODE SWITCH CONTINUITY

Check the continuity exists between terminal 3 and 4 while switch is pressed.

If no continuity exists, replace the DEF. mode switch.