

## REMOVAL

### 1. REMOVE CLUSTER FINISH PANEL (Integration panel)

- (a) Using pliers, pull out the 2 knobs.

HINT:

Cover the knobs with a cloth, when pulling the knobs.

- (b) Remove the 2 screws.

- (c) Using a screwdriver, release the 6 fitting clips and pull out the cluster finish panel, then disconnect the connectors.

HINT:



Tape the screwdriver tip before use.

### 2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page RS-28 )

### 3. REMOVE CLUSTER PANEL (Combination meter)

### 4. REMOVE COMBINATION METER

### 5. DISCONNECT HEATER CONTROL CABLES

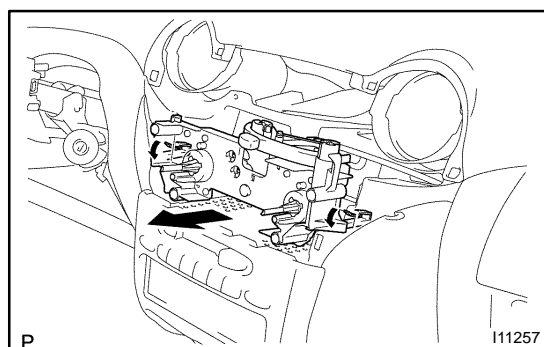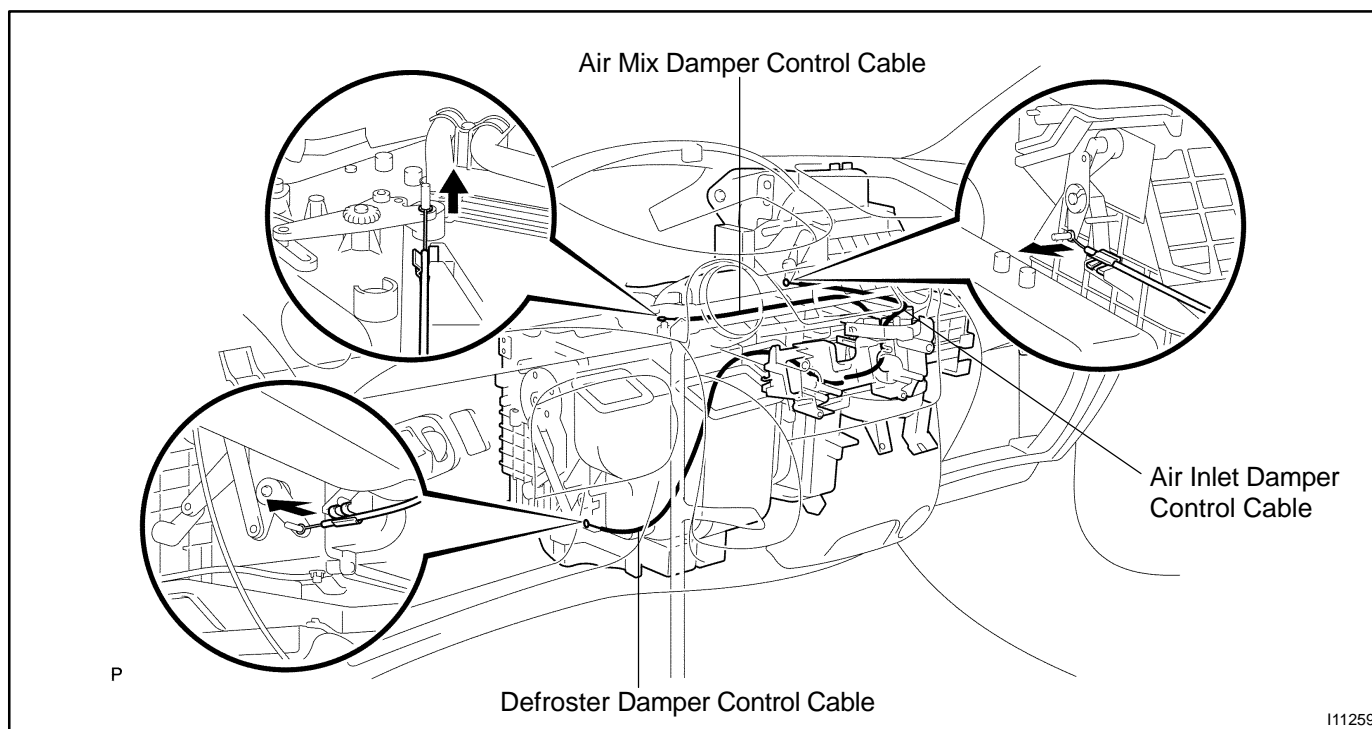

### 6. REMOVE HEATER CONTROL ASSEMBLY

Release the 2 claws and pull out the heater control assembly.