


## INSPECTION

### 1. INSPECT A/C INDICATOR OPERATION

Connect the positive (+) lead from the battery to terminal 3 and negative (-) lead to terminal 1, then check that the A/C indicator lights up while A/C switch is pressed.


If operation is not as specified, replace the center cluster switch.

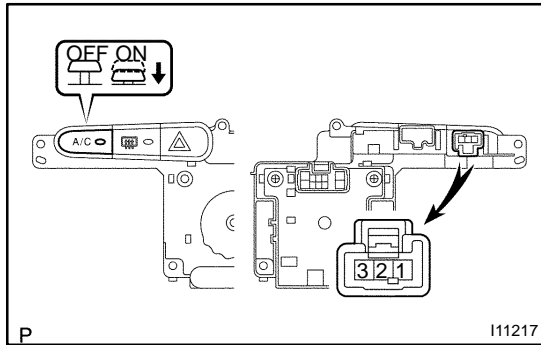

### 2. INSPECT A/C SWITCH CONTINUITY

Check the continuity exists between terminals 2 and 3 while switch is pressed.

If no continuity exists, replace the center cluster switch.

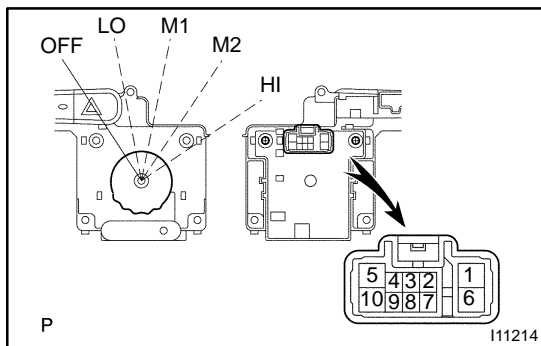

### 3. INSPECT BLOWER SWITCH CONTINUITY

Position / Circuit	Tester connection	Specified condition
OFF	-	No continuity
LO	1 - 2	Continuity
M1	1 - 2 - 7	Continuity
M2	1 - 2 - 6	Continuity
HI	1 - 2 - 10	Continuity
Illumination circuit	1 - 4	Continuity

Switch continuity:

If continuity is not as specified, replace the center cluster switch.

Illumination circuit:

If continuity is not as specified, replace the bulb.