


HEATER SUB RELAY INSPECTION

AC2K4-01

1. REMOVE HEATER SUB RELAY FROM ENGINE ROOM RELAY BLOCK NO. 1

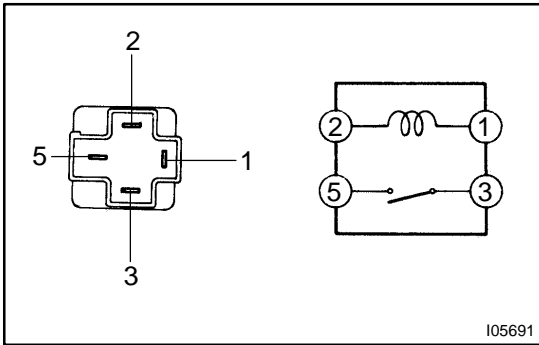

2. INSPECT HEATER SUB RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2	3 - 5	Continuity

If continuity is not as specified, replace the relay.