



## DIRECT CLUTCH SPEED SENSOR ON-VEHICLE REPAIR

AX0LZ-01

1. REMOVE AIR CLEANER ASSEMBLY
2. REMOVE AIR CLEANER ASSEMBLY BRACKET  
Remove the 2 bolts and bracket and shift control cable clamp.

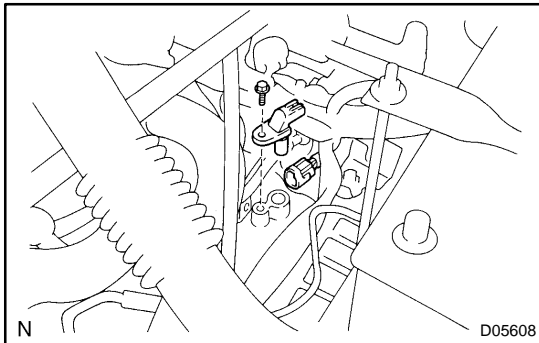

3. REMOVE DIRECT CLUTCH SPEED SENSOR
  - (a) Disconnect the connector.
  - (b) Remove the bolt and direct clutch speed sensor.
  - (c) Remove the O-ring from the direct clutch speed sensor.
4. INSTALL DIRECT CLUTCH SPEED SENSOR
  - (a) Coat a new O-ring with ATF and install it to the direct clutch speed sensor.
  - (b) Install the direct clutch speed sensor with the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
  - (c) Connect the connector.

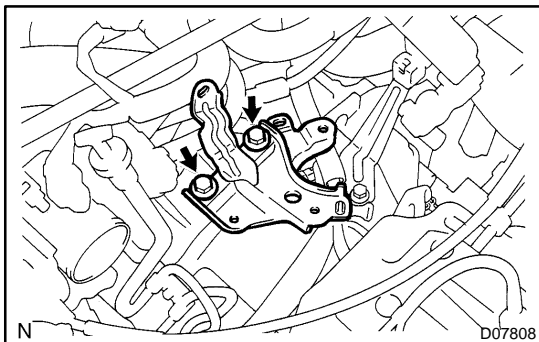

5. INSTALL AIR CLEANER BRACKET  
Install the bracket with the 2 bolts.  
**Torque: 19 N·m (195 kgf·cm, 14 ft-lbf)**
6. INSTALL AIR CLEANER ASSEMBLY AND SHIFT CONTROL CABLE CLAMP