



# VEHICLE SPEED SENSOR ON-VEHICLE REPAIR

AX03N-10

1. REMOVE AIR CLEANER ASSEMBLY
2. DISCONNECT VEHICLE SPEED SENSOR CONNECTOR

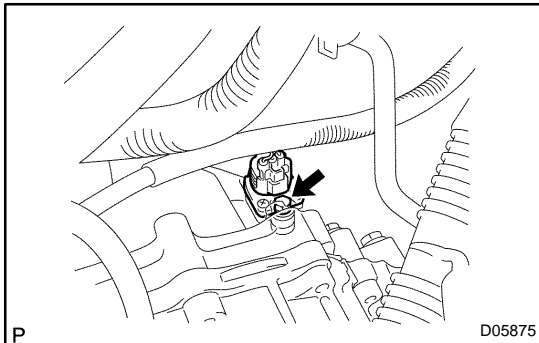

3. REMOVE VEHICLE SPEED SENSOR ASSEMBLY
  - (a) Remove the bolt and vehicle speed sensor assembly.

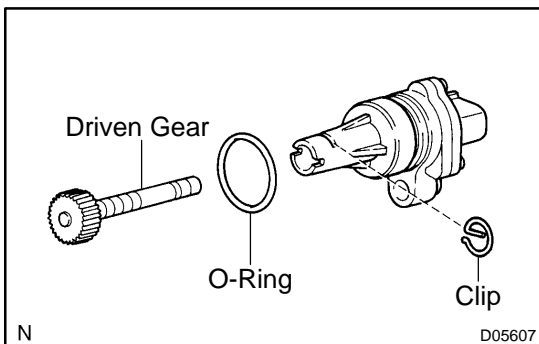

- (b) Remove the clip and driven gear from the vehicle speed sensor.
  - (c) Remove the O-ring from the vehicle speed sensor.
4. INSTALL VEHICLE SPEED SENSOR ASSEMBLY
  - (a) Coat a new O-ring with ATF and install it to the vehicle speed sensor.
  - (b) Install the driven gear to the vehicle speed sensor with the clip.
  - (c) Install the vehicle speed sensor assembly with the bolt.

**Torque: 7.0 N·m (71 kgf·cm, 5 ft·lbf)**

5. CONNECT VEHICLE SPEED SENSOR CONNECTOR
6. INSTALL AIR CLEANER ASSEMBLY