


REMOVAL

Installation is in the reverse order of removal.


1. REMOVE COLUMN COVER

- (a) Remove the 3 screws.
- (b) Remove the column cover.

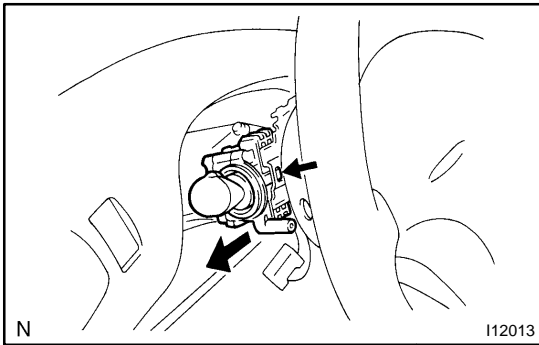

2. REMOVE LIGHT CONTROL SWITCH

- (a) Disconnect the light control switch connector.
- (b) Remove the switch from the turn signal bracket.

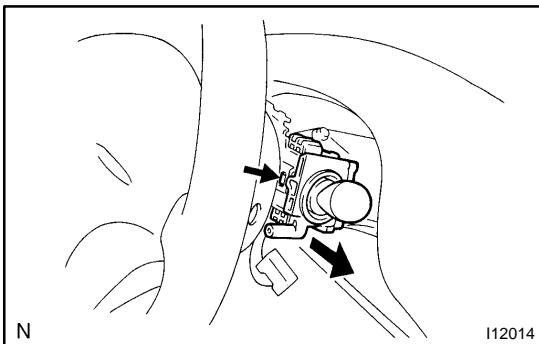

3. REMOVE WIPER AND WASHER SWITCH

- (a) Disconnect the wiper and washer switch connector.
- (b) Remove the switch from the turn signal bracket.