

INSTALLATION

INSTALL FRONT SEAT

- (a) Slide the front seat to the most front position.

NOTICE:

Make sure that seat adjuster locks.

- (b) Without holding the seat track handle, mount the seat to the vehicle.

HINT:

If holding the seat track handle, the adjusted most front positions slip off.

- (c) w/ Side airbag:
Connect the connector.
- (d) w/ Seat belt warning light:
Connect the connector.
- (e) Tighten the bolts on the rear side temporarily, from the bolt on the inner side tighten them completely.
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
- (f) Slide the seat to the most rear position to install the bolts on the front side.
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
- (g) Install the seat track covers.