



REMOVAL

REMOVE FRONT SEAT

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

(a) Using a screwdriver, remove the seat track covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 bolts.
- (c) w/ Seat belt warning light:
Disconnect the connector.
- (d) w/ Side airbag:
Disconnect the connector.
- (e) Remove the front seat.

NOTICE:

Be careful not to damage the body.