

## REMOVAL

1. REMOVE MASTER CYLINDER  
(See page [BR-11](#))
2. REMOVE AIR CLEANER ASSEMBLY
3. REMOVE ABS ACTUATOR (See page [BR-36](#))
4. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER
5. REMOVE RETURN SPRING
6. REMOVE CLIP AND CLEVIS PIN
7. REMOVE BRAKE BOOSTER
  - (a) Remove the 4 nuts and clevis.
  - (b) Pull out the brake booster and gasket.

