

## INSTALLATION

Installation is in the reverse order of removal (See page [BR-39](#) ).

HINT:

After installation, check the speed sensor signal (See page [DI-201](#) ).