


REMOVAL

1. REMOVE TRANSAXLE FROM ENGINE
(See page [MX-4](#))
2. REMOVE CLUTCH COVER AND DISC
 - (a) Align the matchmark on the clutch cover with the one on the flywheel.
 - (b) Loosen each set bolt one turn at a time until spring tension is released.
 - (c) Remove the set bolts, and pull off the clutch cover with the clutch disc.

NOTICE:

Do not drop the clutch disc.

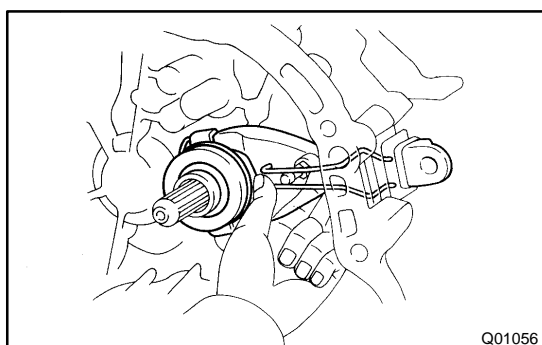

3. REMOVE RELEASE BEARING AND FORK FROM TRANSAXLE
Remove the release bearing with the fork together and then separate them.
4. REMOVE RELEASE FORK SUPPORT AND BOOT