



DISASSEMBLY

1. REMOVE BLEEDER PLUG
2. REMOVE UNION BOLT, 2 GASKETS AND UNION
3. PULL OUT BOOT WITH PUSH ROD
4. REMOVE PISTON WITH SPRING

Using compressed air, remove the piston with the spring from the cylinder.

NOTICE:

- **Blowing off the air may cause the piston's jump-out. When removing the piston, hold it with your hand using a waste cloth.**
- **Take care not to splash brake fluid when air-blowing.**