

INSTALLATION

1. **INSTALL COOLING FAN**
 - (a) Install the cooling fan with the 3 bolts.
Torque: 7.5 N·m (76 kgf·cm, 66 in.-lbf)
 - (b) Connect the cooling fan connector.
2. **CONNECT UPPER RADIATOR HOSE TO RADIATOR**
3. **INSTALL RADIATOR UPPER SUPPORT**
4. **FILL WITH ENGINE COOLANT**
5. **START ENGINE AND CHECK FOR COOLANT LEAKS**