

REASSEMBLY

1. INSTALL FAN MOTOR

Install the fan motor with the 3 screws.

Torque:

w/ A/C 2.65 N·m (27 kgf·cm, 23 in.-lbf)

w/o A/C 3.98 N·m (41 kgf·cm, 35 in.-lbf)

2. INSTALL FAN

Install the fan with the nut.

Torque: 6.4 N·m (66 kgf·cm, 57 in.-lbf)