

## REMOVAL

1. DRAIN ENGINE COOLANT
2. DISCONNECT UPPER RADIATOR HOSE FROM RADIATOR
3. REMOVE UPPER RADIATOR SUPPORT
4. REMOVE COOLING FAN
  - (a) Disconnect the cooling fan connector and reservoir hose.
  - (b) Remove the 3 bolts and cooling fan.