


INSTALLATION

1. INSTALL WATER PUMP

- (a) Install the water pump and a new gasket with the 3 bolts and 2 nuts.

Torque: 11.0 N·m (110 kgf·cm, 8 ft·lbf)

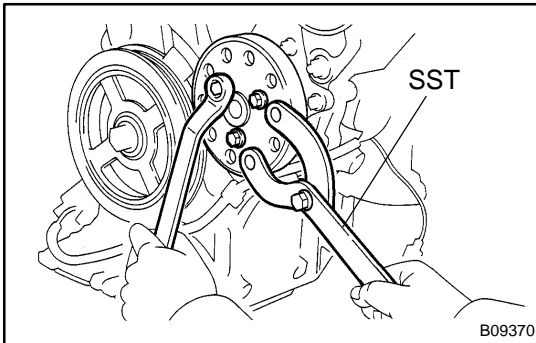

- (b) Using SST, install the pump pulley with the 3 bolts.
SST 09960-10010 (09962-01000, 09963-00600)

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

2. **INSTALL DRIVE BELT (See page [CH-2](#))**
3. **FILL WITH ENGINE COOLANT**
4. **START ENGINE AND CHECK FOR LEAKS**
5. **RECHECK ENGINE COOLANT LEVEL**