

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the page given.

* : -...MIL does not light /●...MIL light up

DTC No. (See Page)	Detection Item	Trouble Area	MIL *	Memory
P0500 (DI-167)	Vehicle Speed Sensor Malfunction	<ul style="list-style-type: none"> • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • Combination meter • ECM • Automatic transaxle assembly 	●	○
P0710 (DI-170)	Transmission Fluid Temperature Sensor Malfunction (ATF Temperature Sensor)	<ul style="list-style-type: none"> • Open or short in ATF temperature sensor circuit • ATF temperature sensor • ECM 	●	○
P0711 (DI-170)	Transmission Fluid Temperature Sensor Circuit Range/Performance Problem	<ul style="list-style-type: none"> • Open in ATF temperature sensor circuit • ATF temperature sensor • ECM 	●	○
P0750 (DI-172)	Shift Solenoid A Malfunction (Shift Solenoid Valve No. 1)	<ul style="list-style-type: none"> • Shift solenoid valve No. 1 is stuck open or closed • Valve body is blocked up or stuck 	●	○
P0753 (DI-174)	Shift Solenoid A Electrical Malfunction (Shift Solenoid Valve No. 1)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No. 1 circuit • Shift solenoid valve No. 1 • ECM 	●	○
P0755 (DI-172)	Shift Solenoid B Malfunction (Shift Solenoid Valve No. 2)	<ul style="list-style-type: none"> • Shift solenoid valve No. 2 is stuck open or closed • Valve body is blocked up or stuck 	●	○
P0758 (DI-174)	Shift Solenoid B Electrical Malfunction (Shift Solenoid Valve No. 2)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No. 2 circuit • Shift solenoid valve No. 2 • ECM 	●	○
P0770 (DI-178)	Shift Solenoid E Malfunction (Shift Solenoid Valve SL)	<ul style="list-style-type: none"> • Shift solenoid valve SL is stuck open or closed • Valve body is blocked up or stuck • Lock-up clutch 	●	○
P0773 (DI-180)	Shift Solenoid E Electrical Malfunction (Shift Solenoid Valve SL)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SL circuit • Shift solenoid valve SL • ECM 	●	○
P1520 (DI-183)	Stop Light Switch Circuit	<ul style="list-style-type: none"> • Open or short in stop light switch circuit • Stop light switch • ECM 	●	○
P1725 (DI-184)	NT Revolution Sensor Circuit Malfunction (Input Turbine Speed Sensor)	<ul style="list-style-type: none"> • Open or short in input turbine speed sensor circuit • Input turbine speed sensor • ECM 	●	○
P1760 (DI-186)	Linear Solenoid for Accumulator Pressure Control Circuit Malfunction (Shift Solenoid Valve SLT)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLT circuit • Shift solenoid valve SLT • ECM 	●	○
P1780 (DI-189)	Park/Neutral Position Switch Malfunction	<ul style="list-style-type: none"> • Short in park/neutral position switch circuit • Park/neutral position switch • ECM 	●	○
P1790 (DI-193)	ST Solenoid Valve Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in shift solenoid valve ST circuit • Shift solenoid valve ST • ECM 	●	○