

PROBLEM SYMPTOMS TABLE

| Symptom | Suspect Area | See page |
|--|---|-----------------------|
| Does not start (Engine does not crank) | 6. Starter 7. Starter relay | ST-1 ST-19 |
| Does not start (No initial combustion) | 1. ECM power source circuit 2. Fuel pump control circuit | DI-138 DI-141 |
| Does not start (No complete combustion) | 1. Fuel pump control circuit | DI-141 |
| Difficult to start (Engine cranks normally) | 1. Starter signal circuit 2. Fuel pump control circuit 3. Compression | - DI-141 EM-3 |
| Difficult to start (Cold engine) | 1. Starter signal circuit 2. Fuel pump control circuit | - DI-141 |
| Difficult to start (Hot engine) | 1. Starter signal circuit 2. Fuel pump control circuit | - DI-141 |
| Poor idling (High engine idle speed) | 1. A/C switch circuit 2. ECM power source circuit | AC-75 DI-138 |
| Poor idling (Low engine idle speed) | 1. A/C switch circuit 2. Fuel pump control circuit | AC-75 DI-141 |
| Poor idling (Rough idling) | 1. Compression 2. Fuel pump control circuit | EM-3 DI-141 |
| Poor idling (Hunting) | 1. ECM power source circuit 2. Fuel pump control circuit | DI-138 DI-141 |
| Poor driveability (Hesitation/Poor acceleration) | 1. Fuel pump control circuit 2. A/T faulty 3. A/C cut control circuit | DI-141 DI-163 - |
| Poor driveability (Surging) | 1. Fuel pump control circuit | DI-141 |
| Engine stall (Soon after starting) | 1. Fuel pump control circuit | DI-141 |
| Engine stall (During A/C operation) | 1. A/C switch circuit | AC-75 |
| Unable to refuel/ Difficult to refuel | 1. ORVR system | EC-5 |