


REMOVAL

1. REMOVE ENGINE UNDER COVER RH

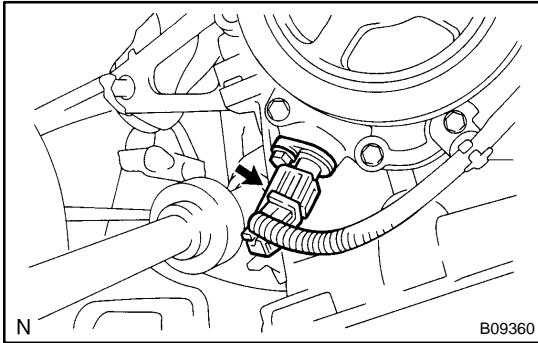

2. REMOVE CRANKSHAFT POSITION SENSOR

- (a) While sliding the connector lock, remove the connector.
- (b) Remove the bolt and crankshaft position sensor.

Torque: 7.5 N·m (76 kgf·cm, 66 in.-lbf)