

**DISASSEMBLY****REMOVE RELIEF VALVE**

Remove the plug, spring and relief valve.