

ENGINE INSPECTION

MA00R-07

HINT:

Inspect these items when the engine is cold.

1. **INSPECT DRIVE BELT**
(See page [CH-2](#))
2. **REPLACE SPARK PLUGS**
(See page [IG-1](#))



3. **INSPECT AIR FILTER**

- (a) Visually check that the air filter is not excessively dirty or oily.

HINT:

Oiliness may indicate a stuck PCV valve.

If necessary, replace the air cleaner element.

- (b) Clean the air filter with compressed air.
First blow from the inside thoroughly, then blow off the outside of the element.

4. **REPLACE AIR FILTER**

Replace the air filter with a new one.

5. **REPLACE ENGINE OIL AND OIL FILTER**
(See page [LU-2](#))
6. **REPLACE ENGINE COOLANT**
(See page [CO-2](#))
7. **INSPECT CHARCOAL CANISTER**
(See page [EC-5](#))
8. **REPLACE GASKET IN FUEL TANK CAP**
(See page [SF-27](#))
9. **INSPECT FUEL LINES AND CONNECTIONS**
(See page [SF-27](#))
10. **INSPECT EXHAUST PIPES AND MOUNTINGS**
(See page [EC-1 1](#))
11. **ADJUST VALVE CLEARANCE**
(See page [EM-5](#))