

## REMOVAL


### NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

### HINT:

For step 1 to 5, refer to page [BO-8](#) .

1. **w/o Power window:**  
**REMOVE REGULATOR HANDLE**
2. **w/ Power window:**  
**REMOVE POWER WINDOW SWITCH**
3. **REMOVE LOWER FRAME BRACKET GARNISH**
4. **REMOVE PULL HANDLE**
5. **REMOVE DOOR TRIM**

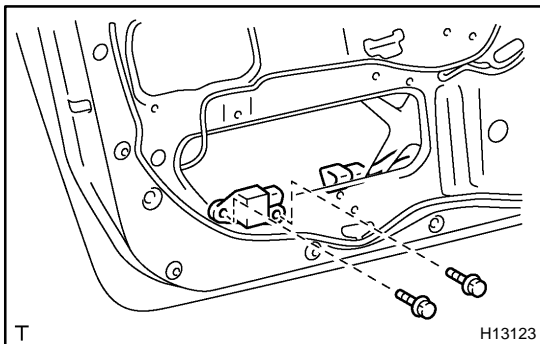

6. **REMOVE DOOR SIDE AIRBAG SENSOR**
  - (a) Disconnect the door side airbag sensor connector.

### NOTICE:

- Disconnect the connector with sensor assembly installed.**
- (b) Remove the 2 bolts and door side airbag sensor.