


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

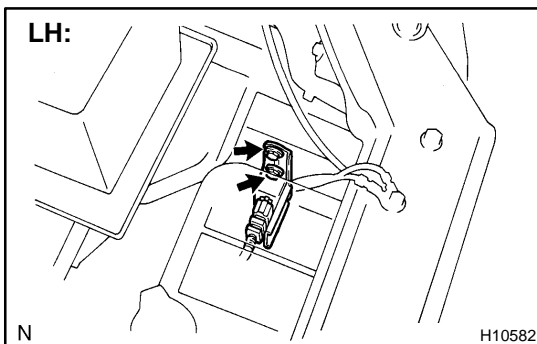


1. LH: REMOVE FRONT AIRBAG SENSOR

- Remove the bolt and air cleaner inlet.
- Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor LH.

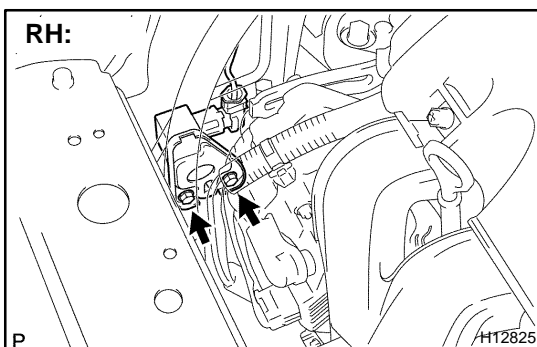

2. RH: REMOVE FRONT AIRBAG SENSOR

- Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor RH.