

## REMOVAL

### NOTICE:


Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

### HINT:

For step 1 to 8, refer to page [BO-1 10](#).

1. REMOVE FRONT DOOR SCUFF PLATE
2. REMOVE FRONT DOOR OPENING TRIM
3. REMOVE REAR SEAT CUSHION
4. REMOVE REAR SEATBACK
5. REMOVE REAR SEATBACK HINGE
6. REMOVE REAR SEAT BELT
7. REMOVE QUARTER TRIM
8. REMOVE RETRACTOR PART OF FRONT SEAT OUTER BELT

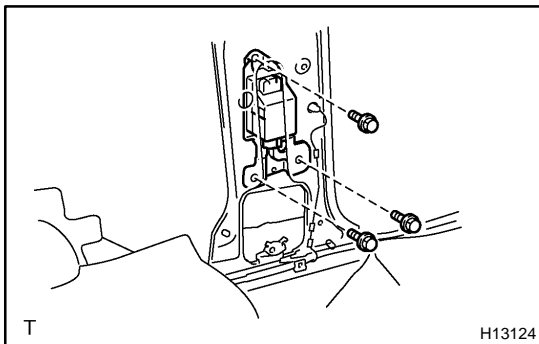

### 9. REMOVE SIDE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the connector.

### NOTICE:

Remove the connector with the sensor assembly installed.

- (b) Remove the 3 bolts and side airbag sensor assembly.