

## REMOVAL

HINT:

For step 1 to 4, refer to page [SR-13](#) .

1. REMOVE STEERING WHEEL PAD
2. REMOVE STEERING WHEEL
3. REMOVE COLUMN LOWER COVER
4. REMOVE SPIRAL CABLE