

## INSTALLATION


### 1. INSTALL STABILIZER BAR

Install the stabilizer bar, 2 bushings, brackets and 4 bolts.

**Torque: 19 N·m (190 kgf·cm, 14 ft·lbf)**

HINT:

Install the bushings to the outside of the each paint line.

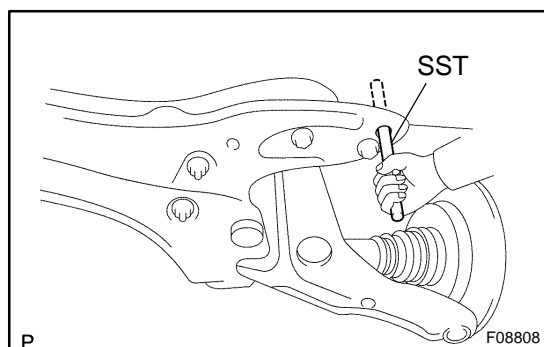


### 2. INSTALL SUSPENSION MEMBER

(a) Using SST, align the holes of the suspension member and body.

SST 09670-00010

(b) Employ the same manner described above to the other side.

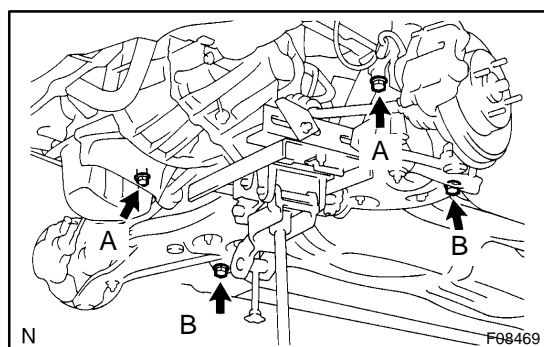

(c) Install the suspension member with the 4 bolts.

**Torque:**

**Bolt A: 70 N·m (715 kgf·cm, 52 ft·lbf)**

**Bolt B: 116 N·m (1,185 kgf·cm, 86 ft·lbf)**

### 3. Power steering:

#### CONNECT TUBE CLAMP


Connect the tube clamp with the bolt.

**Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)**

### 4. Power steering:

**CONNECT PRESSURE FEED AND RETURN TUBES**  
(See page [SR-61](#) )

### 5. CONNECT SLIDING YOKE (See page [SR-20](#) )

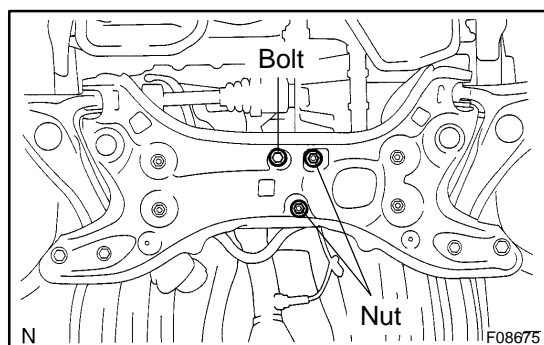

### 6. CONNECT ENGINE REAR MOUNT

Connect the engine rear mount with the bolt and 2 nuts.

**Torque: 80 N·m (810 kgf·cm, 59 ft·lbf)**

### 7. DISENGAGE ENGINE SLING DEVICE

### 8. INSTALL ENGINE HOOD (See page [BO-6](#) )

**9. CONNECT LOWER SUSPENSION ARMS TO STEERING KNUCKLES**

- (a) Connect the lower suspension arm to the steering knuckle with the nut.

**Torque: 98 N·m (1,000 kgf·cm, 72 ft·lbf)**

- (b) Install a new clip.

If the holes for the clip are not aligned, tighten the nut further up to 60°.

- (c) Employ the same manner described above to the other side.

**10. CONNECT TIE ROD ENDS TO STEERING KNUCKLES**


- (a) Connect the tie rod end to the steering knuckle with the nut.

**Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)**

- (b) Install a new cotter pin.

If the holes for the cotter pin are not aligned, tighten the nut further up to 60°.

- (c) Employ the same manner described above to the other side.

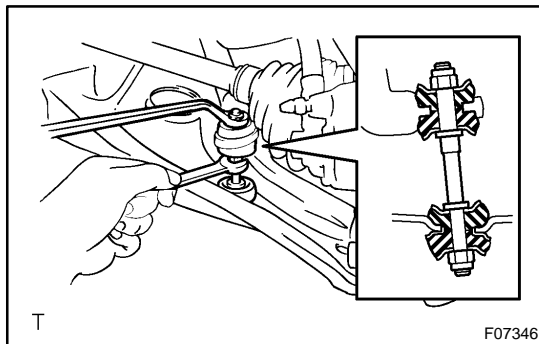**11. INSTALL STABILIZER BAR LINKS**

- (a) Install the stabilizer bar link, 4 cushions and 5 retainers with the 2 nuts.

**Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)**

- (b) Employ the same manner described above to the other side.

**12. INSTALL FRONT WHEELS**

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**