



INSPECTION

INSPECT CAMSHAFT TIMING OIL CONTROL VALVE OPERATION

Connect positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, and check the movement of the valve.

Battery voltage is applied	Valve moves in ← direction
Battery voltage is cut off	Valve moves in → direction

If operation is not as specified, replace the valve.