


INSTALLATION

1. INSTALL CAMSHAFT TIMING OIL CONTROL VALVE

- (a) Install the bolt, oil control valve and O-ring.
Torque: 8.5 N·m (85 kgf·cm, 75 in.-lbf)
- (b) Connect the oil control valve connector.

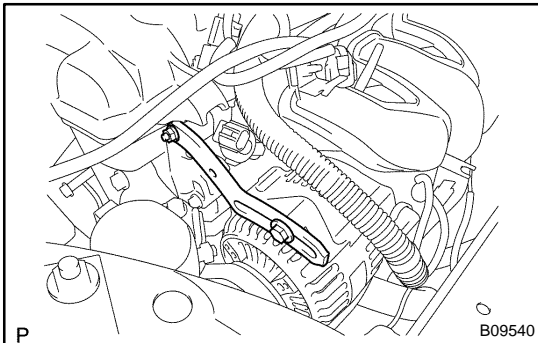

2. INSTALL GENERATOR STAY

- (a) Install the generator bracket with the nut.
Torque: 11 N·m (110 kgf·cm, 8 ft·lbf)
- (b) Adjust the belt tension and torque the bolt (See page [CH-2](#)).
Torque: 18 N·m (185 kgf·cm, 14 ft·lbf)

3. INSTALL NO.2 CYLINDER HEAD COVER

Install the 4 nuts and No. 2 cylinder head cover.