


FUEL CUT RPM INSPECTION

SF0AD-07


1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

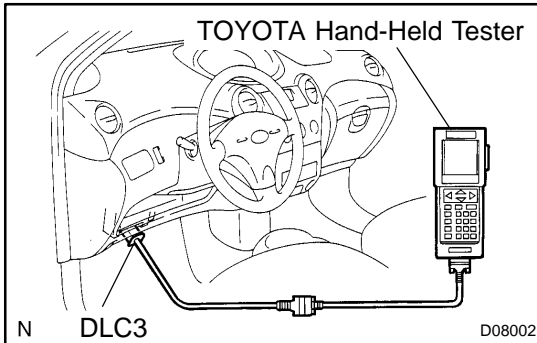

2. CONNECT TOYOTA HAND-HELD TESTER OR OBD II SCAN TOOL

- (a) Connect the TOYOTA hand-held tester or OBD II scan tool to the DLC3.
- (b) Please refer to the TOYOTA hand-held tester or OBD II scan tool operator's manual for further details.

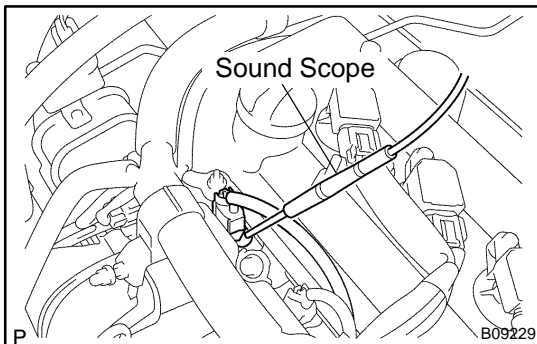

3. INSPECT FUEL CUT OFF RPM

- (a) Increase the engine speed to at least 3,500 rpm.
- (b) Use a sound scope to check for injector operating noise.
- (c) Check that when the throttle lever is released injector, operation noise stops momentary and then resumes.

HINT:

Measure with the A/C OFF.

Fuel return rpm:

1,400 rpm

4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBD II SCAN TOOL