



## INSTALLATION

### 1. INSTALL FUEL PRESSURE REGULATOR

- (a) Install the O-ring to the pressure regulator.

#### HINT:

Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.

- (b) Connect the pressure regulator from the fuel filter.

### 2. INSTALL NO.2 FUEL SUCTION SUPPORT

(See page [SF-13](#))

### 3. INSTALL FUEL PUMP ASSEMBLY FROM FUEL TANK

(See page [SF-14](#))