



REASSEMBLY

1. INSTALL FUEL PUMP

Connect the fuel pump to the fuel filter.

2. INSTALL FUEL PRESSURE REGULATOR

(a) Install the O-ring to the pressure regulator.

HINT:

Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.

(b) Connect the pressure regulator to the fuel filter.

3. INSTALL NO. 1 FUEL SUCTION SUPPORT

(a) Connect the fuel pump harness to the No. 1 fuel suction support and fuel pump.

(b) Install the No. 1 fuel suction support to the fuel filter.

(c) Connect the fuel sender gauge connector and earth plate.

4. INSTALL NO. 2 FUEL SUCTION SUPPORT

(a) Install the rubber cushion.

(b) Install the No. 2 fuel suction support to the No. 1 fuel suction support.

5. INSTALL VAPOR PRESSURE SENSOR

Install the vapor pressure sensor and connect the joint clip to the No. 1 fuel suction support.