

REMOVAL

REMOVE MASS AIR FLOW METER

Remove the 2 screws, air flow meter and O-ring.