



Engine Control (1GD-FTV, 2GD-FTV)

*15 : Before Aug. 2017 Production
 *16 : From Aug. 2017 Production
 *19 : *15, LHD *16

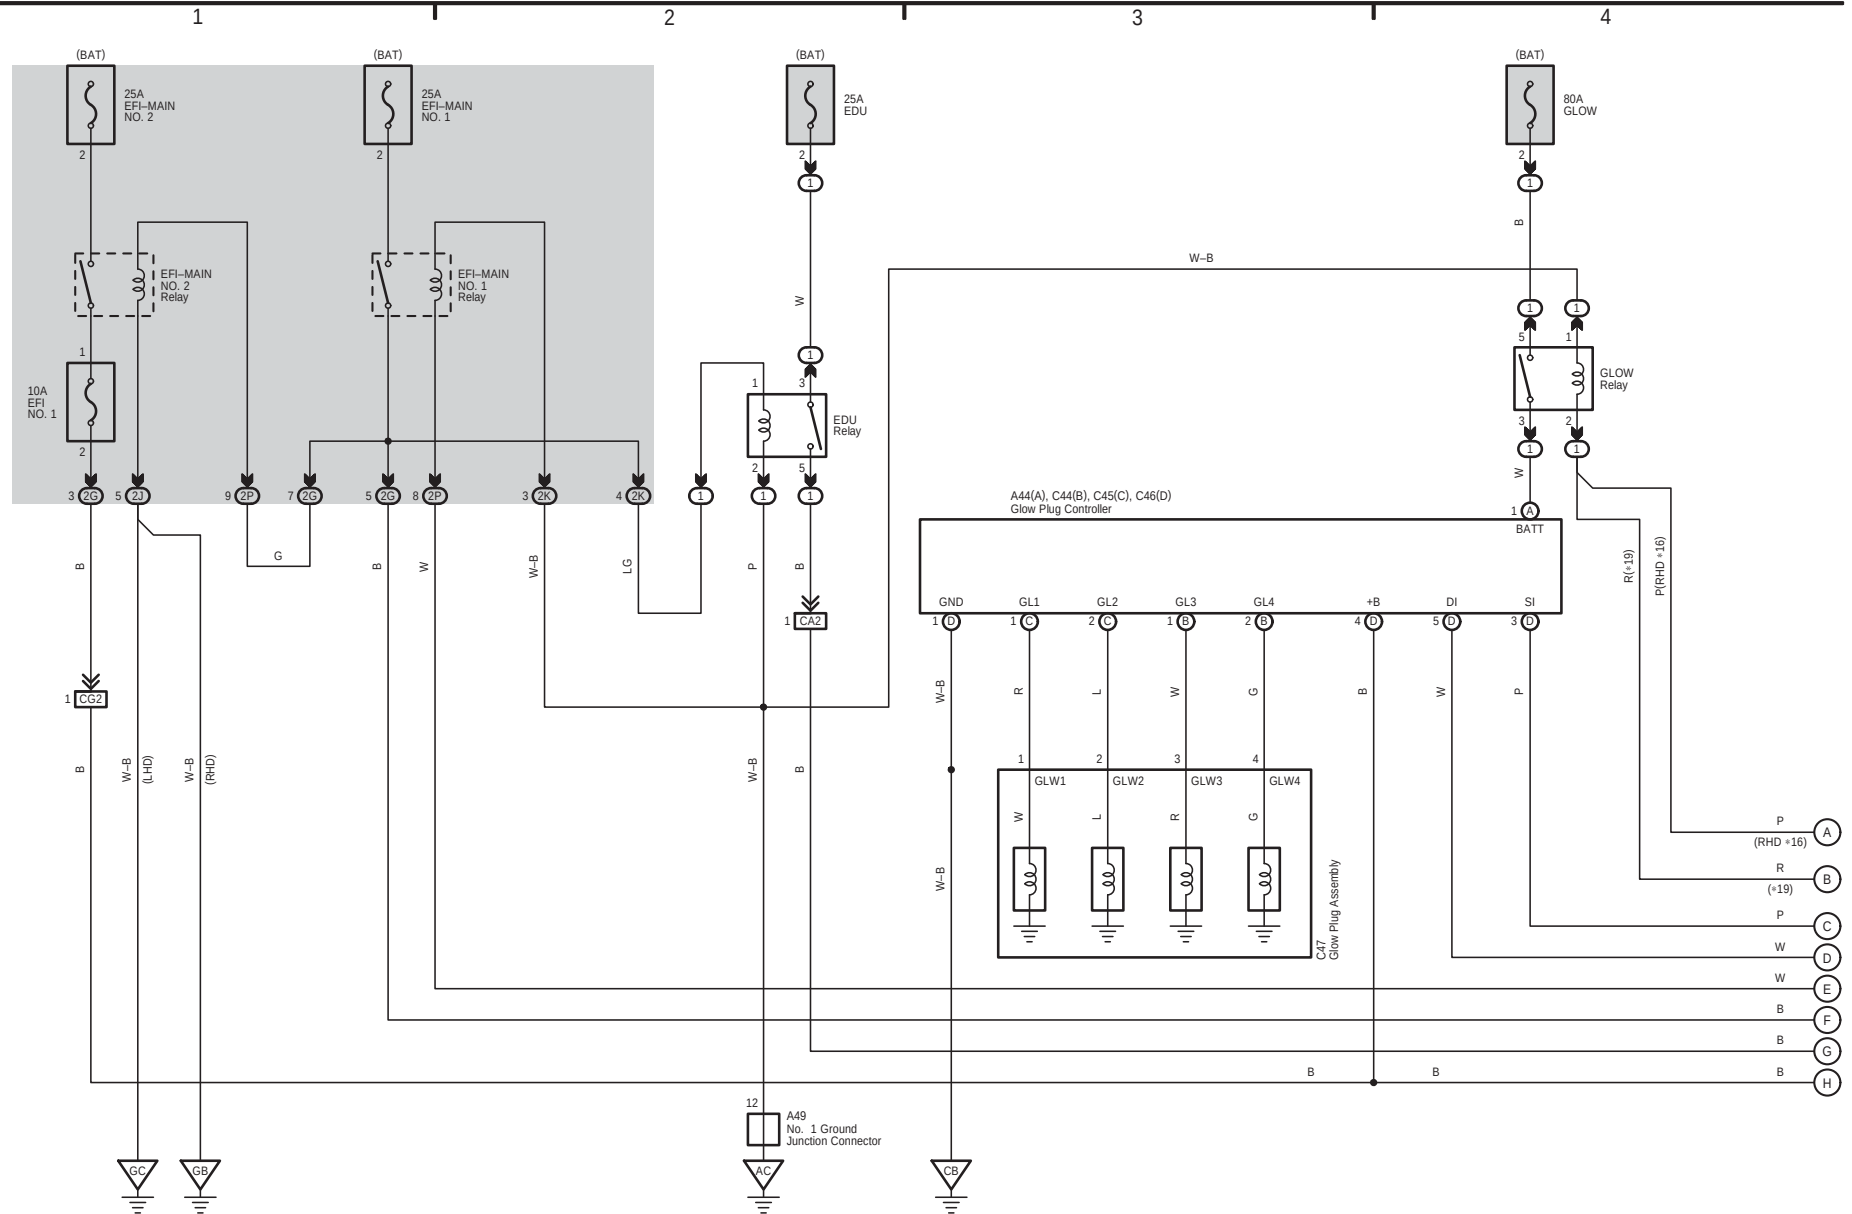


Engine Control (1GD-FTV, 2GD-FTV)

*10 : w/ Air Fuel Ratio Sensor
 *15 : Before Aug. 2017 Production
 *16 : From Aug. 2017 Production
 *19 : *15, LHD *16

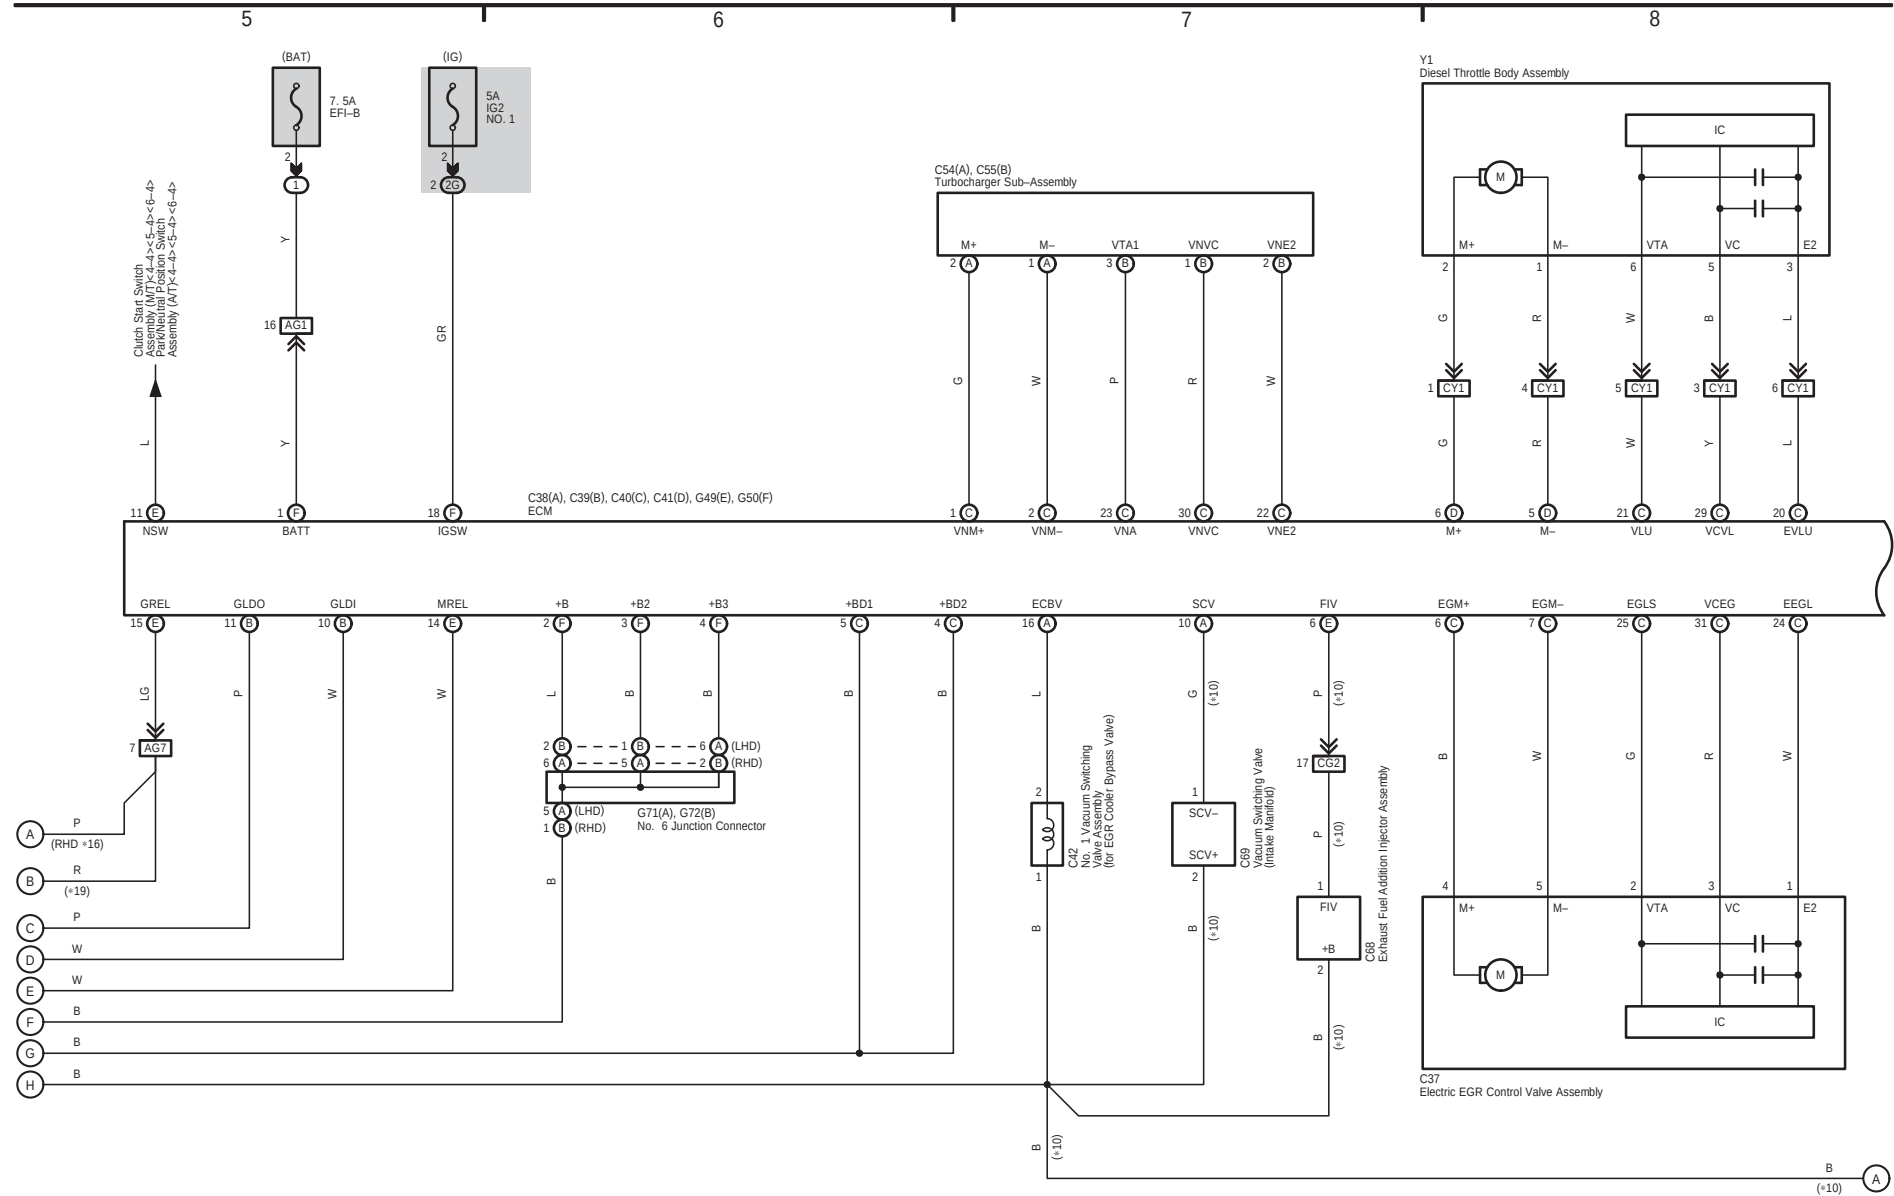


Engine Control (1GD-FTV, 2GD-FTV)

*10 : w/ Air Fuel Ratio Sensor

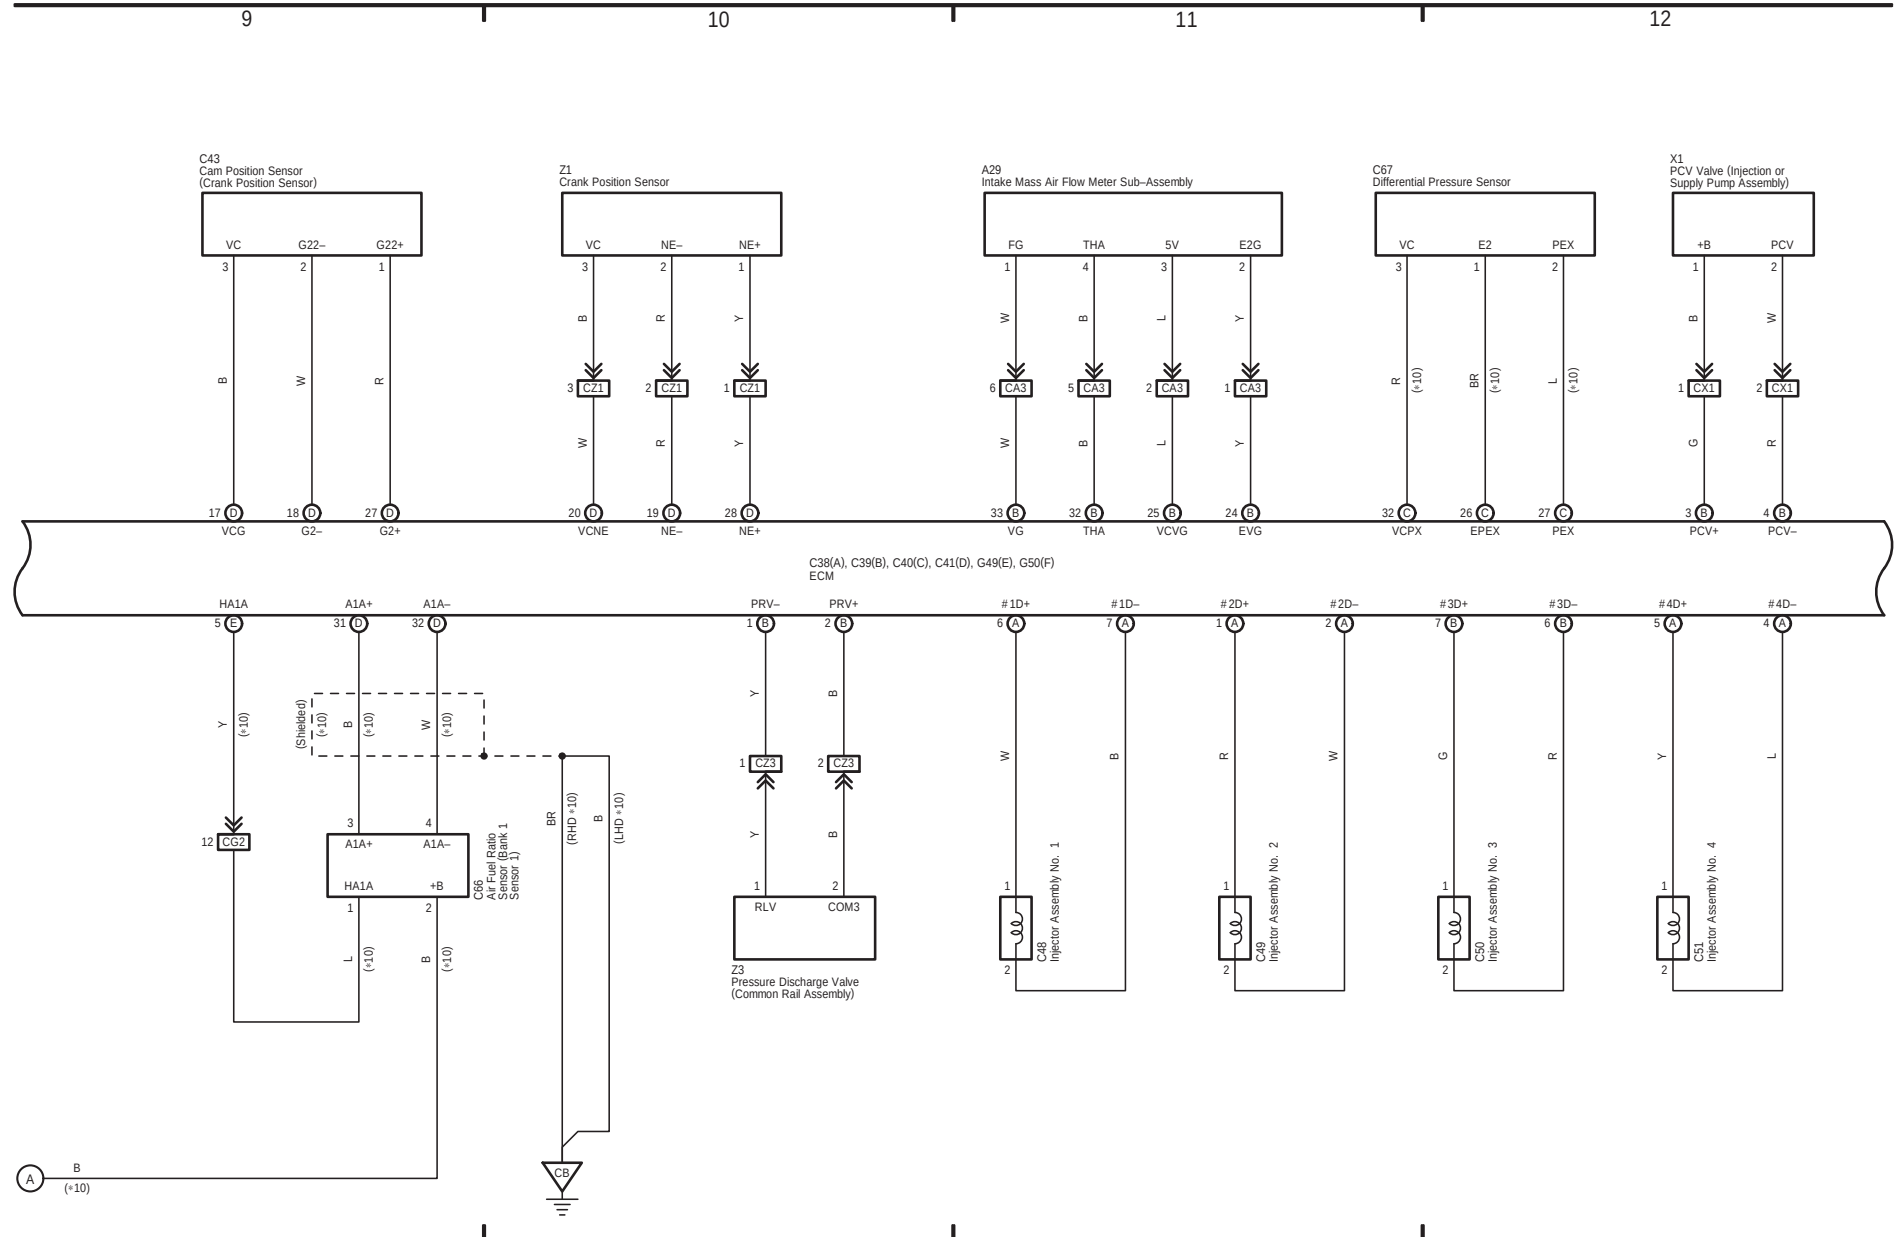

Engine Control (1GD-FTV, 2GD-FTV)

* 8 : Intelligent Manual Transmission
 *10 : w/ Air Fuel Ratio Sensor

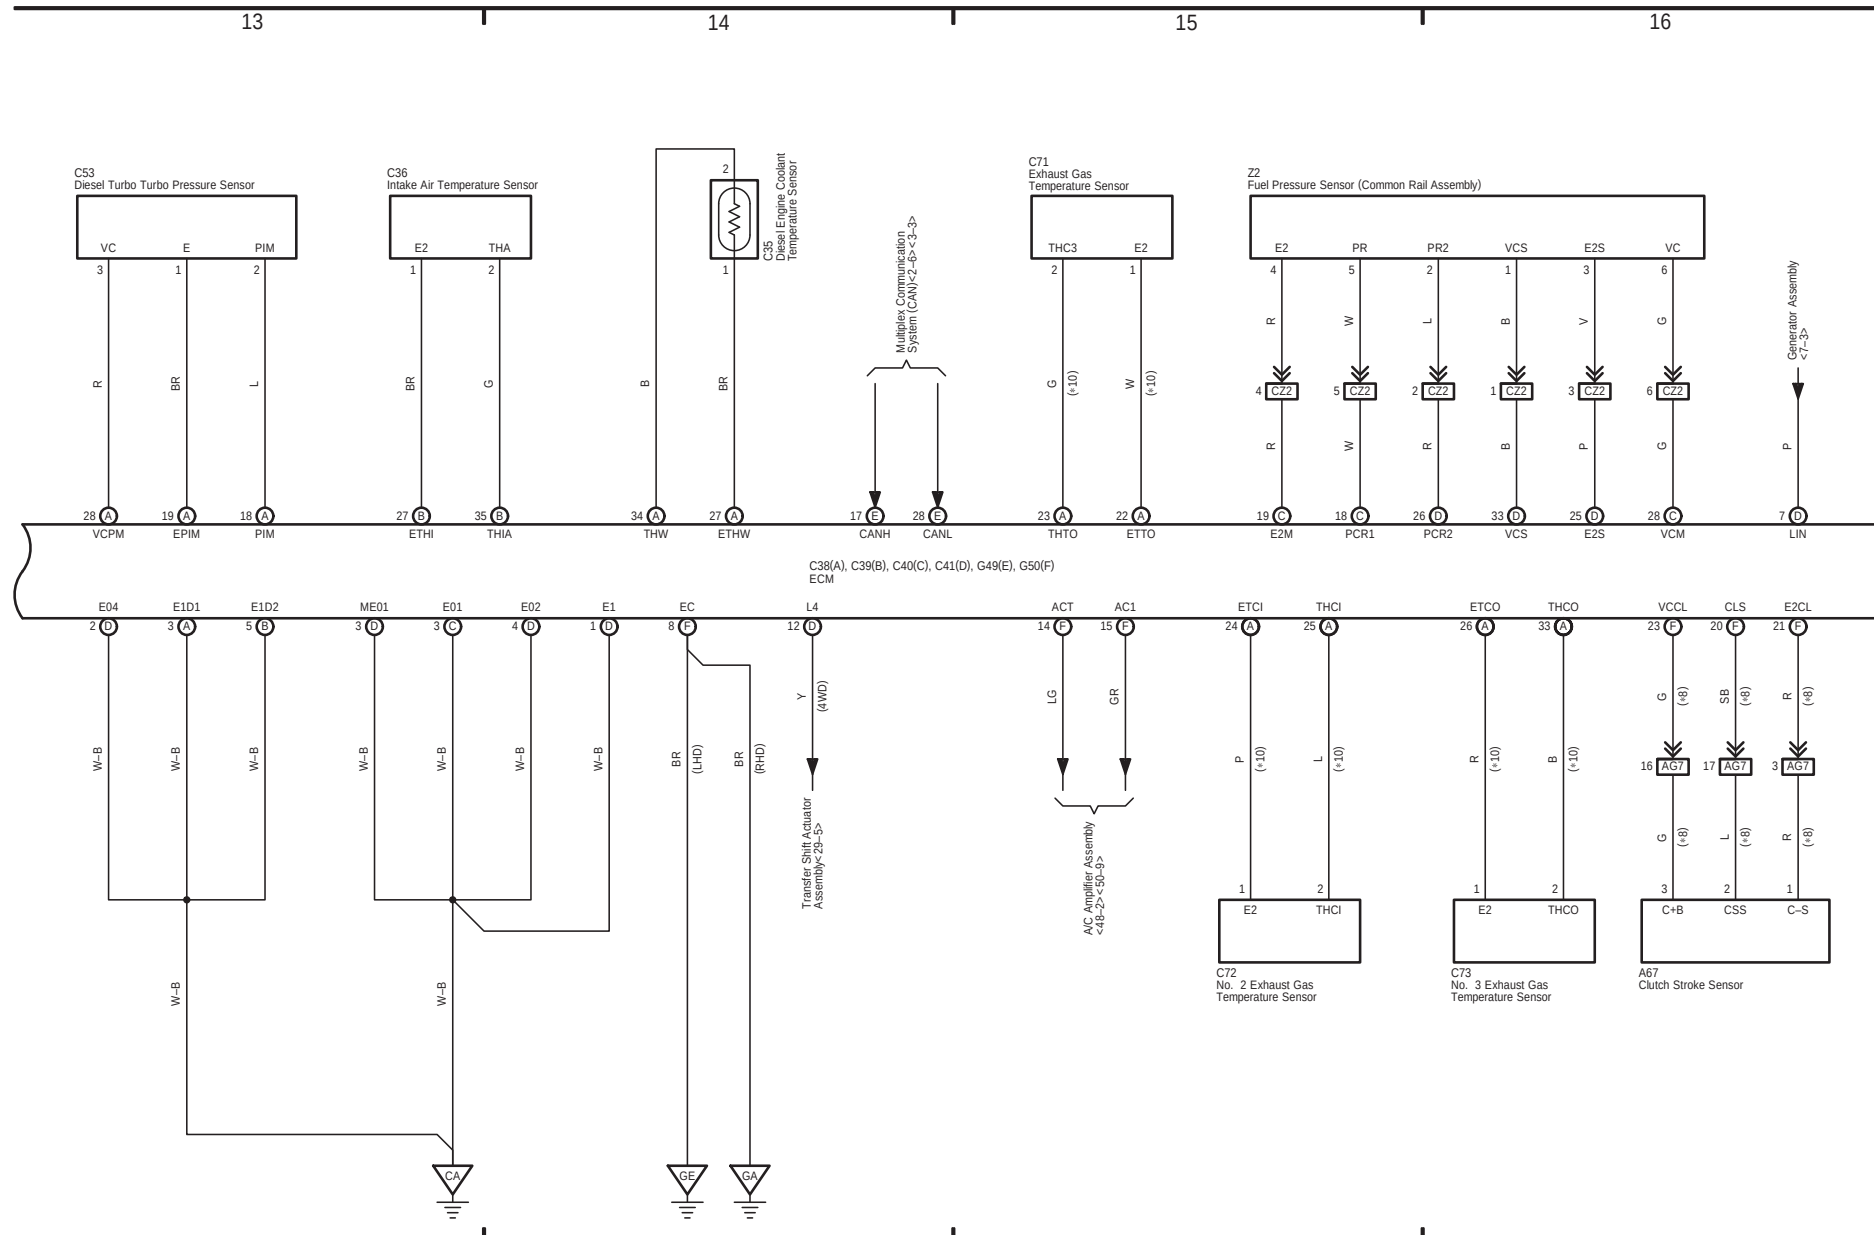

Engine Control (1GD-FTV, 2GD-FTV)


 
Cruise Control (1GD-FTV, 2GD-FTV)

17


18

19


20

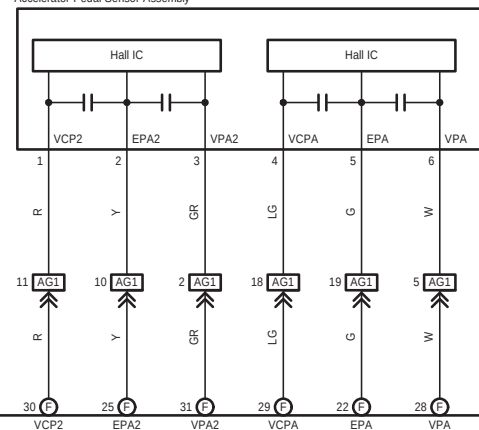A30
Accelerator Pedal Sensor AssemblyC38(A), C39(B), C40(C), C41(D), G49(E), G50(F)
ECM

- * 3 : w/ Smart Entry & Start System
- * 4 : w/o Smart Entry & Start System
- * 5 : w/ ID Code Box
- * 6 : w/o ID Code Box
- * 7 : w/ Cruise Control

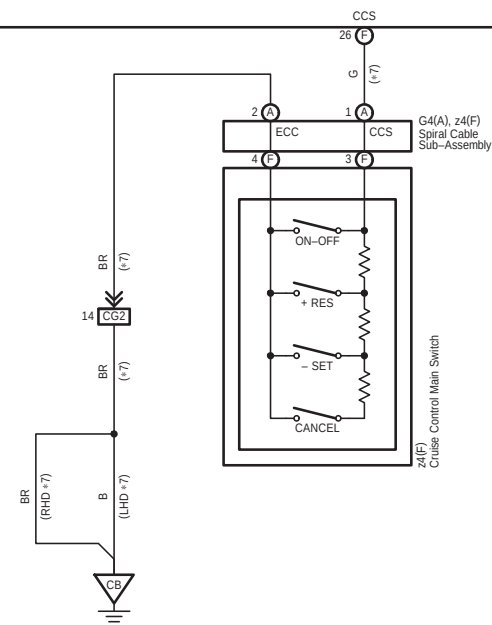
FPSW
2 (E)
W
Fuel Sedimentary Level Warning Switch
(Diesel Fuel Filter Assembly)
<4G-8><47-8>PSW
9 (E)
G
CG2
13
G
1
C24
Power Steering Oil
Pressure SwitchTC
25 (E)
R
TACH
16 (E)
V
DLC3
<14-1><14-2>

* 3 : w/ Smart Entry & Start System
* 4 : w/o Smart Entry & Start System

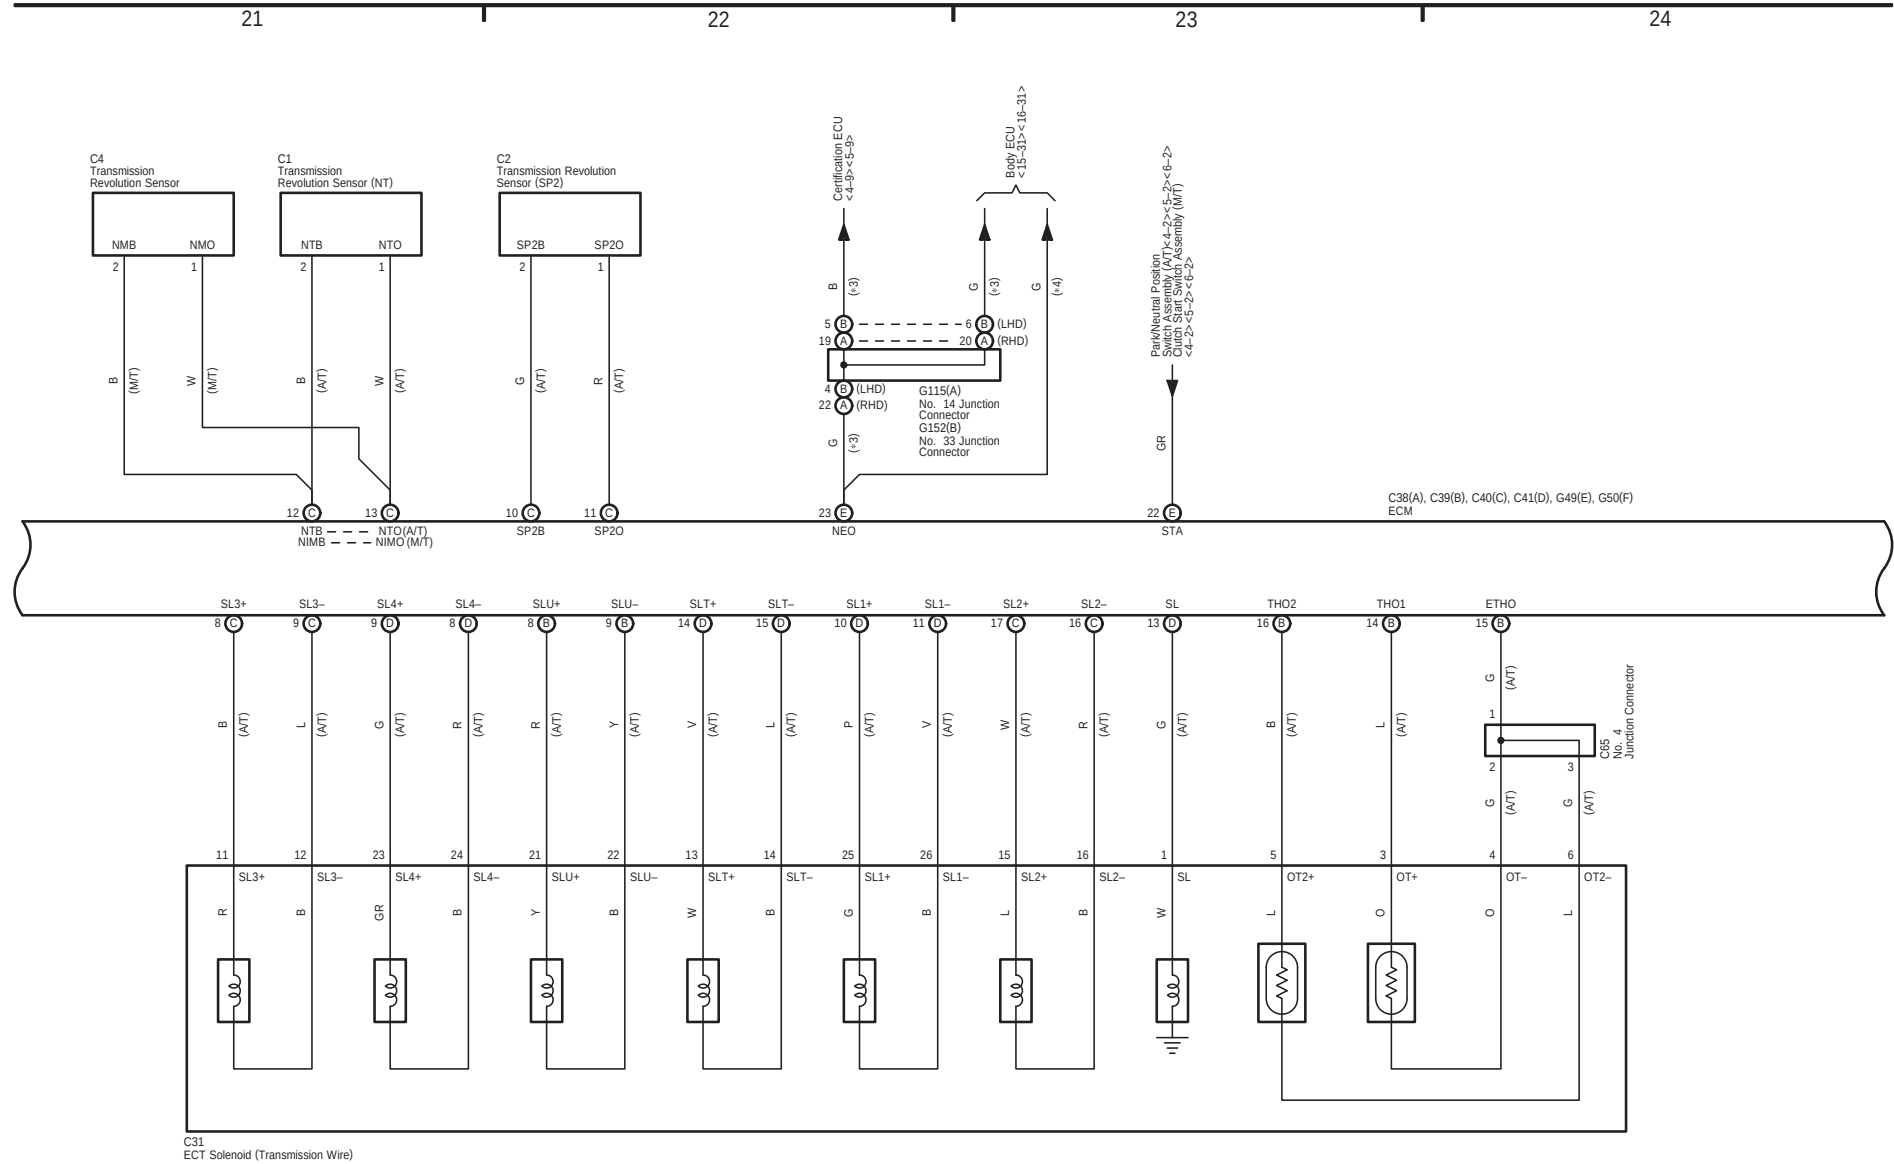


- * 8 : Intelligent Manual Transmission
- * 13 : w/o Paddle Shift
- * 14 : w/ Paddle Shift
- * 15 : Before Aug. 2017 Production
- * 16 : From Aug. 2017 Production

- *17 : 11 Speaker
- *18 : Except 11 Speaker
- *19 : *15, LHD *16
- *20 : w/ Diesel Particulate
Reduction Switch Assembly

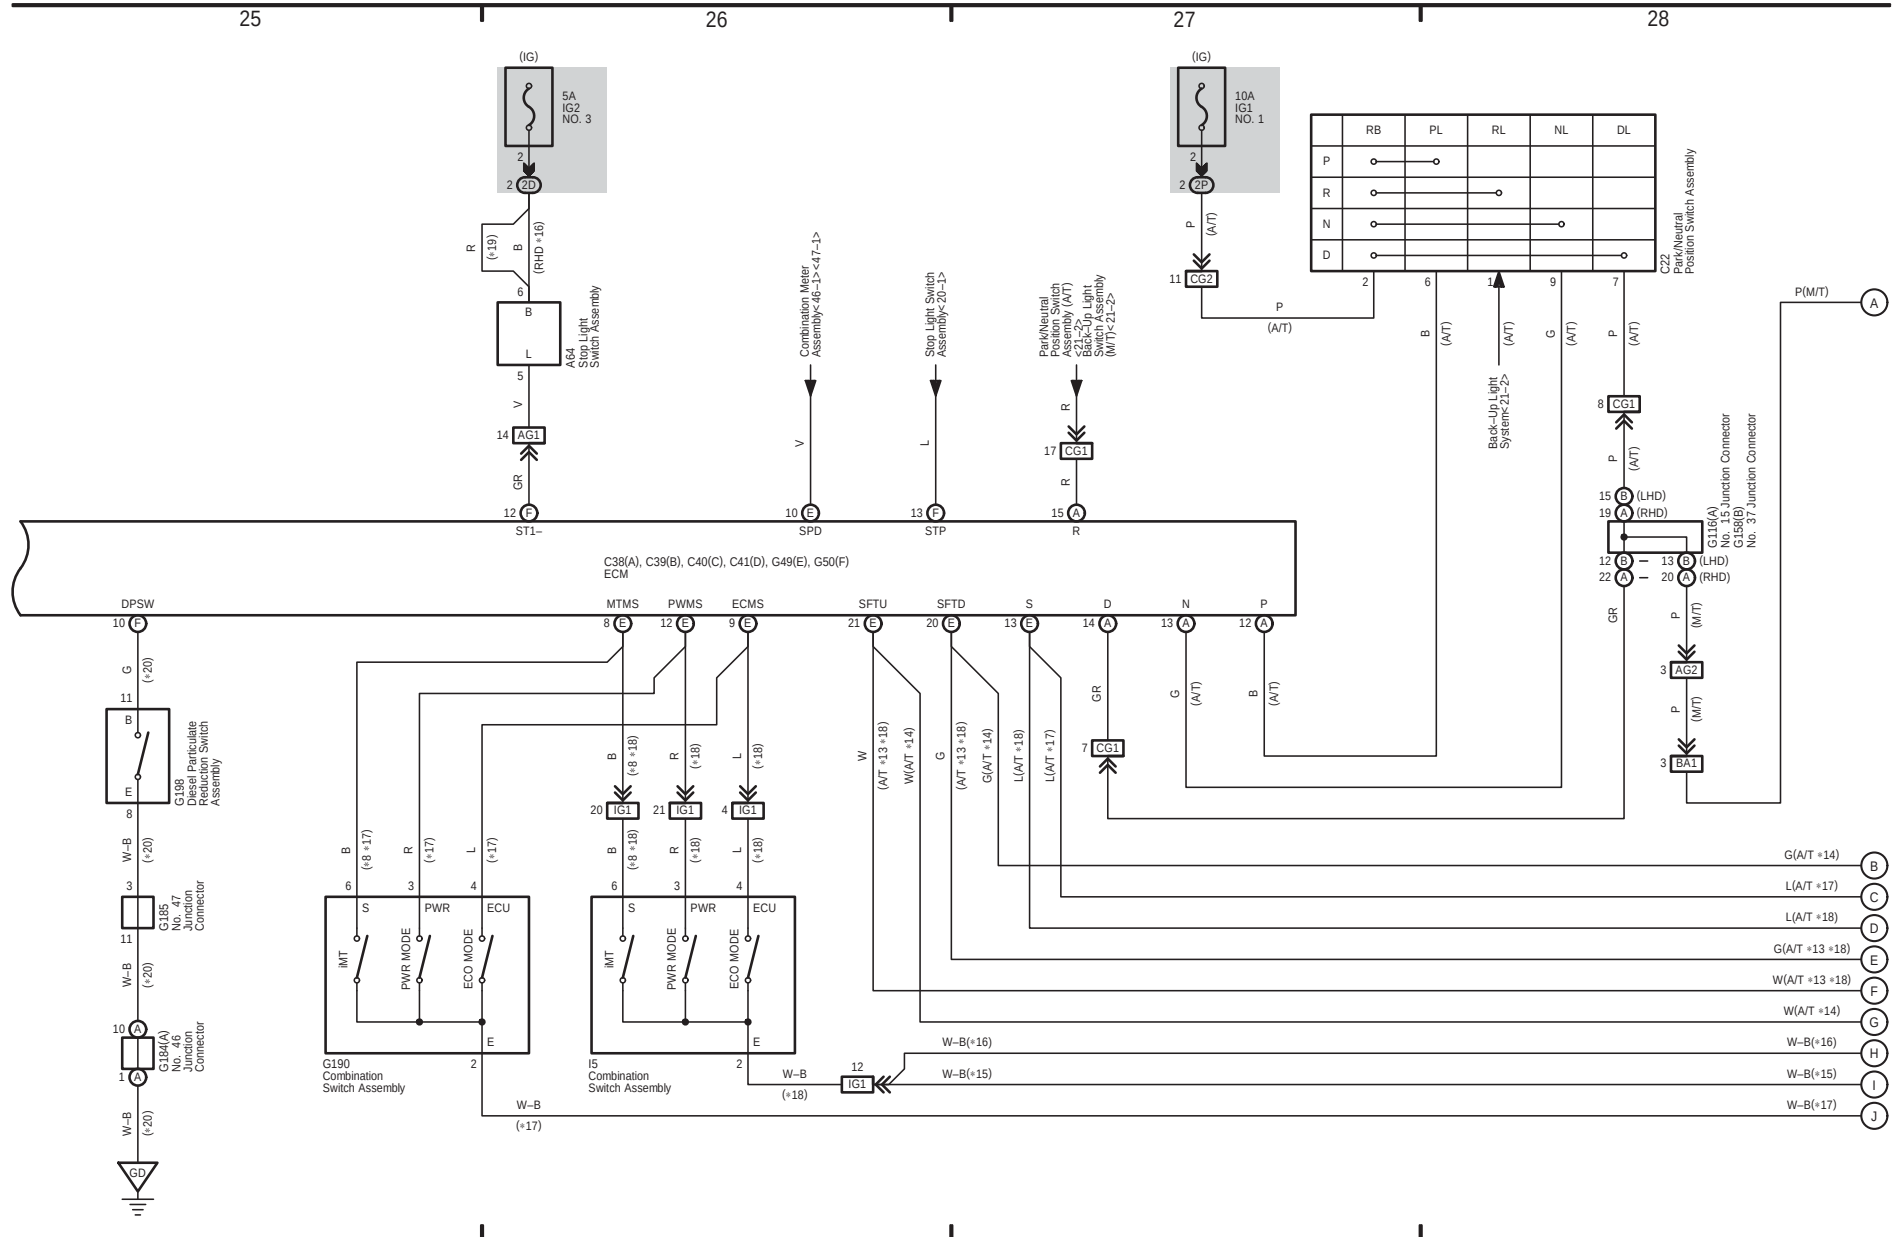

32

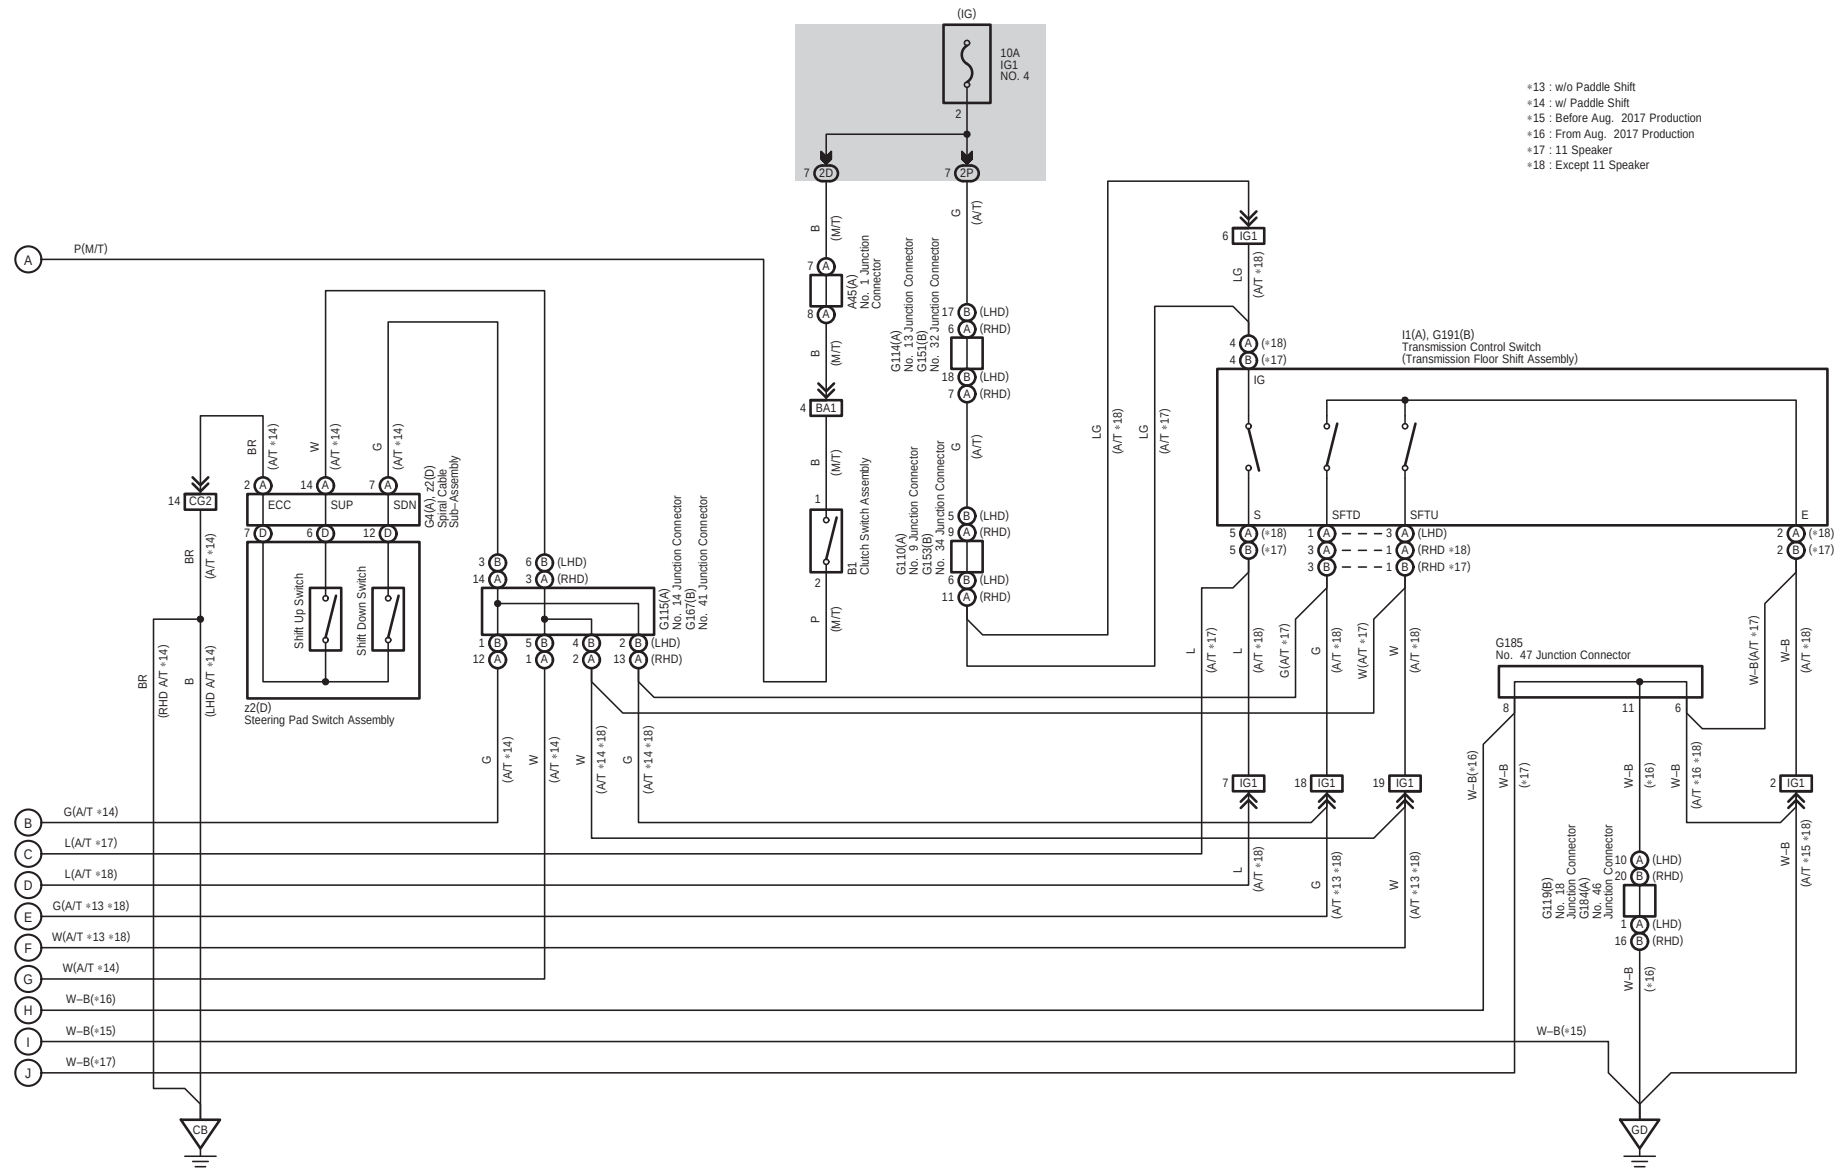

12 TOYOTA FORTUNER (Cont' d)

ECT and A/T Indicator (1GD-FTV, 2GD-FTV)

*12 : w/ TFT Display
 *15 : Before Aug. 2017 Production
 *16 : From Aug. 2017 Production

