



Immobiliser System (RHD w/ Smart Entry & Start System),
 Smart Entry & Start System (RHD), Starting (RHD w/ Smart Entry & Start System),
 Steering Lock (RHD), Wireless Door Lock Control (RHD w/ Smart Entry & Start System)

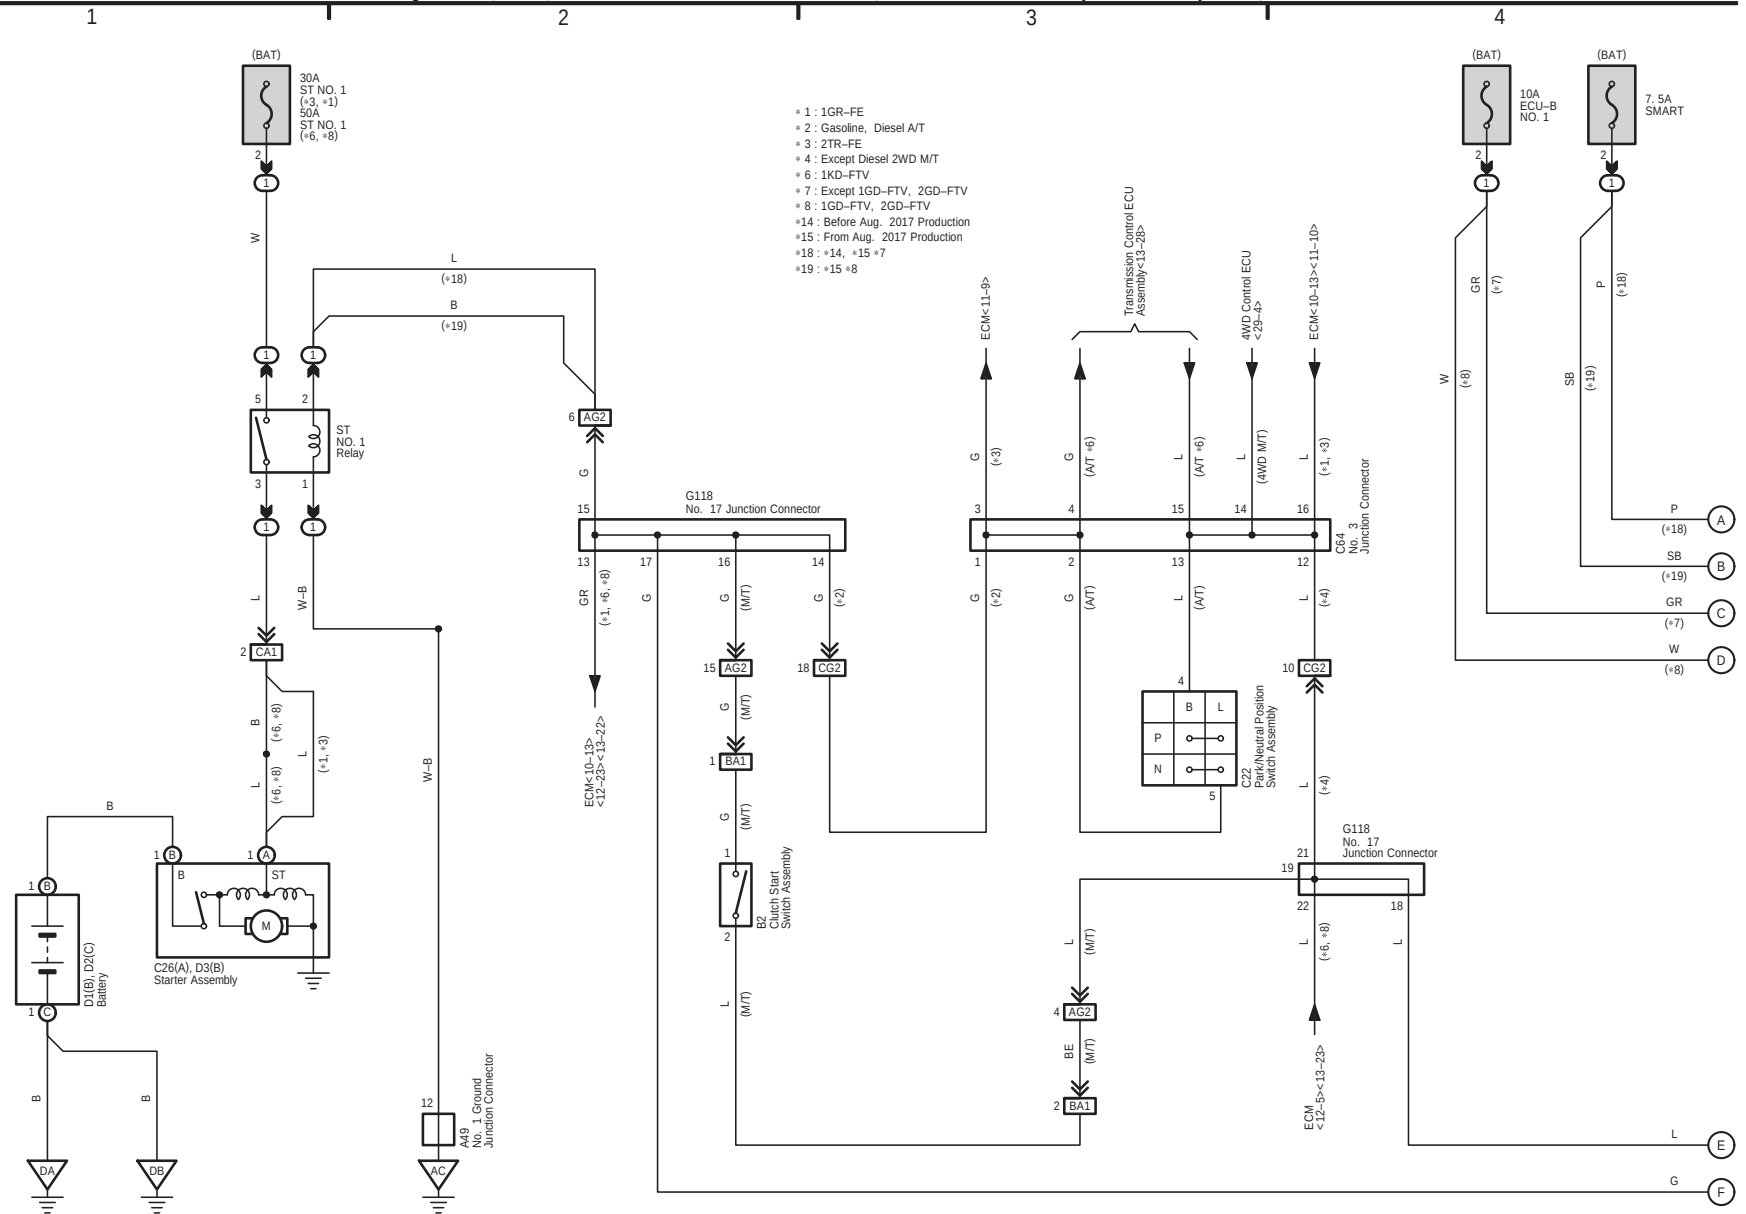

Immobiliser System (RHD w/ Smart Entry & Start System),
 Smart Entry & Start System (RHD), Starting (RHD w/ Smart Entry & Start System),
 Steering Lock (RHD), Wireless Door Lock Control (RHD w/ Smart Entry & Start System)

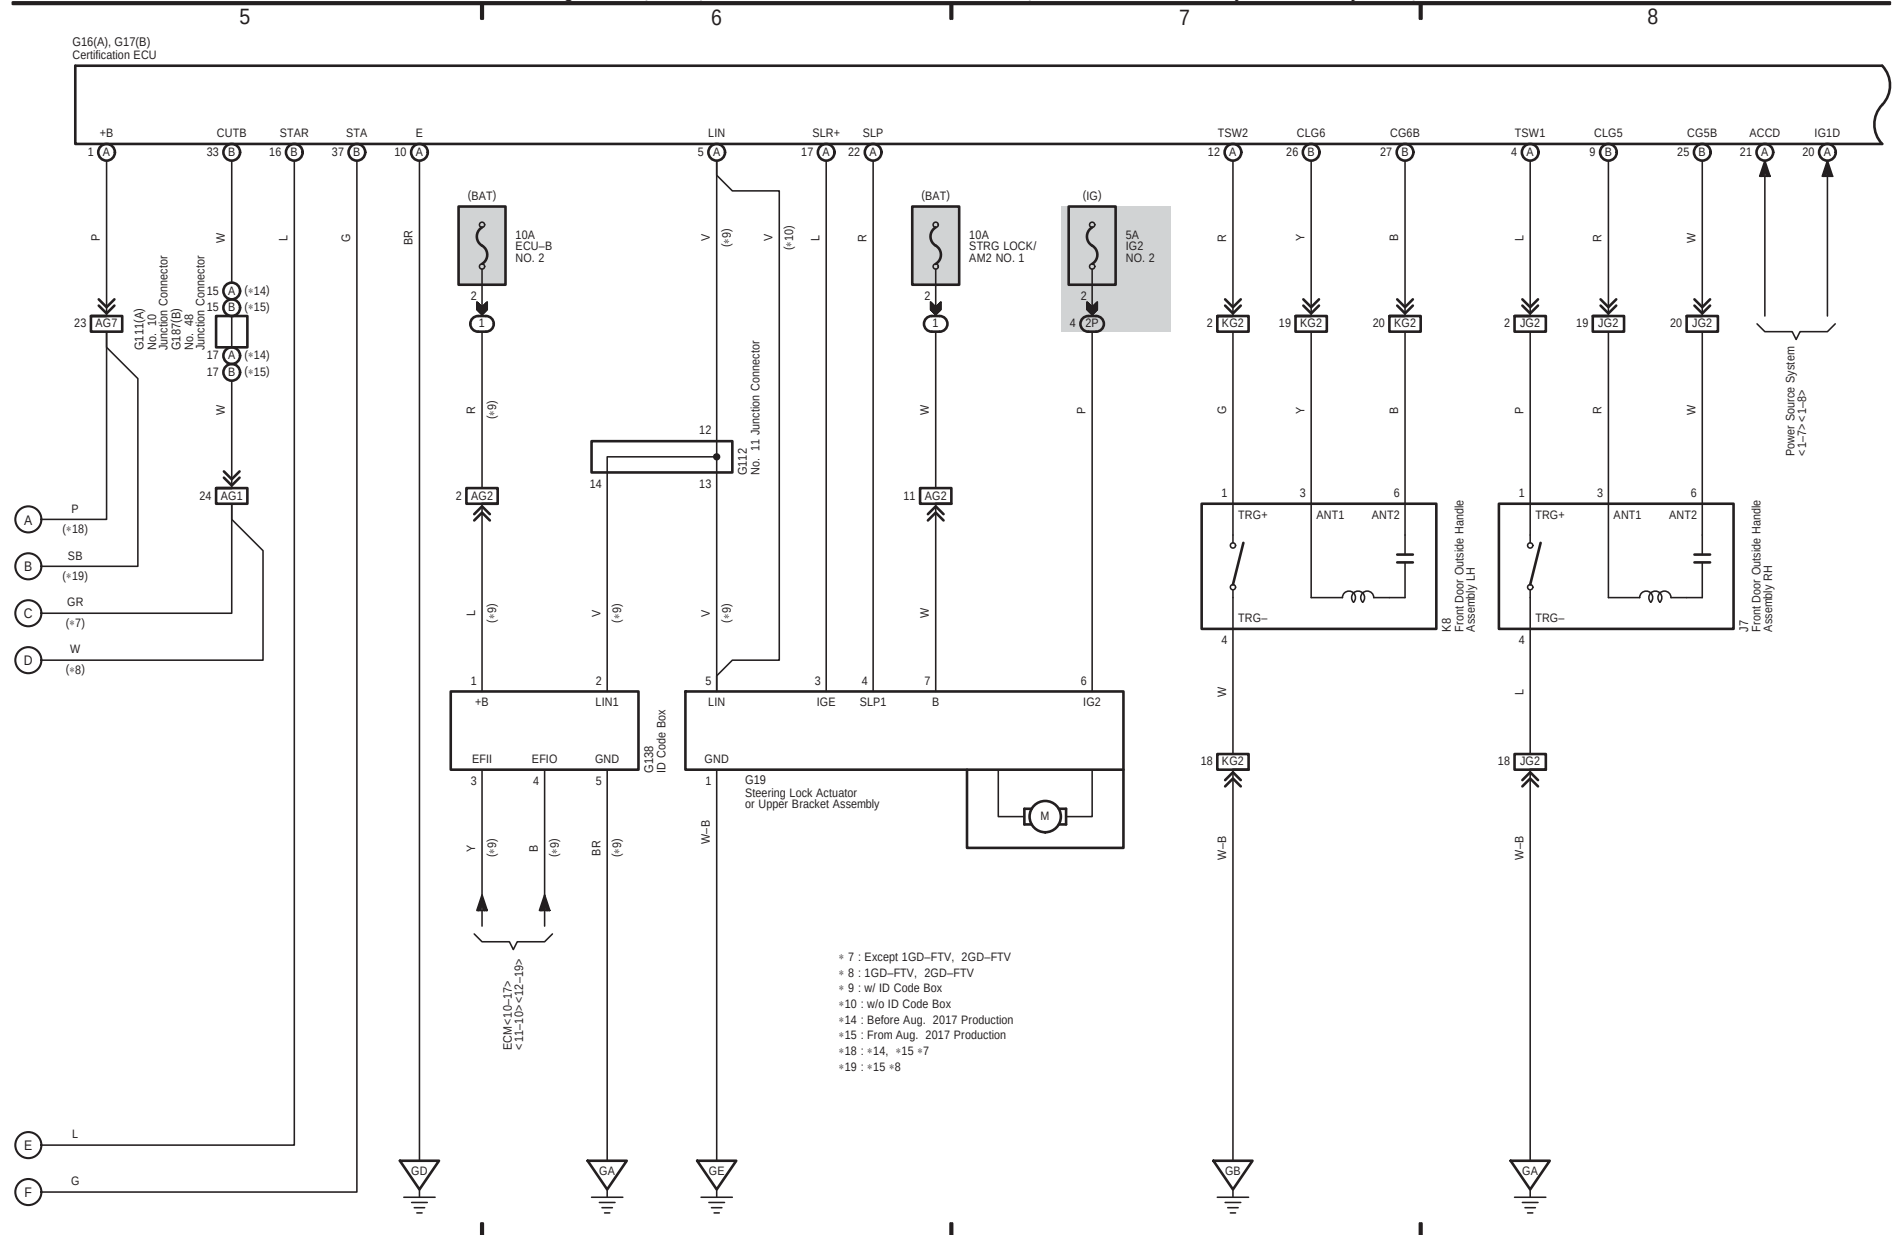

9 10 11 12

G16(A), G17(B)
Certification ECU

P 8 (A) Y (AT *16)
(AT *17)
Shift Lock Control ECU
(Transmission Floor Shift Assembly)
<41-2>

NE 6 (A) B
ECM<10-12><11-12>
<12-22><13-24>

LSWP 9 (A) L
Door Lock Assemblies
<16-40>

SPD 7 (A) V
Combination Meter
Assembly<47-1>

STP1 11 (A) L
Stop Light Switch
Assembly<20-2>

TAIL 10 (B) G
TAIL Relay
<18-12>

RDA3 13 (B) W
Body ECU
<16-41>

PRG3 36 (B) V

RDAS 22 (B) L
G25
Smart Door Control
Receiver Assembly

RCO 3 (B) G

CSEL 21 (B) P
BR
GND

VC5 20 (B) LG
G45
Engine Switch

SWIL 19 (A) G

TXCT 2 (B) R

CODE 1 (B) Y

AGND 24 (A) SB

SSW2 16 (A) Power Source
System<1-8>

SSW1 18 (A)

TSW5 14 (A) V (+13)
Body ECU
<16-17>

TSW6 23 (A) BE

CLG2 6 (B) W
N9
No. 2 Indoor
Electrical Key
Antenna Assembly

CG2B 23 (B) B

GN3 21 (GN3) V
V10
Back Door Opener
Switch Assembly

GN3 20 (GN3) V

GN2 2 (GN2) W

GN2 3 (GN2) B

UL 3
Unlock

L 1
Lock

m 2
W-B

VA

GA

*11 : w/o Smart Entry & Start System
*13 : w/ Smart Entry & Start System
*16 : Except 11 Speaker
*17 : 11 Speaker

- *11 : w/o Smart Entry & Start System
- *13 : w/ Smart Entry & Start System
- *16 : Except 11 Speaker
- *17 : 11 Speaker

5 TOYOTA FORTUNER (Cont' d)

Immobiliser System (RHD w/ Smart Entry & Start System),
Smart Entry & Start System (RHD), Starting (RHD w/ Smart Entry & Start System),
Steering Lock (RHD), Wireless Door Lock Control (RHD w/ Smart Entry & Start System)

