

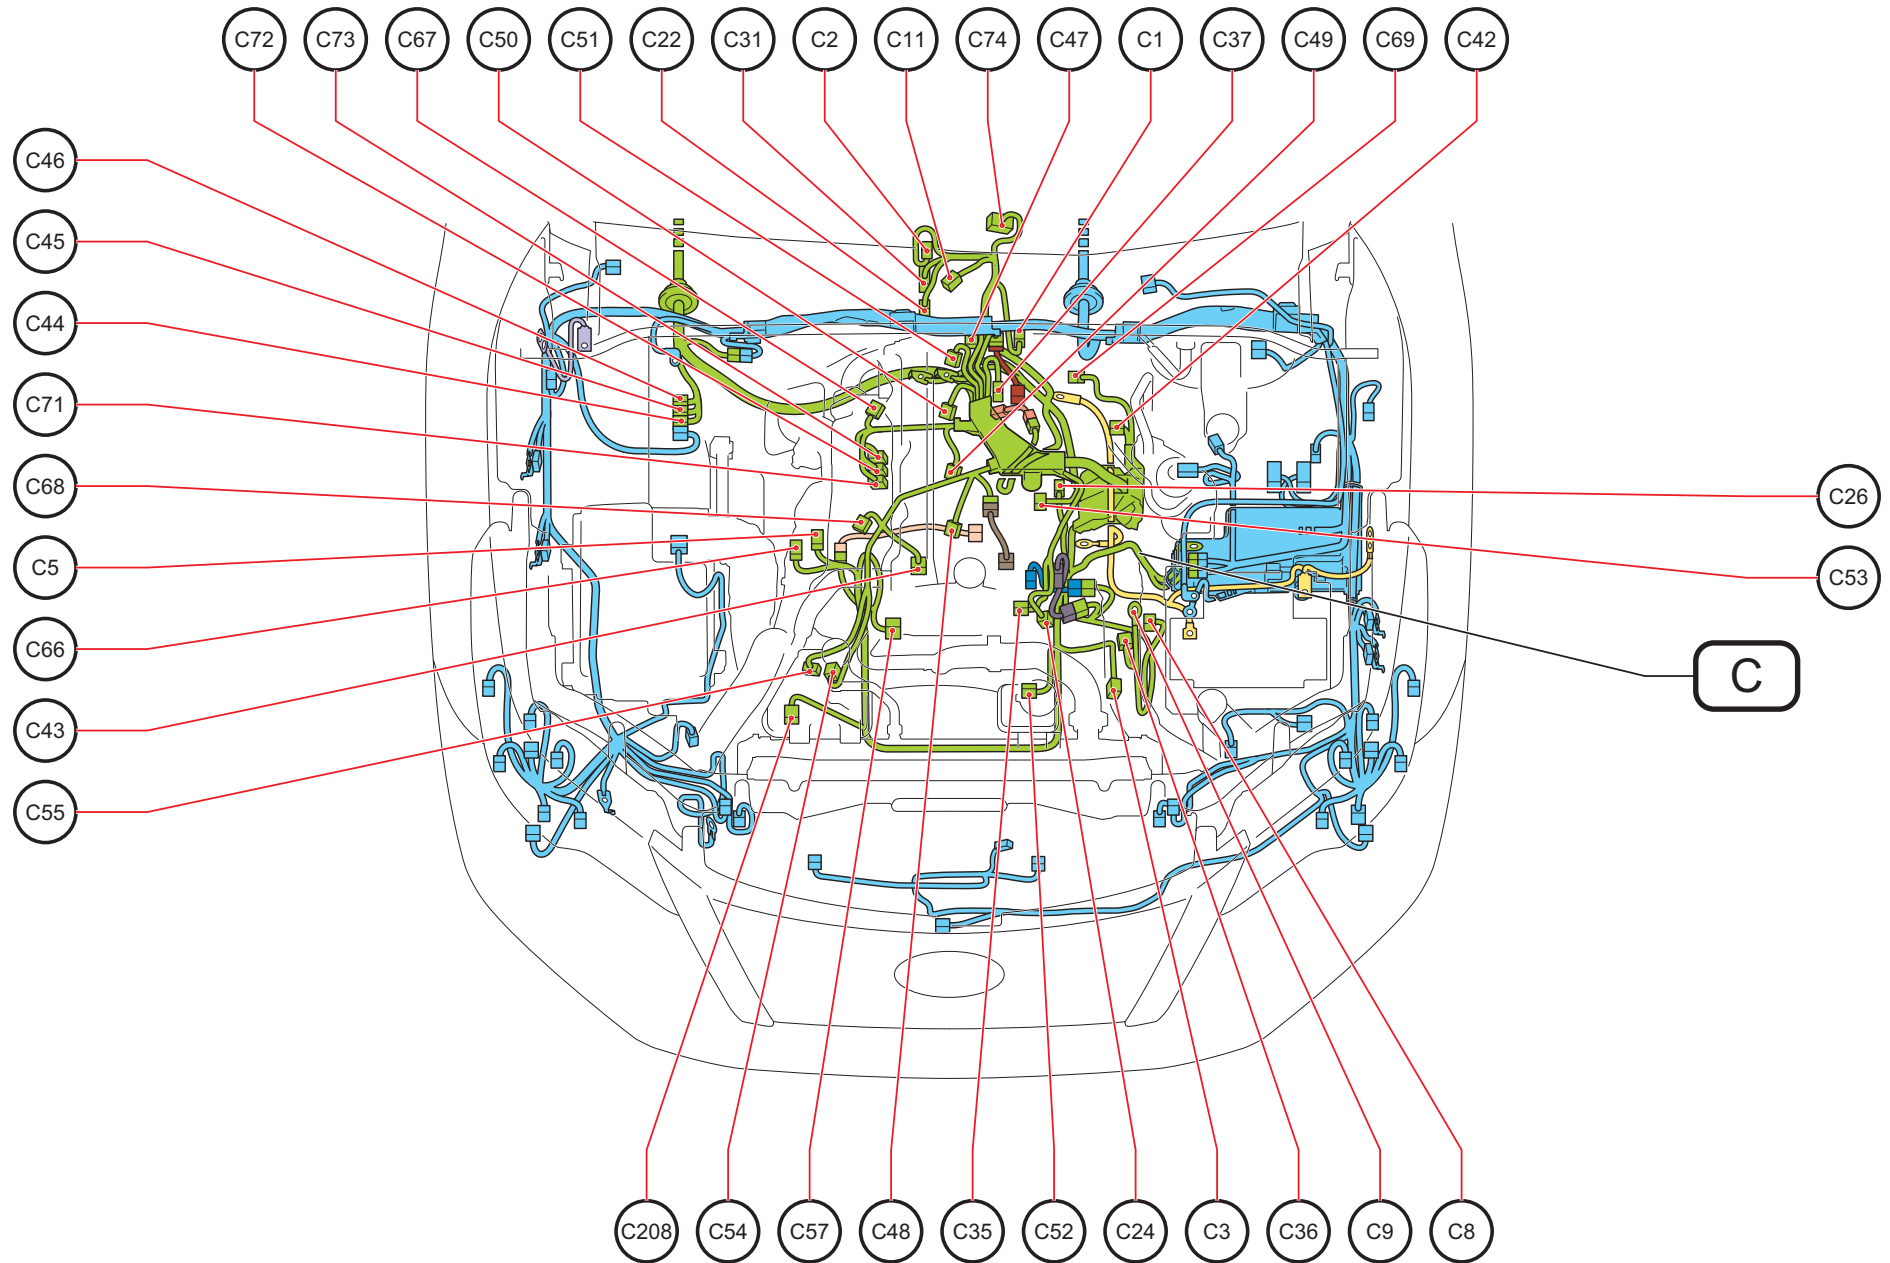
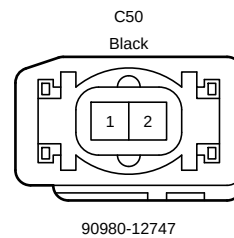
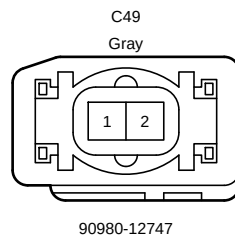
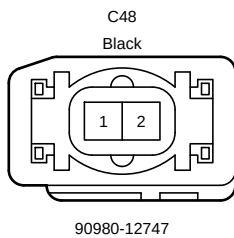
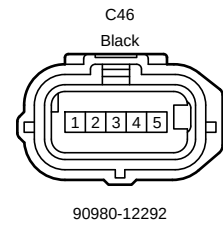
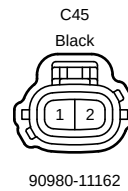
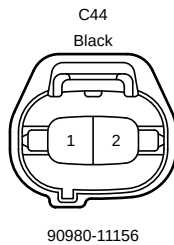
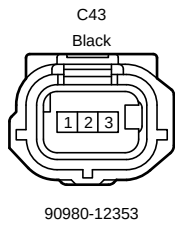
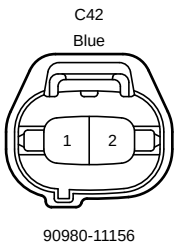
 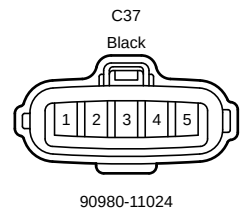
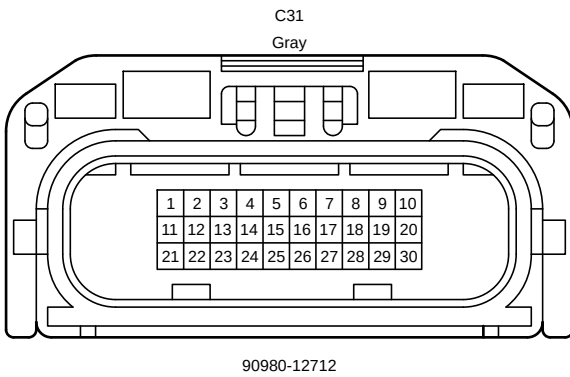

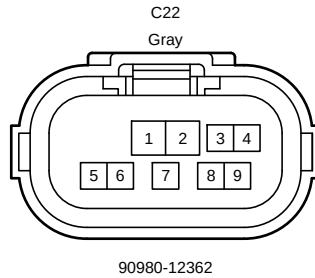
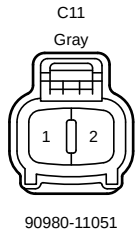
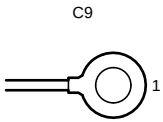
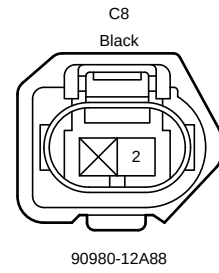


Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

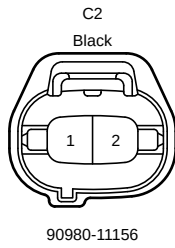

|      |                                                                     |
|------|---------------------------------------------------------------------|
| C1   | Transmission Revolution Sensor (NT)                                 |
| C2   | Transmission Revolution Sensor (SP2)                                |
| C3   | Compressor Assembly                                                 |
| C5   | Engine Oil Pressure Switch Assembly                                 |
| C8   | Generator Assembly                                                  |
| C9   | Generator Assembly                                                  |
| C11  | Back-Up Light Switch Assembly                                       |
| C22  | Park/Neutral Position Switch Assembly                               |
| C24  | Power Steering Oil Pressure Switch                                  |
| C26  | Starter Assembly                                                    |
| C31  | ECT Solenoid (Transmission Wire)                                    |
| C35  | Diesel Engine Coolant Temperature Sensor                            |
| C36  | Intake Air Temperature Sensor                                       |
| C37  | Electric EGR Control Valve Assembly                                 |
| C42  | No. 1 Vacuum Switching Valve Assembly (for EGR Cooler Bypass Valve) |
| C43  | Cam Position Sensor (Crank Position Sensor)                         |
| C44  | Glow Plug Controller                                                |
| C45  | Glow Plug Controller                                                |
| C46  | Glow Plug Controller                                                |
| C47  | Glow Plug Assembly                                                  |
| C48  | Injector Assembly No. 1                                             |
| C49  | Injector Assembly No. 2                                             |
| C50  | Injector Assembly No. 3                                             |
| C51  | Injector Assembly No. 4                                             |
| C52  | Engine Oil Level Sensor                                             |
| C53  | Diesel Turbo Turbo Pressure Sensor                                  |
| C54  | Turbocharger Sub-Assembly                                           |
| C55  | Turbocharger Sub-Assembly                                           |
| C57  | Differential Vacuum Actuator Assembly                               |
| C66  | Air Fuel Ratio Sensor (Bank 1 Sensor 1)                             |
| C67  | Differential Pressure Sensor                                        |
| C68  | Exhaust Fuel Addition Injector Assembly                             |
| C69  | Vacuum Switching Valve (Intake Manifold)                            |
| C71  | Exhaust Gas Temperature Sensor                                      |
| C72  | No. 2 Exhaust Gas Temperature Sensor                                |
| C73  | No. 3 Exhaust Gas Temperature Sensor                                |
| C74  | Transfer Shift Actuator Assembly                                    |
| C208 | Viscous Heater with Magnet Clutch Assembly                          |

# Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

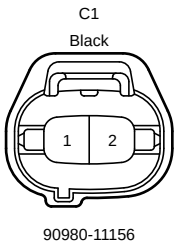

Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

