


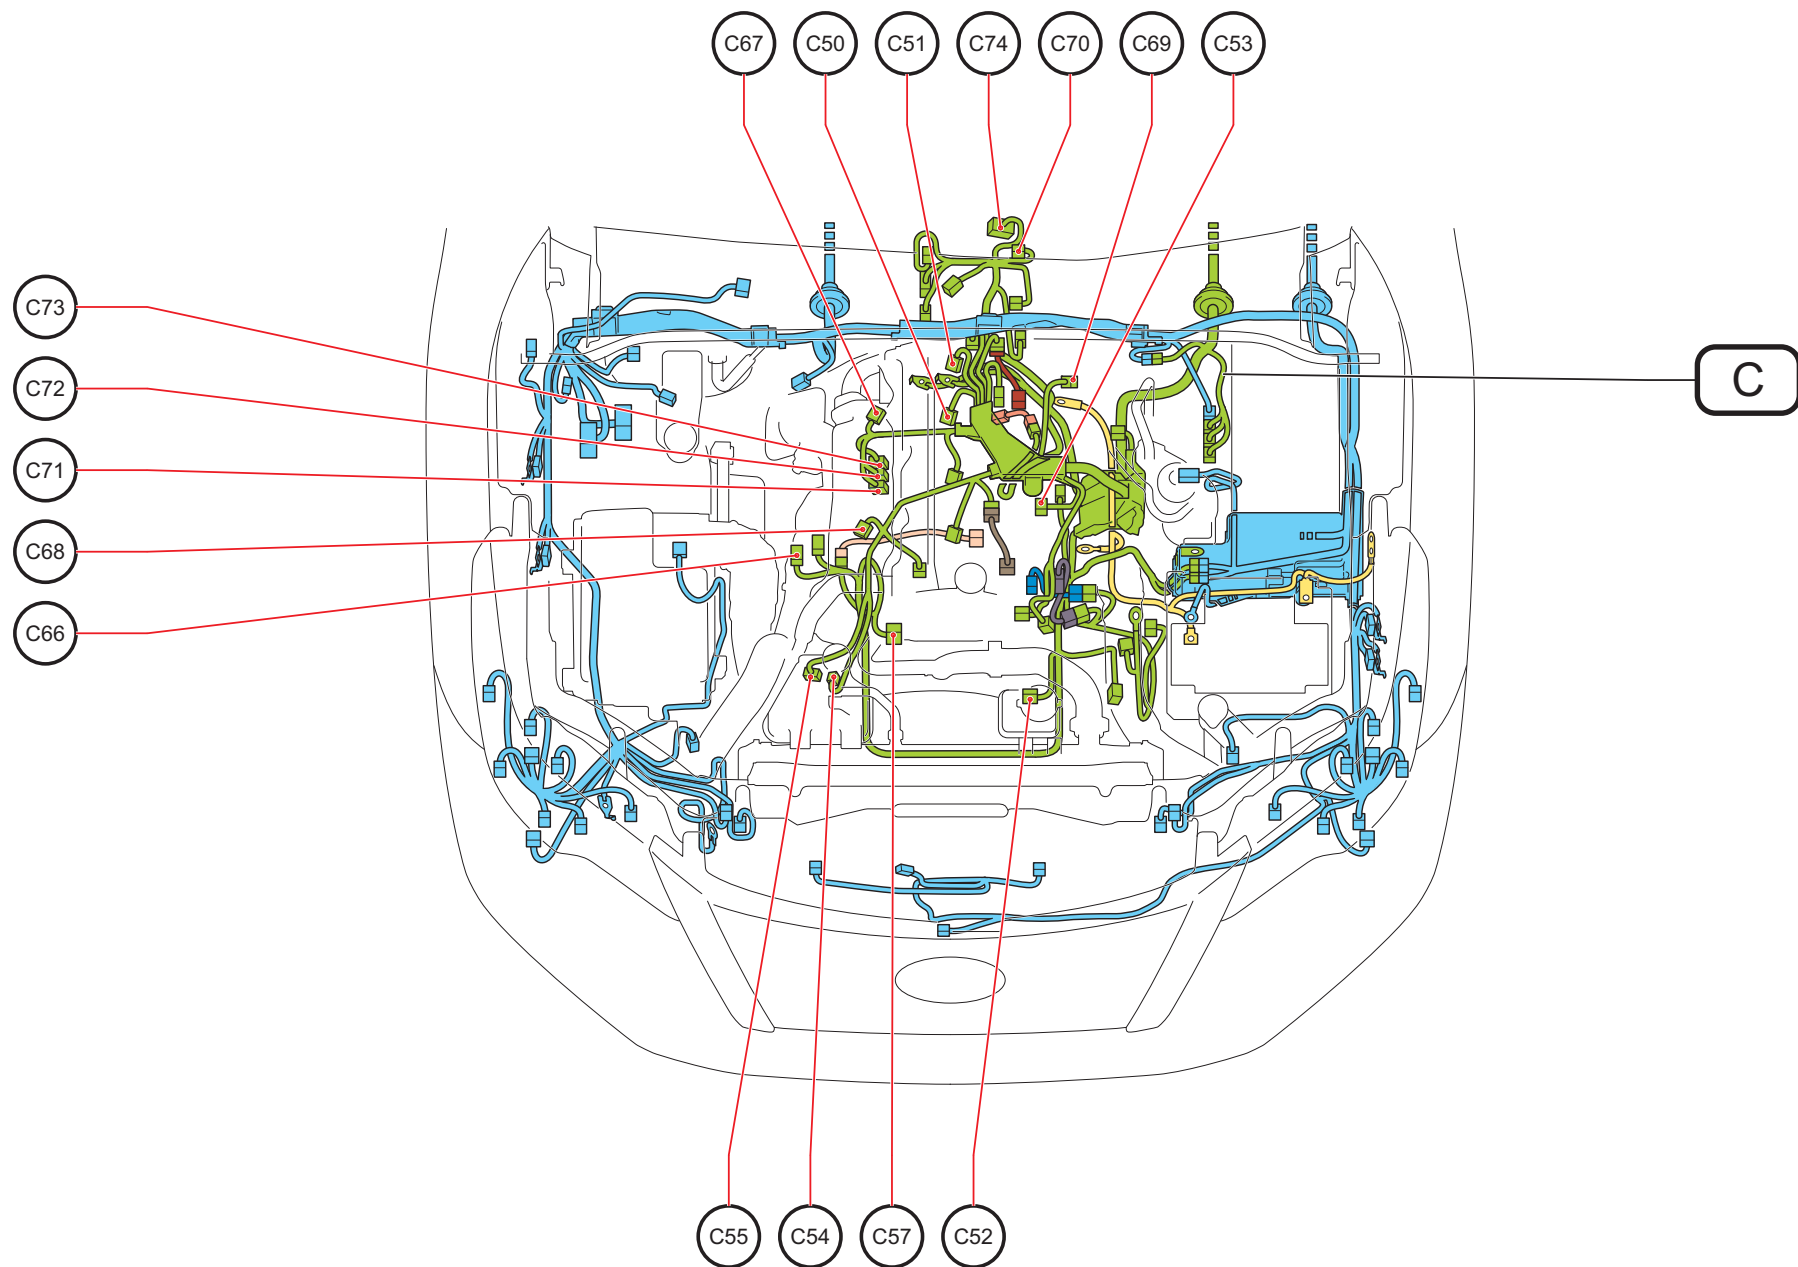

C50	Injector Assembly No. 3
C51	Injector Assembly No. 4
C52	Engine Oil Level Sensor
C53	Diesel Turbo Turbo Pressure Sensor
C54	Turbocharger Sub-Assembly
C55	Turbocharger Sub-Assembly
C57	Differential Vacuum Actuator Assembly
C66	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C67	Differential Pressure Sensor
C68	Exhaust Fuel Addition Injector Assembly
C69	Vacuum Switching Valve (Intake Manifold)
C70	Neutral Position Switch
C71	Exhaust Gas Temperature Sensor
C72	No. 2 Exhaust Gas Temperature Sensor
C73	No. 3 Exhaust Gas Temperature Sensor
C74	Transfer Shift Actuator Assembly

Position of Parts in Engine Compartment (RHD 1GD-FTV, 2GD-FTV)

