

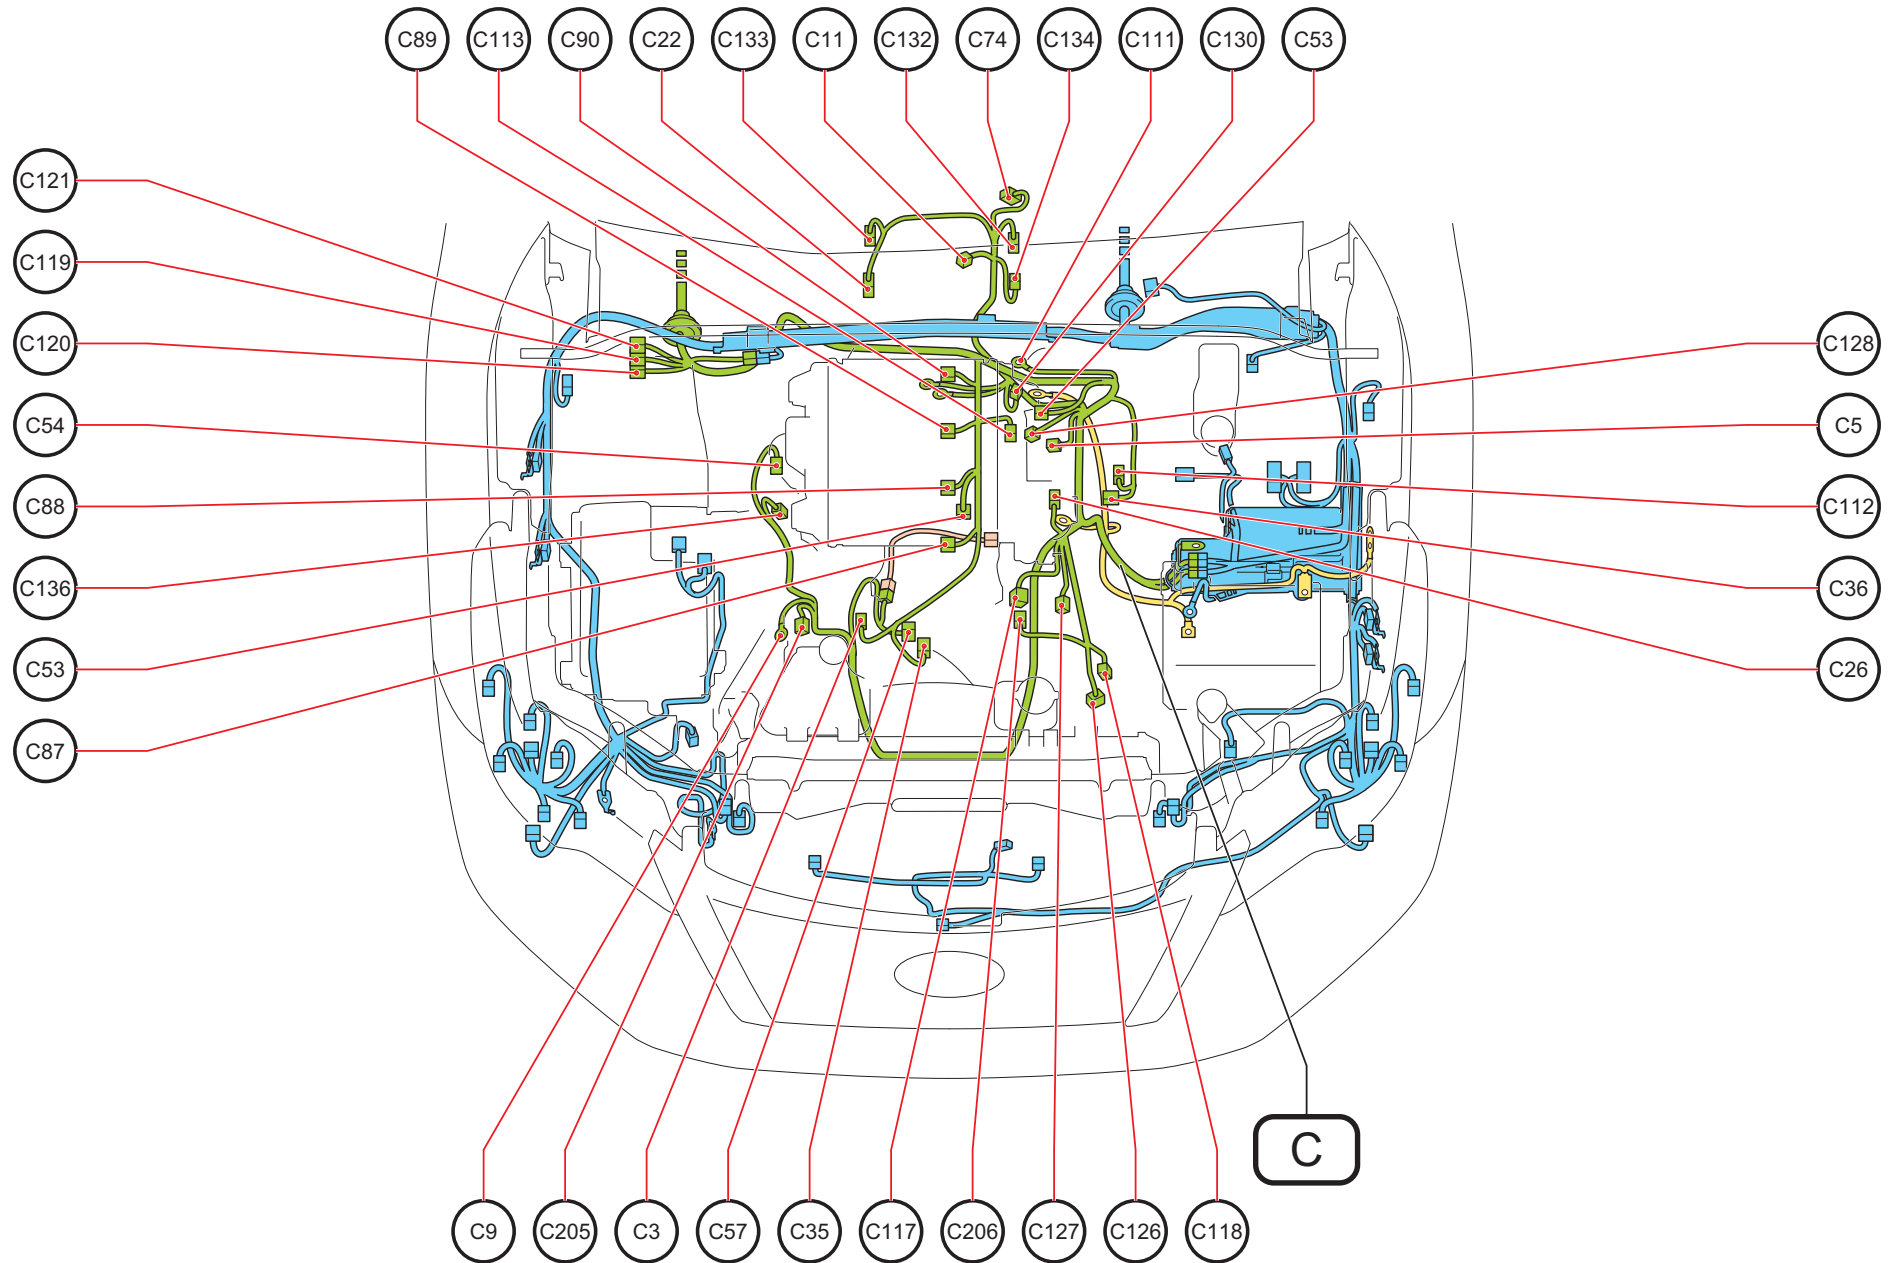
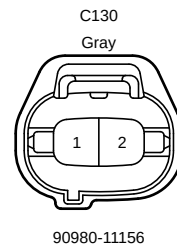
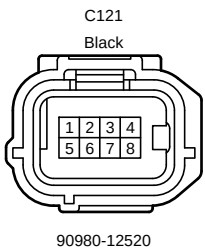
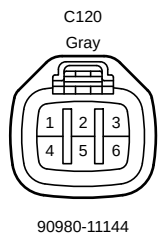
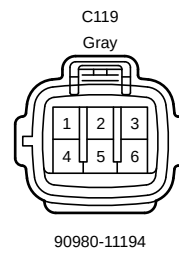
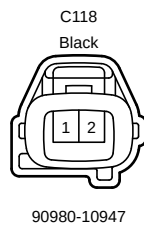
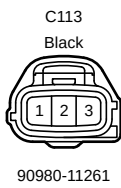
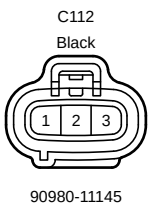
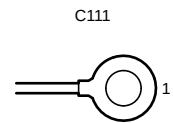
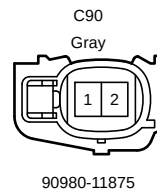
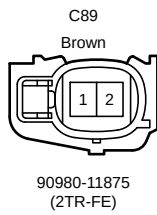
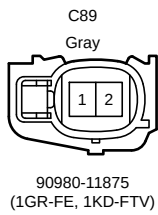
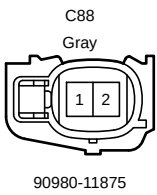
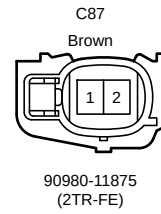
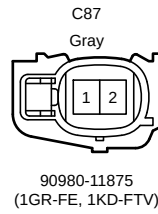
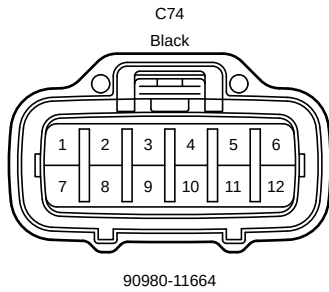
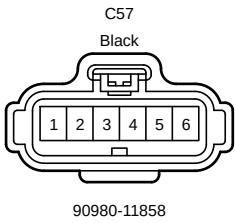
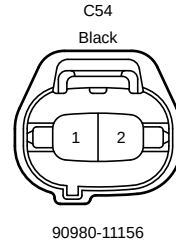
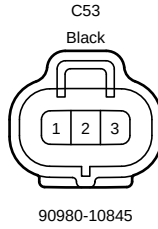
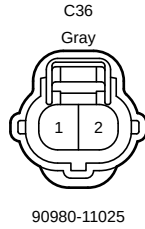
 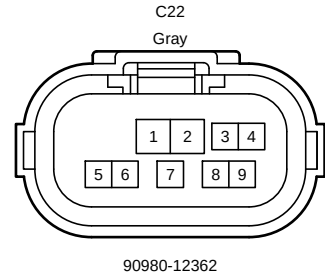


Position of Parts in Engine Compartment (LHD 1KD-FTV, 2KD-FTV)

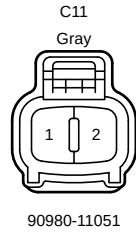

C3	Compressor Assembly
C5	Engine Oil Pressure Switch Assembly
C9	Generator Assembly
C11	Back-Up Light Switch Assembly
C22	Park/Neutral Position Switch Assembly
C26	Starter Assembly
C35	Diesel Engine Coolant Temperature Sensor
C36	Intake Air Temperature Sensor
C53	Diesel Turbo Turbo Pressure Sensor
C54	Turbocharger Sub-Assembly
C57	Differential Vacuum Actuator Assembly
C74	Transfer Shift Actuator Assembly
C87	Fuel Injector Assembly No. 1
C88	Fuel Injector Assembly No. 2
C89	Fuel Injector Assembly No. 3
C90	Fuel Injector Assembly No. 4
C111	Glow Plug Assembly
C112	Diesel Throttle Body Assembly
C113	Diesel Throttle Body Assembly
C117	Fuel Temperature Sensor
C118	Cam Position Sensor (No. 2 Crank Position Sensor)
C119	Injector Driver
C120	Injector Driver
C121	Injector Driver
C126	Crank Position Sensor
C127	Suction Control Valve Kit
C128	Pressure Discharge Valve Assembly (Common Rail Assembly)
C130	Vacuum Switching Valve (Intake Manifold)
C132	ECT Solenoid (Transmission Wire)
C133	Transmission Revolution Sensor (SP2)
C134	Transmission Revolution Sensor (NT)
C136	Turbocharger Sub-Assembly
C205	Generator Assembly
C206	Fuel Pressure Sensor (Common Rail Assembly)

Position of Parts in Engine Compartment (LHD 1KD-FTV, 2KD-FTV)



Position of Parts in Engine Compartment (LHD 1KD-FTV, 2KD-FTV)

