

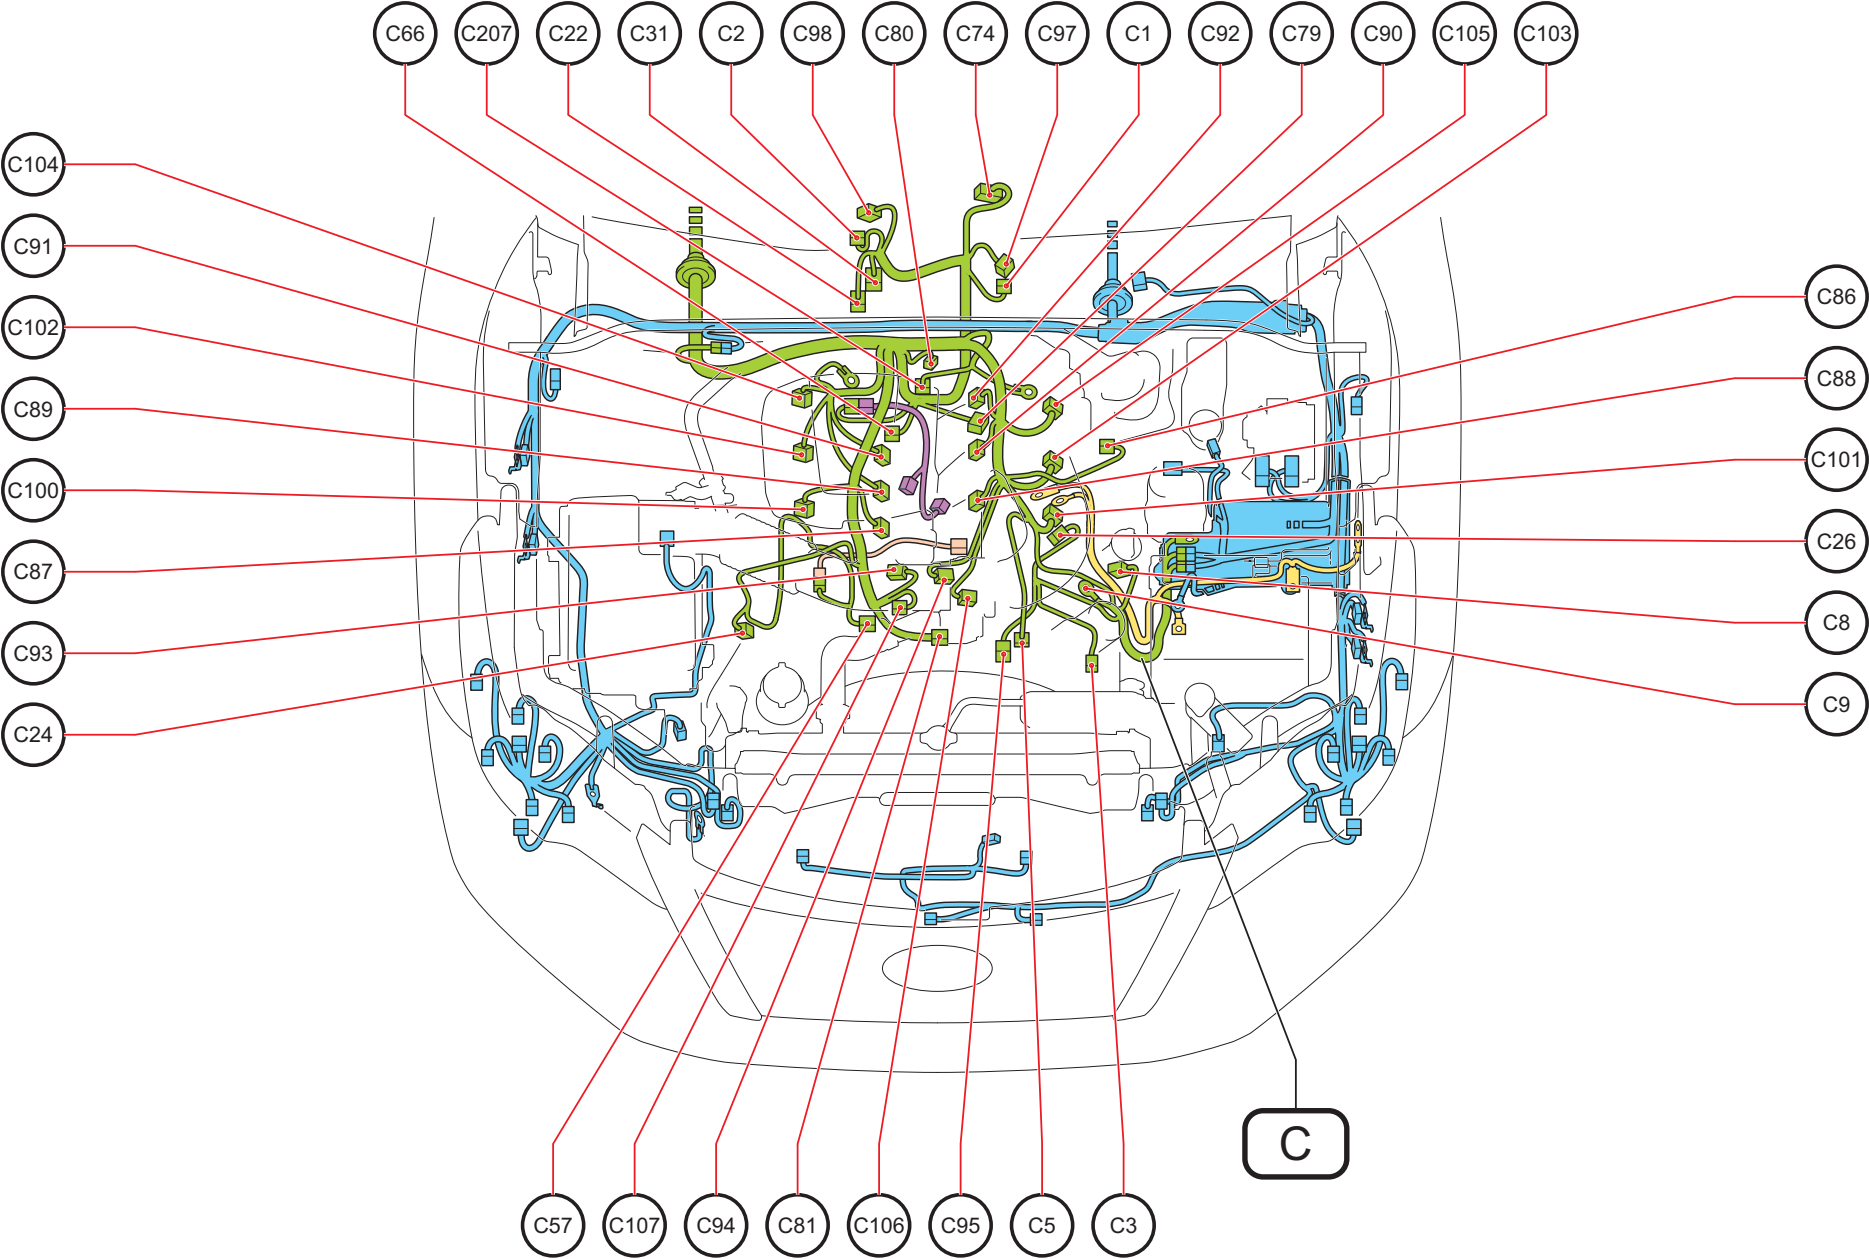
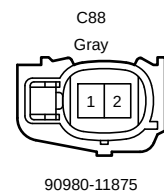
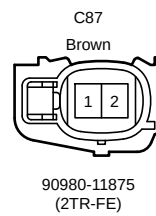
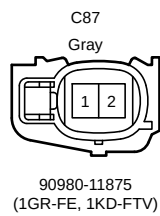
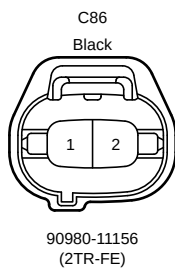
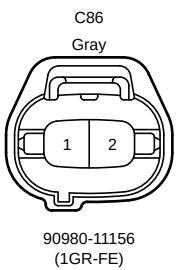
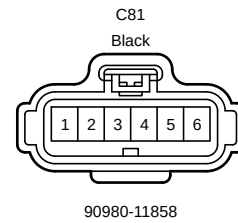
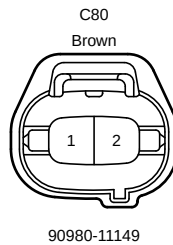
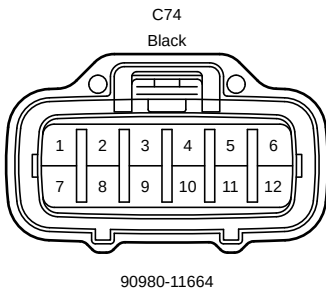
 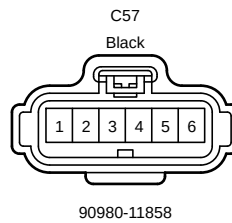
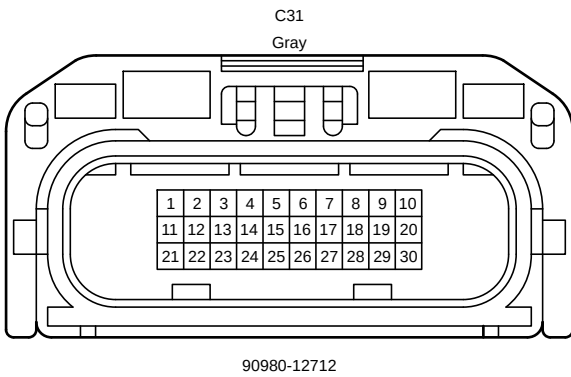

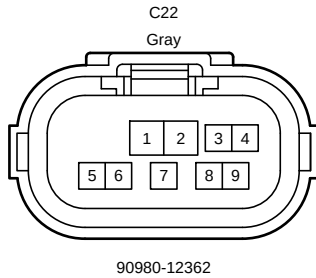
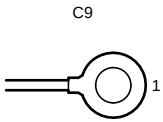
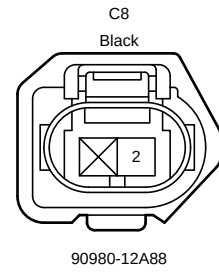


Position of Parts in Engine Compartment (LHD 1GR-FE)

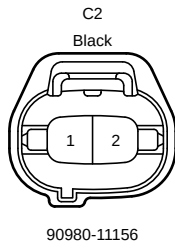

C1	Transmission Revolution Sensor (NT)
C2	Transmission Revolution Sensor (SP2)
C3	Compressor Assembly
C5	Engine Oil Pressure Switch Assembly
C8	Generator Assembly
C9	Generator Assembly
C22	Park/Neutral Position Switch Assembly
C24	Power Steering Oil Pressure Switch
C26	Starter Assembly
C31	ECT Solenoid (Transmission Wire)
C57	Differential Vacuum Actuator Assembly
C66	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C74	Transfer Shift Actuator Assembly
C79	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C80	VSV (ACIS)
C81	Throttle Body with Motor Assembly
C86	Purge VSV
C87	Fuel Injector Assembly No. 1
C88	Fuel Injector Assembly No. 2
C89	Fuel Injector Assembly No. 3
C90	Fuel Injector Assembly No. 4
C91	Fuel Injector Assembly No. 5
C92	Fuel Injector Assembly No. 6
C93	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C94	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C95	Crank Position Sensor
C97	Oxygen Sensor (Bank 2 Sensor 2)
C98	Oxygen Sensor (Bank 1 Sensor 2)
C100	Ignition Coil Assembly No. 1
C101	Ignition Coil Assembly No. 2
C102	Ignition Coil Assembly No. 3
C103	Ignition Coil Assembly No. 4
C104	Ignition Coil Assembly No. 5
C105	Ignition Coil Assembly No. 6
C106	VVT Sensor (Bank 2 Intake Side)
C107	VVT Sensor (Bank 1 Intake Side)
C207	E.F.I. Engine Coolant Temperature Sensor

Position of Parts in Engine Compartment (LHD 1GR-FE)

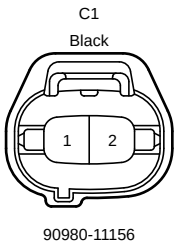

Position of Parts in Engine Compartment (LHD 1GR-FE)

