



Position of Parts in Engine Compartment (LHD 2TR-FE)

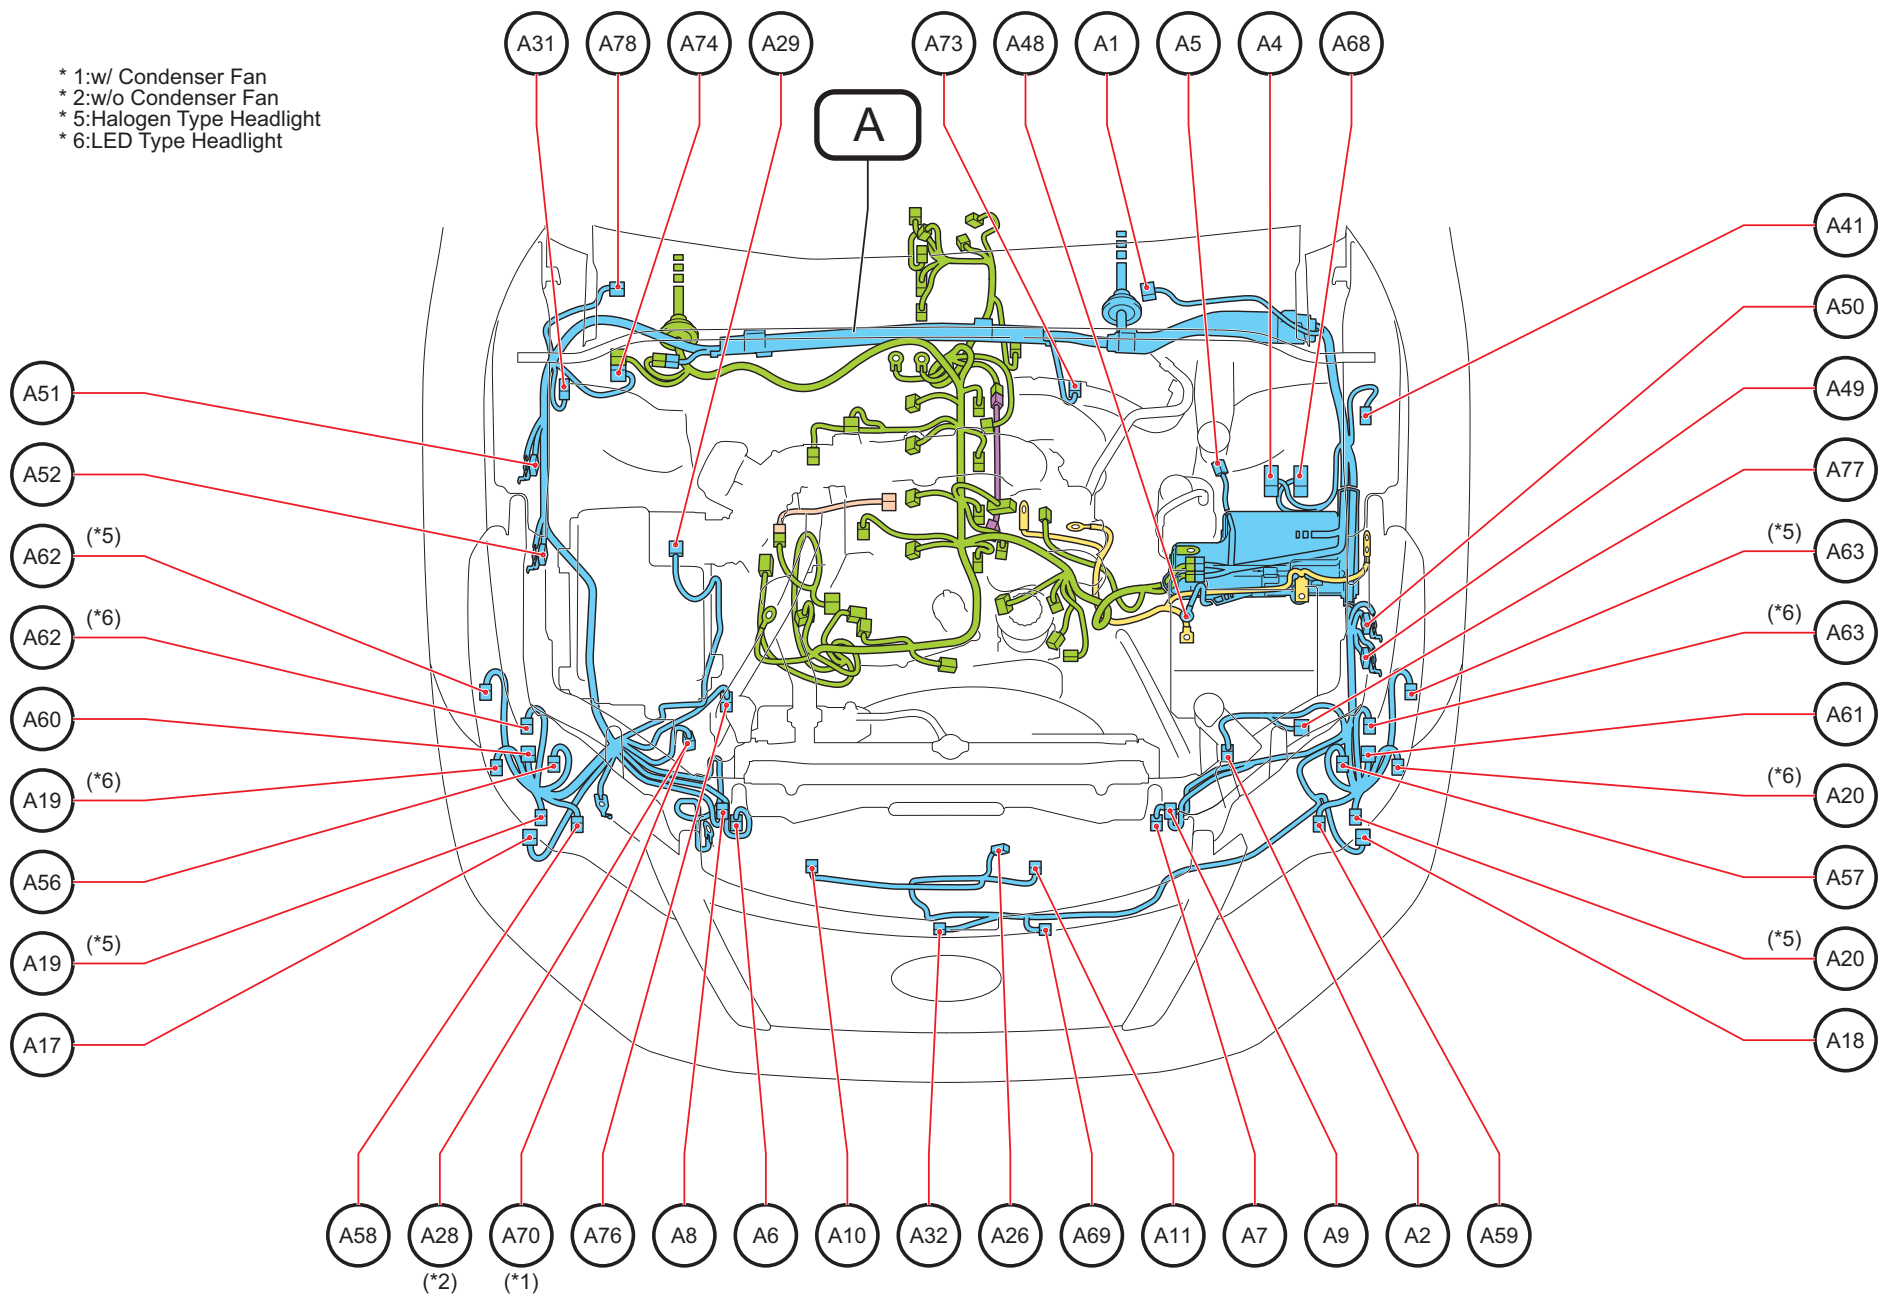


A1	Windshield Wiper Motor Assembly
A2	Windshield Washer Motor and Pump Assembly
A4	Brake Actuator Assembly
A5	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A6	Front Speed Sensor RH
A7	Front Speed Sensor LH
A8	Front Airbag Sensor RH
A9	Front Airbag Sensor LH
A10	Low Pitched Horn Assembly
A11	High Pitched Horn Assembly
A17	Fog Light Assembly RH
A18	Fog Light Assembly LH
A19	Headlight Assembly RH
A20	Headlight Assembly LH
A26	Engine Hood Courtesy Switch (Hood Lock Assembly)
A28	A/C Pressure Switch (A/C Tube & Accessory Assembly)
A29	Intake Mass Air Flow Meter Sub-Assembly
A31	Security Horn Assembly
A32	Ambient Temperature Sensor (Thermistor Assembly)
A41	Wireless Door Lock Buzzer
A48	Battery
A49	No. 1 Ground Junction Connector
A50	No. 2 Ground Junction Connector
A51	No. 3 Ground Junction Connector
A52	No. 4 Ground Junction Connector
A56	Headlight Assembly RH
A57	Headlight Assembly LH
A58	Headlight Assembly RH
A59	Headlight Assembly LH
A60	Headlight Assembly RH
A61	Headlight Assembly LH
A62	Headlight Assembly RH
A63	Headlight Assembly LH
A68	Brake Actuator Assembly
A69	Cooler Condenser Assembly
A70	No. 1 Pressure Switch
A73	No. 1 Vacuum Switching Valve Assembly (Ejector)
A74	Air Injection Control Driver
A76	Air Pump Assembly
A77	Windshield Washer Motor and Pump Assembly
A78	Windshield Deicer (Windshield Glass)


Position of Parts in Engine Compartment (LHD 2TR-FE)

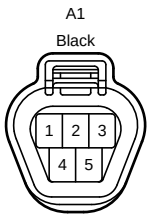

90980-11599

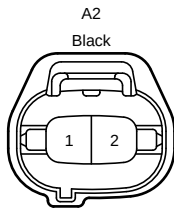


90980-11156

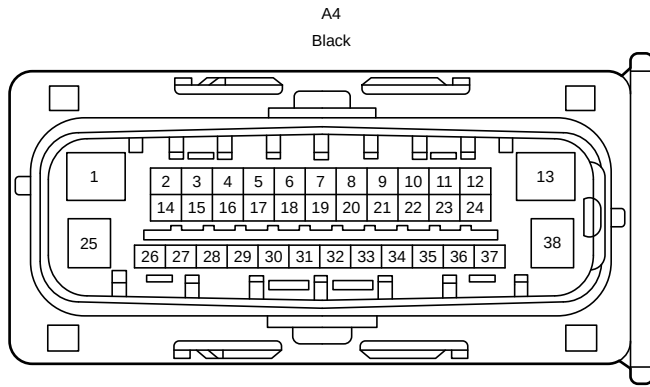


90980-12B01




90980-11207

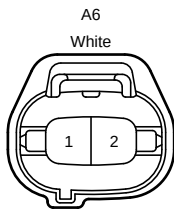


90980-11156

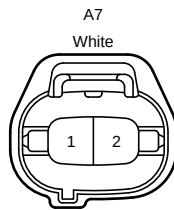


90980-11156

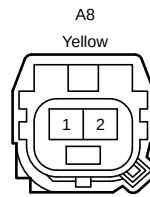


90980-12490

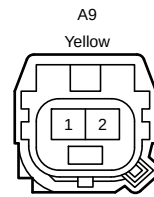


90980-12490

 


90980-10619

 


90980-10619

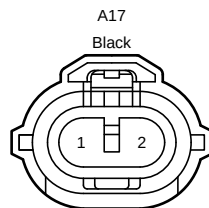


82824-60460

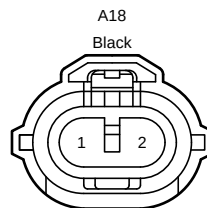


82824-60460

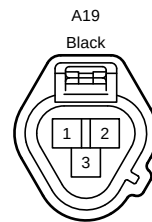


90980-11016
(Headlight Leveling Motor)

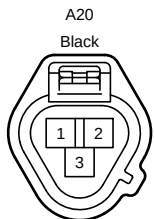


90980-11016
(Headlight Leveling Motor)

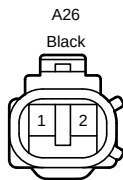

90980-11003

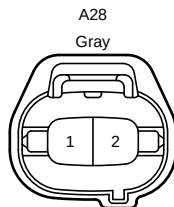


90980-11149

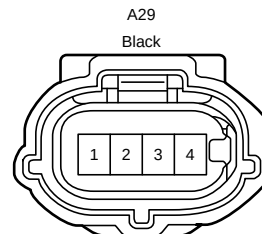


90980-12A85




90980-10619

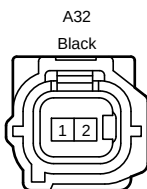


90980-12416

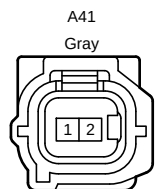

90980-12572











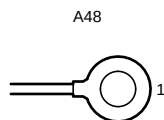


1

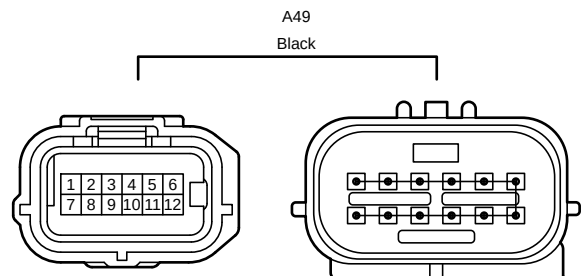


90980-12356


Position of Parts in Engine Compartment (LHD 2TR-FE)

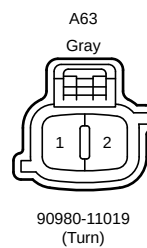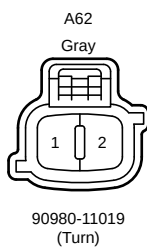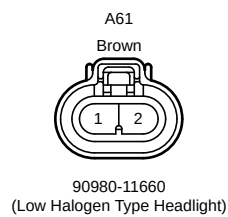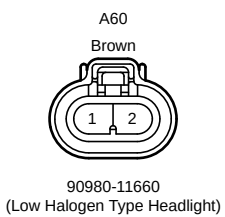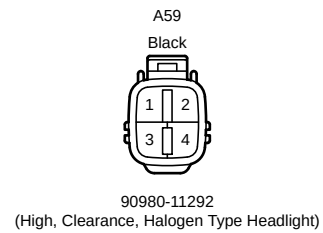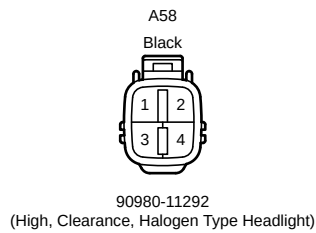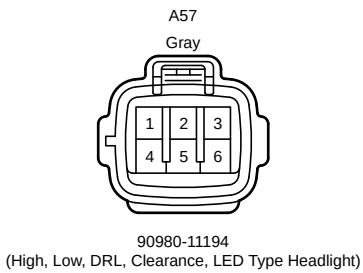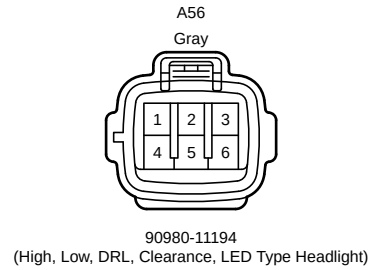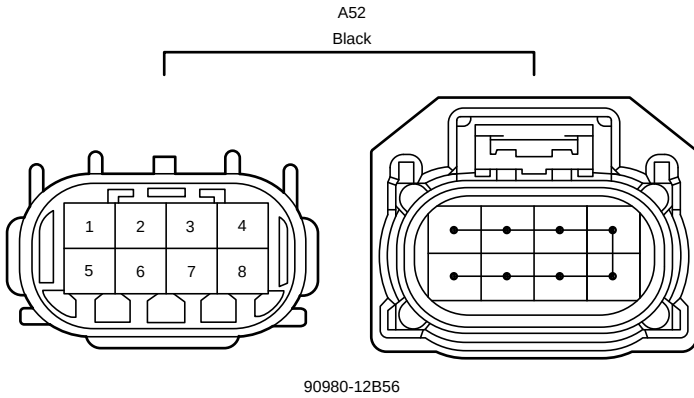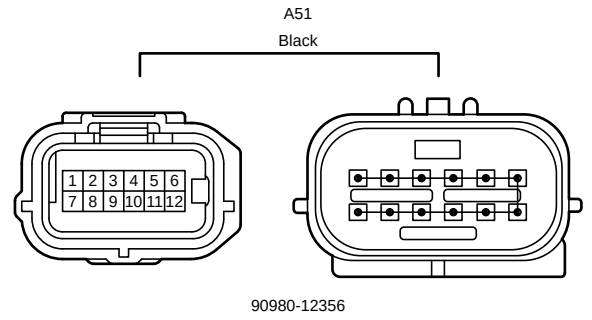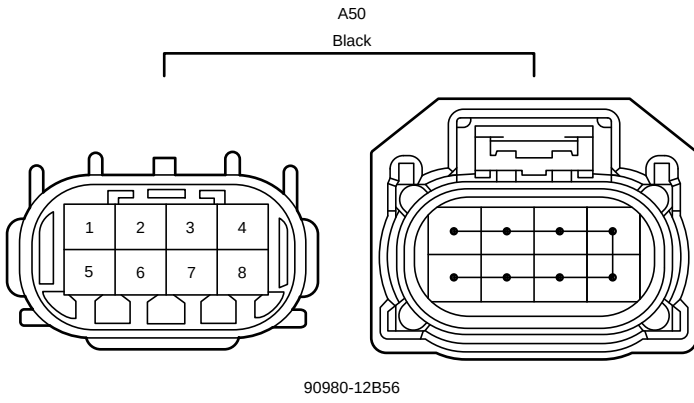


Position of Parts in Engine Compartment (LHD 2TR-FE)

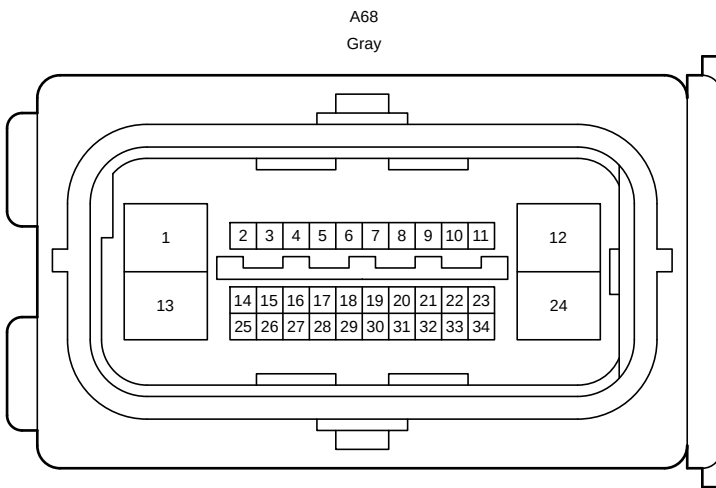


90980-12687

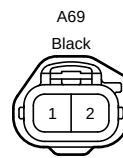


90980-11237

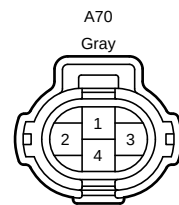


90980-10943

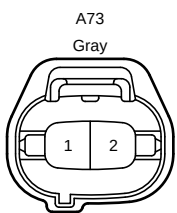


90980-11156

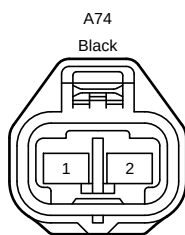


90980-12068

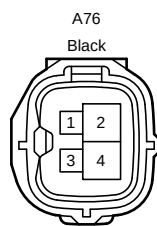

90980-12294

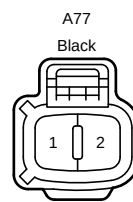

90980-11068

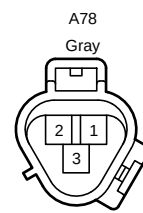

90980-11015