


Position of Parts in Engine Compartment (LHD 5L-E)

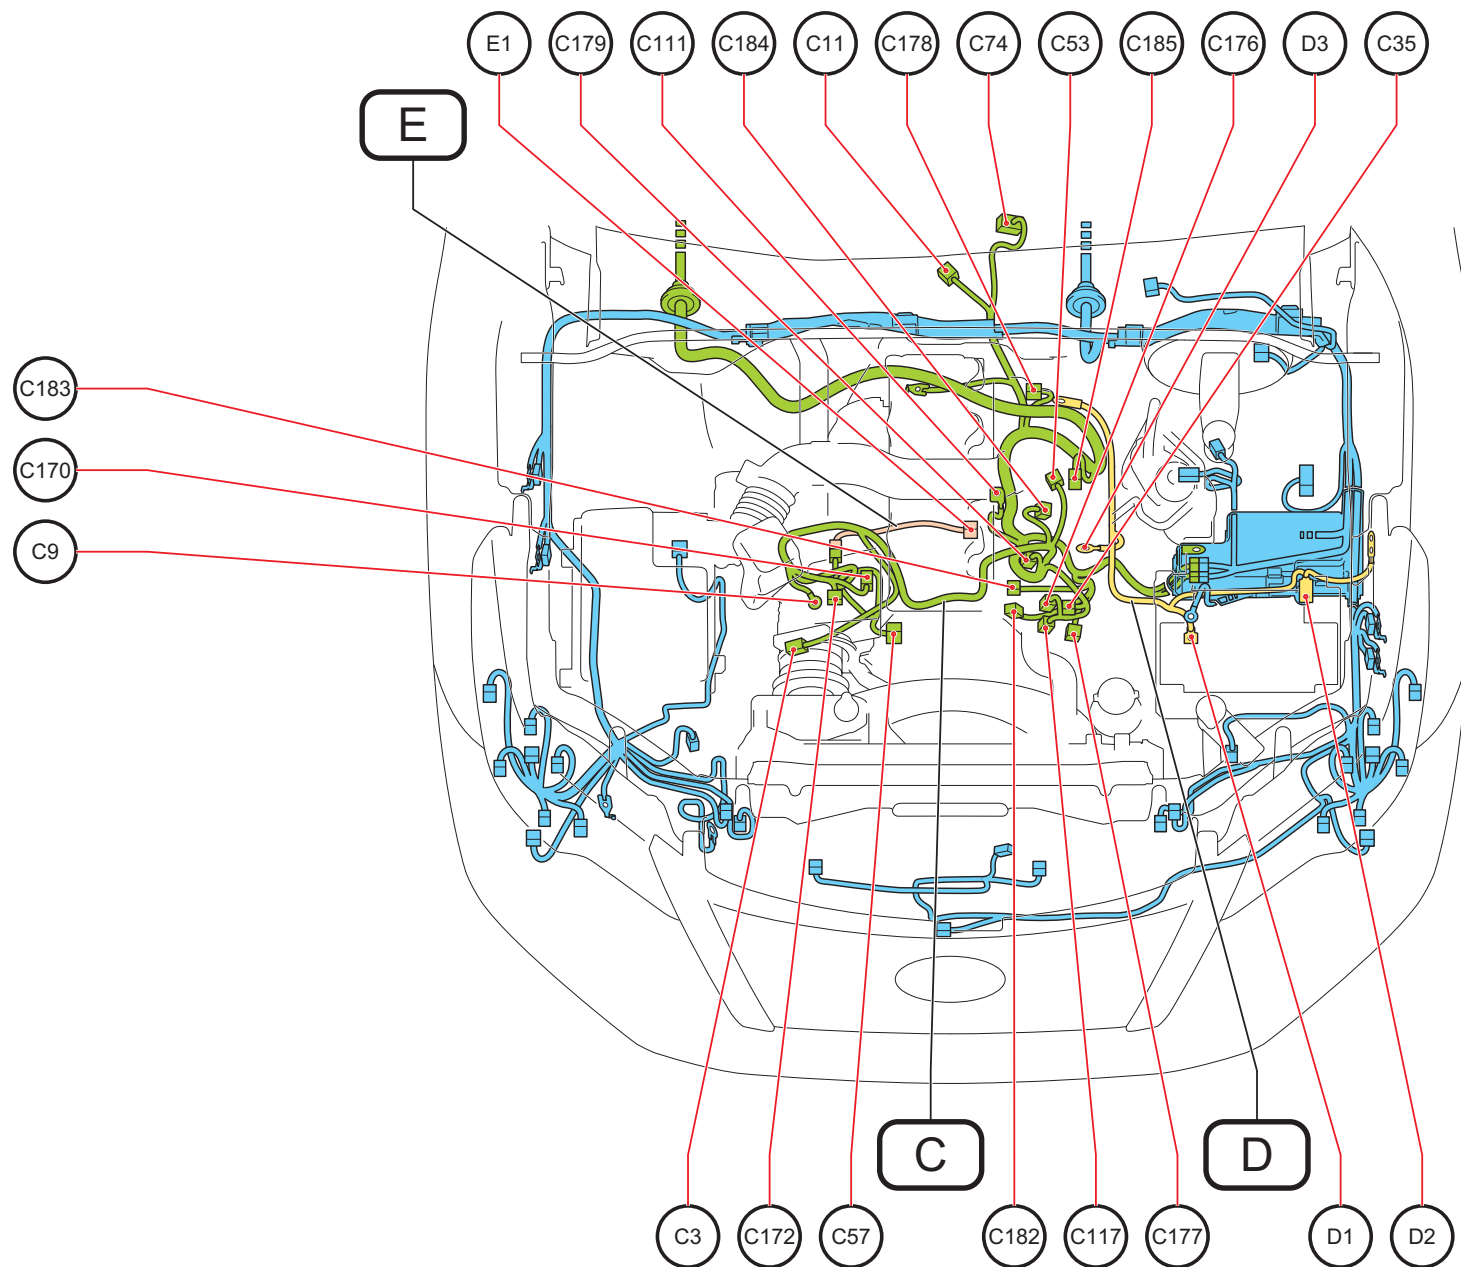

C3 Compressor Assembly
C9 Generator Assembly
C11 Back-Up Light Switch Assembly
C35 Diesel Engine Coolant Temperature Sensor
C53 Diesel Turbo Turbo Pressure Sensor
C57 Differential Vacuum Actuator Assembly
C74 Transfer Shift Actuator Assembly
C111 Glow Plug Assembly
C117 Fuel Temperature Sensor
C170 Engine Oil Pressure Switch Assembly
C172 Generator Assembly
C176 Crank Position Sensor
C177 Injection or Supply Pump Assembly
C178 Starter Assembly
C179 Spill Control Valve
C182 Timing Control Valve Assembly
C183 Cam Position Sensor
C184 Throttle with Motor Body Assembly
C185 Throttle Open Switch (Venturi Assembly)



D1 Battery
D2 Battery
D3 Starter Assembly

E1 Oil Temperature Sensor

Position of Parts in Engine Compartment (LHD 5L-E)




90980-11271

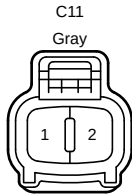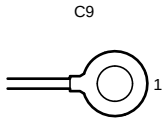


90980-11051




90980-10735

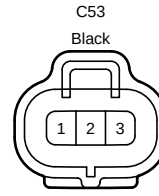


90980-10845

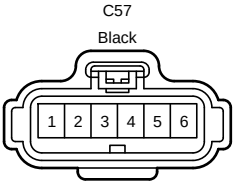

90980-11858

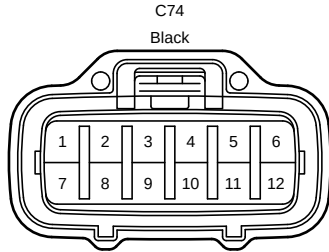


90980-11664

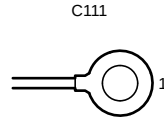


90980-10737




90980-10703

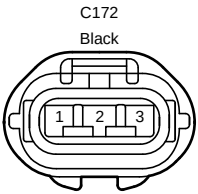

90980-11349

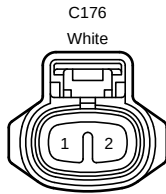


90980-11250

 

90980-11028




90980-11184

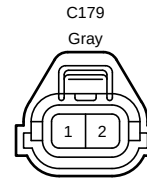


90980-12117




90980-11285

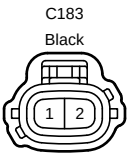





90980-11162

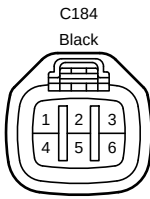

90980-11144

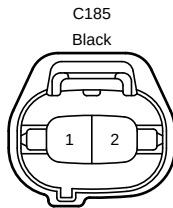

90980-11156

 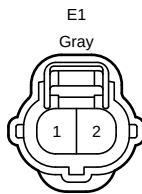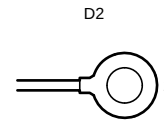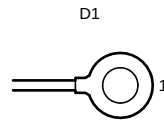

90980-11025