



Position of Parts in Body (RHD)

* 7:Refer to the Service Bulletin
for the installation position of the parts.

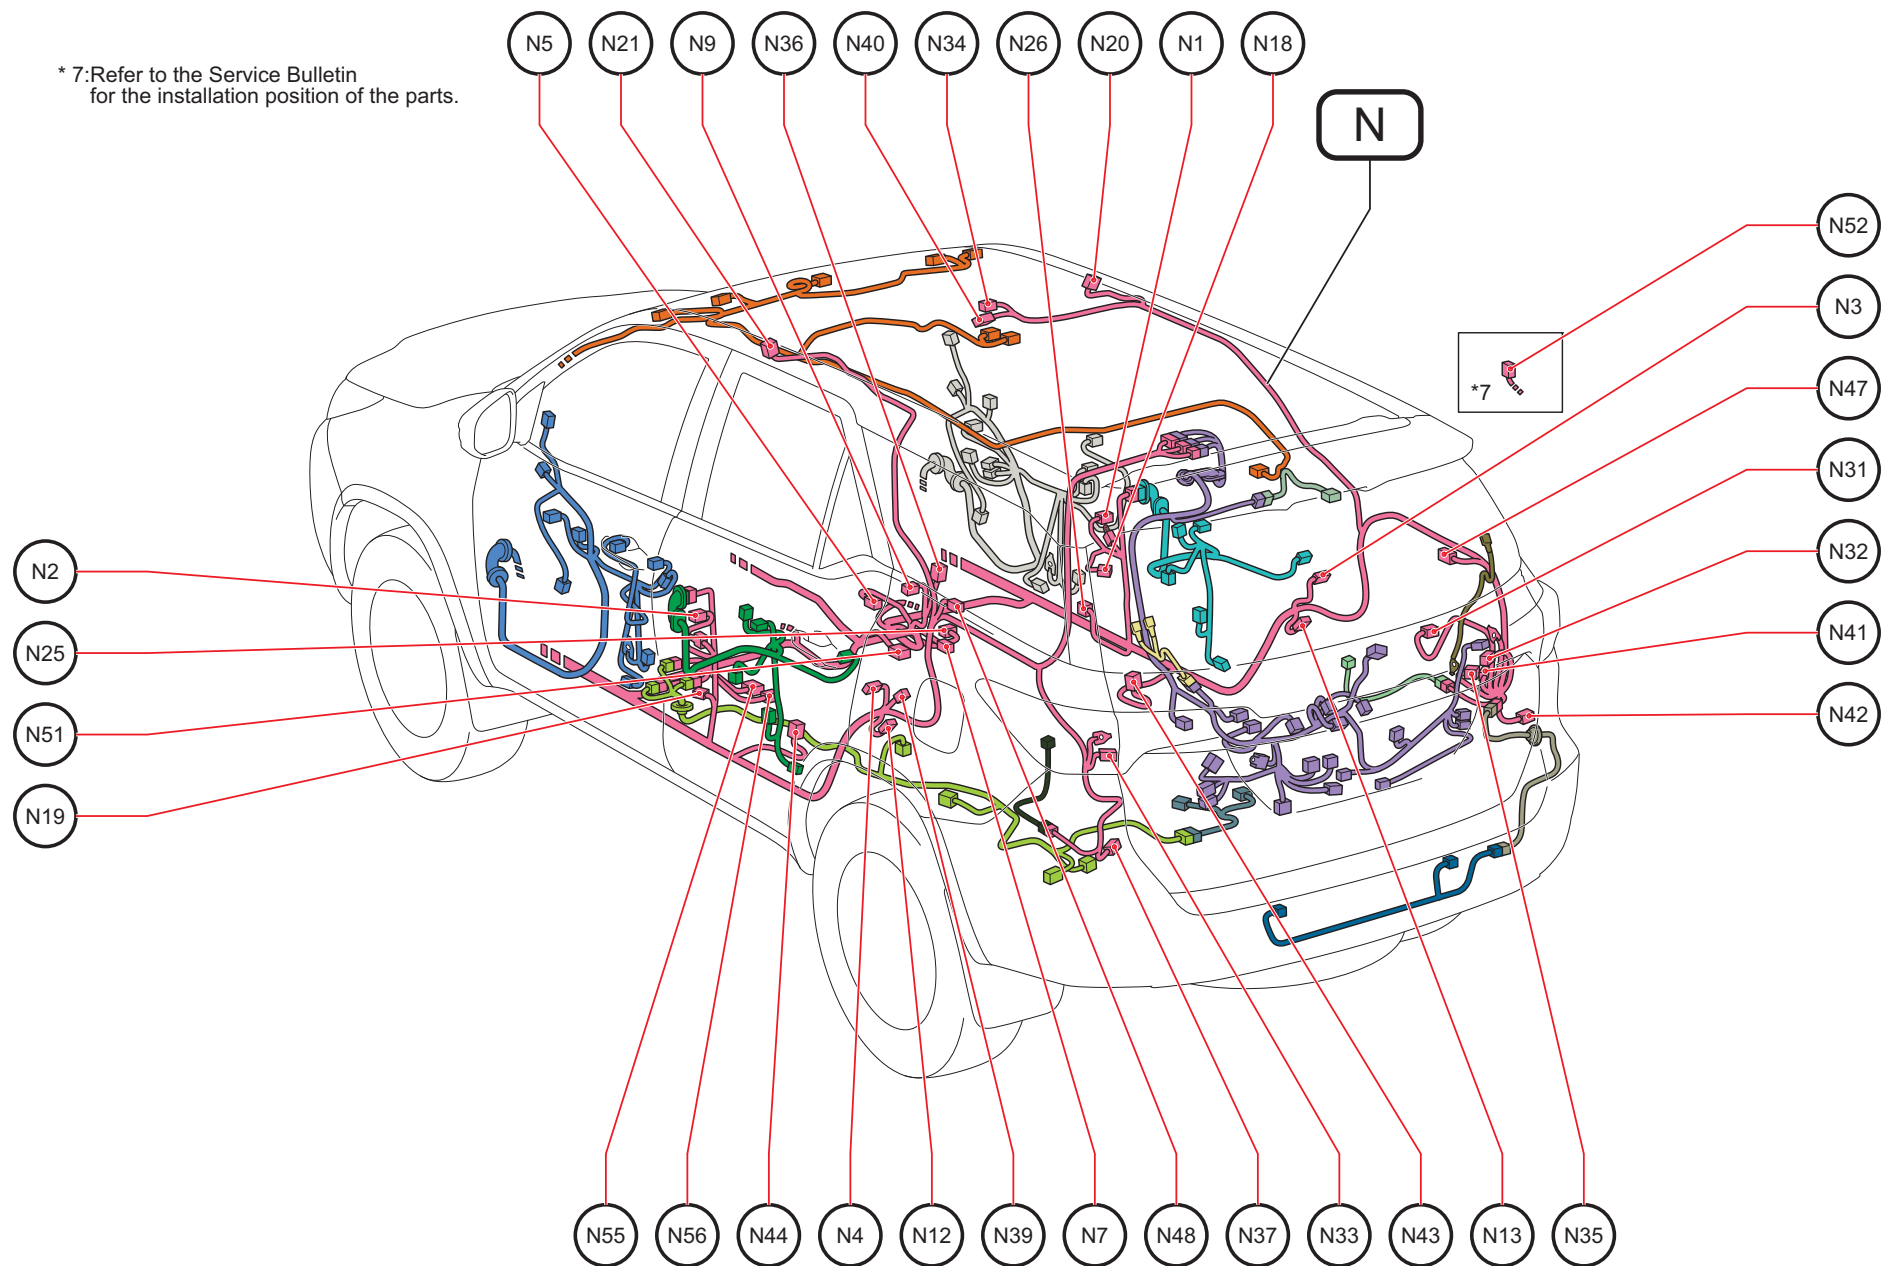


N1	Front Door Courtesy Light Switch Assembly RH
N2	Front Door Courtesy Light Switch Assembly LH
N3	Rear Door Courtesy Light Switch Assembly RH
N4	Rear Door Courtesy Light Switch Assembly LH
N5	Parking Brake Switch Assembly
N7	Power Outlet Socket
N9	No. 2 Indoor Electrical Key Antenna Assembly
N12	Side Airbag Sensor Assembly LH
N13	Side Airbag Sensor Assembly RH
N18	Front Seat Outer Belt Assembly RH
N19	Front Seat Outer Belt Assembly LH
N20	Curtain Shield Airbag Assembly RH
N21	Curtain Shield Airbag Assembly LH
N25	Voltage Inverter Assembly
N26	No. 20 Junction Connector
N31	Rear Blower Motor with Fan Sub-Assembly
N32	Rear Combination Light Assembly RH
N33	Rear Combination Light Assembly LH
N34	Rear A/C Control Assembly
N35	Blower Motor Control (Rear)
N36	No. 2 Power Outlet Socket Assembly
N37	No. 3 Power Outlet Socket Assembly
N39	No. 2 Indoor Electrical Key Antenna Assembly (Rear)
N40	Rear Cooler Switch
N41	Rear Cooling Unit Assembly
N42	Rear Cooler Relay
N43	Rear No. 1 Seat Inner Belt Assembly RH
N44	Rear No. 1 Seat Inner Belt Assembly LH
N47	Glass Breakage Sensor (Quarter Window Assembly RH)
N48	Glass Breakage Sensor (Quarter Window Assembly LH)
N51	Deceleration Sensor
N52	Theft Warning Siren Assembly
N55	Stereo Component Amplifier Assembly
N56	Stereo Component Amplifier Assembly


Position of Parts in Body (RHD)

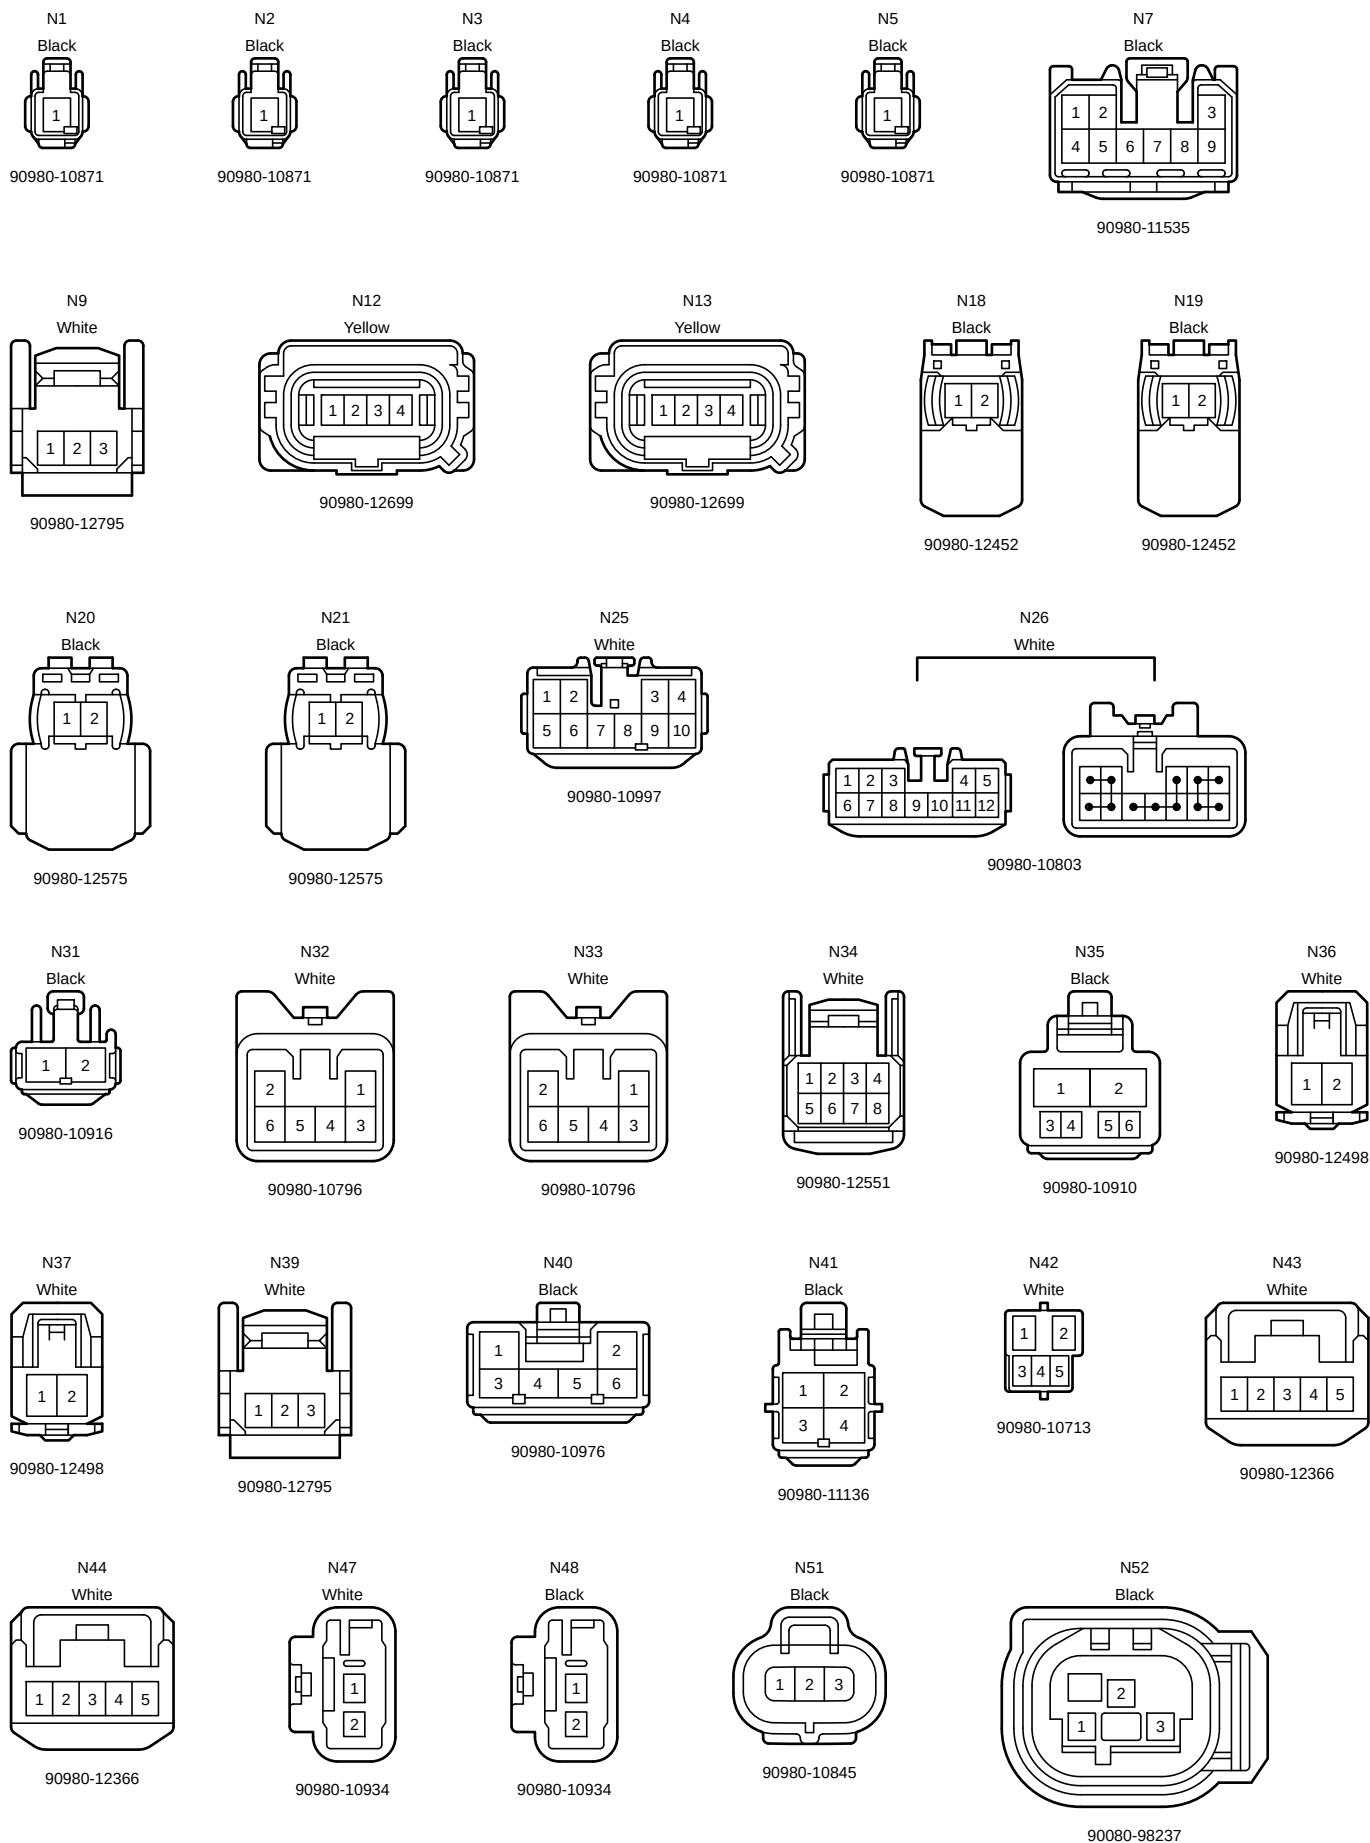

Position of Parts in Body (RHD)

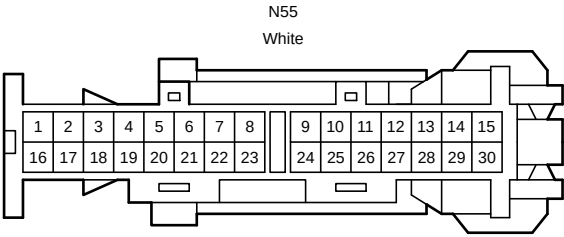

90980-12979

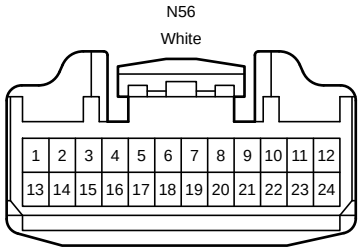

90980-12554