



Position of Parts in Instrument Panel (LHD)

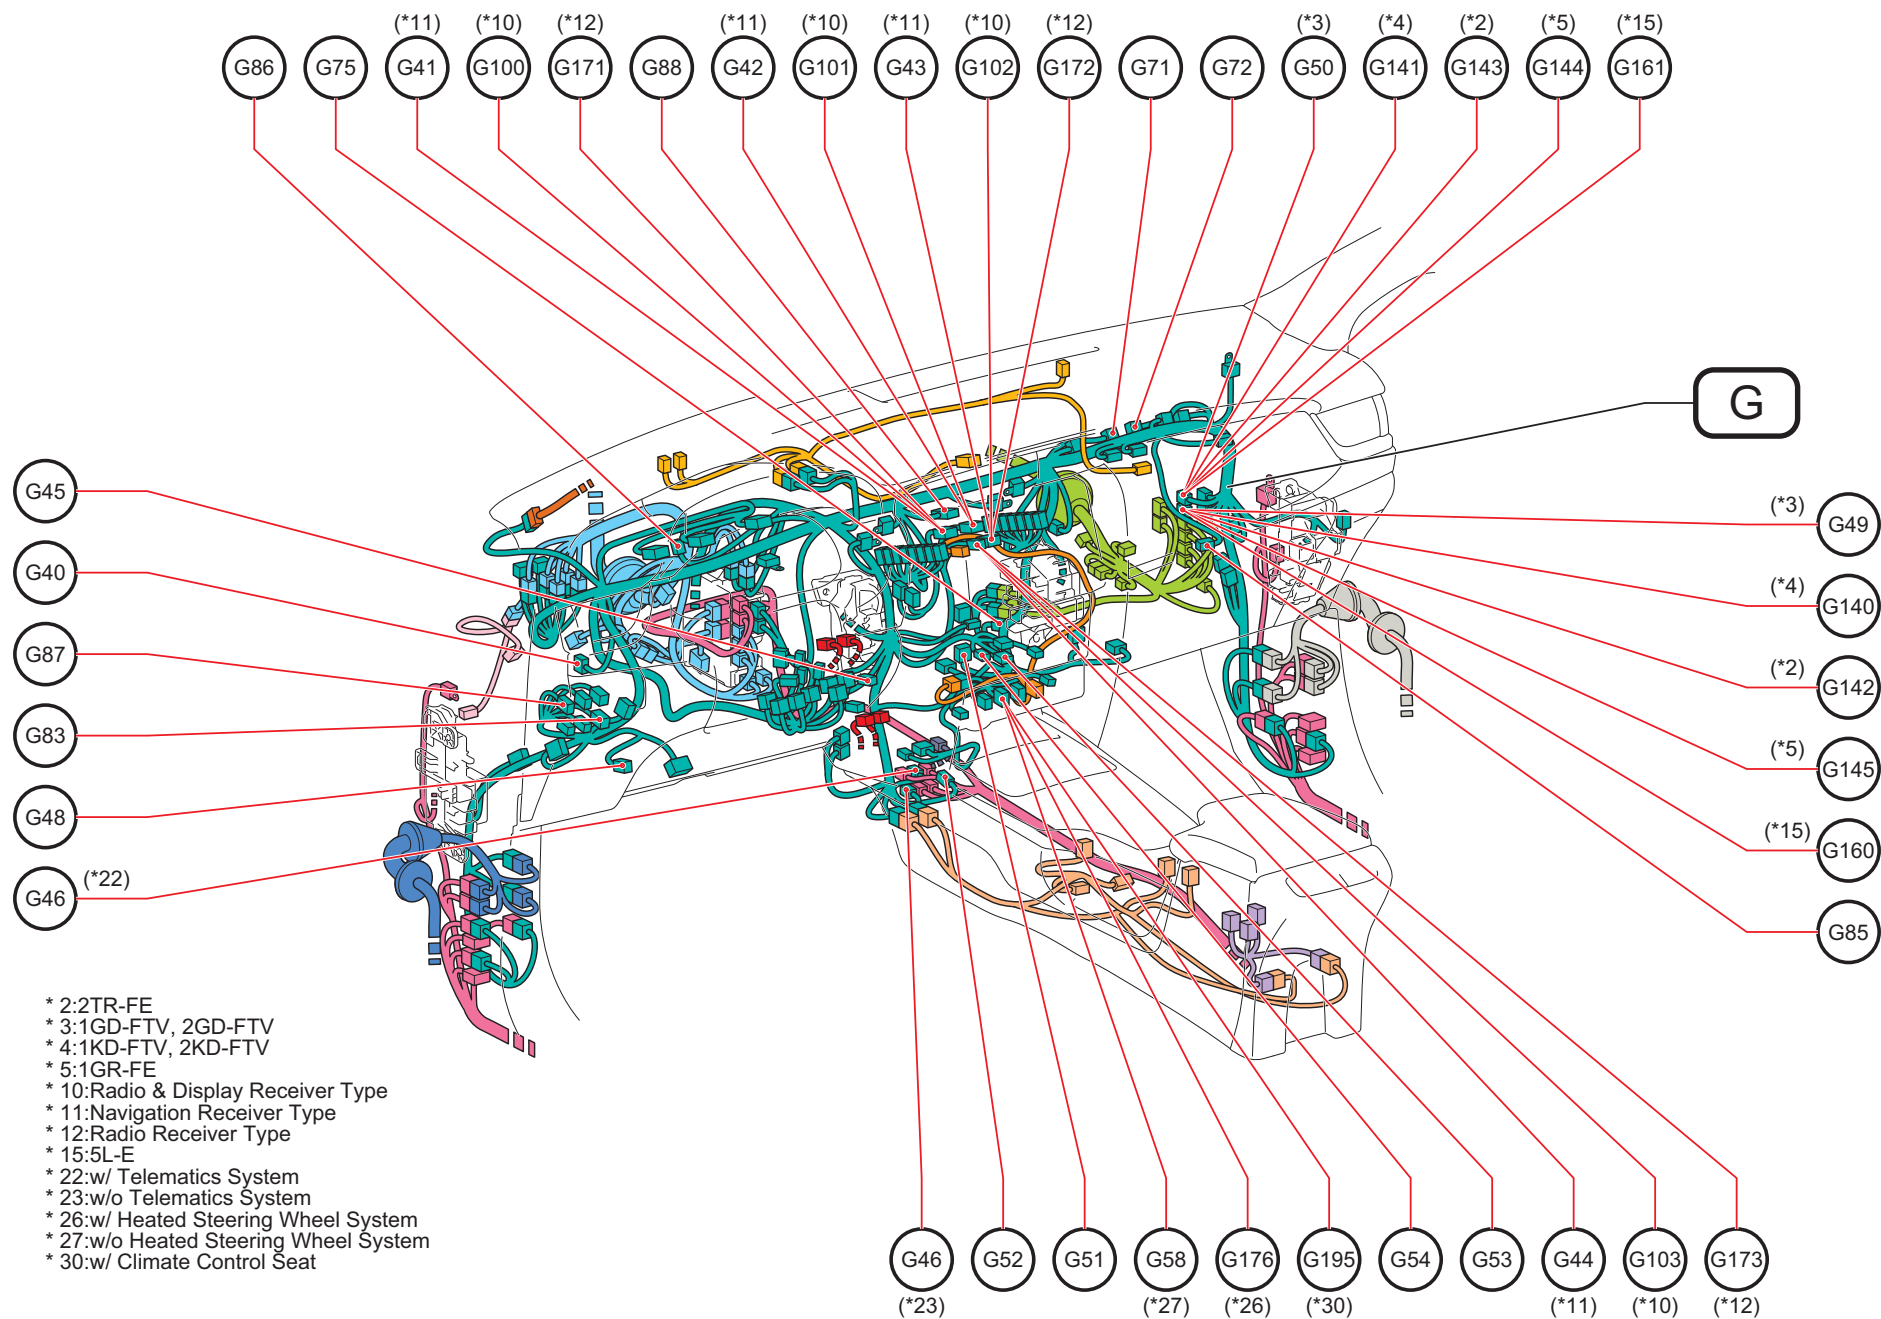


G40	Headlight Leveling ECU Assembly
G41	Navigation Receiver Assembly
G42	Navigation Receiver Assembly
G43	Navigation Receiver Assembly
G44	Navigation Receiver Assembly
G45	Engine Switch
G46	Airbag Sensor Assembly
G48	Lower No. 1 Instrument Panel Airbag Assembly
G49	ECM
G50	ECM
G51	Blower Resistor
G52	No. 1 Cooler Thermistor
G53	A/C Control Assembly
G54	A/C Control Assembly
G58	Differential Lock Switch
G71	No. 6 Junction Connector
G72	No. 6 Junction Connector
G75	No. 7 Junction Connector
G83	Power Back Door Main Switch
G85	Glove Box Light Assembly
G86	No. 1 Clearance Warning Buzzer
G87	Clearance Sonar Switch Assembly
G88	Clearance Warning ECU Assembly
G100	Radio & Display Receiver Assembly
G101	Radio & Display Receiver Assembly
G102	Radio & Display Receiver Assembly
G103	Radio & Display Receiver Assembly
G140	ECM
G141	ECM
G142	ECM
G143	ECM
G144	ECM
G145	ECM
G160	ECM
G161	ECM
G171	Radio Receiver Assembly
G172	Radio Receiver Assembly
G173	Radio Receiver Assembly
G176	Steering Heater Switch
G195	Refreshing Seat Switch LH


Position of Parts in Instrument Panel (LHD)

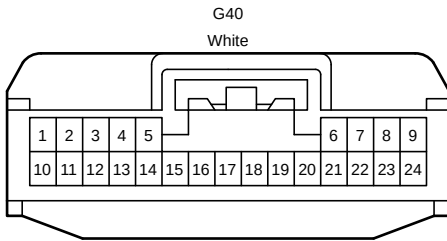


90980-12404

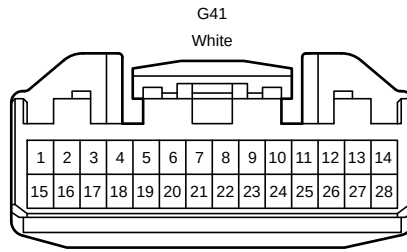


90980-12555

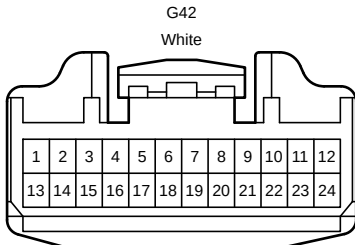


90980-12554

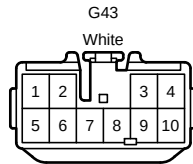


90980-10997

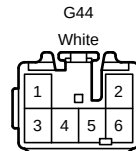


90980-10996

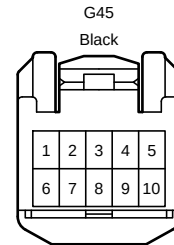


90980-12361

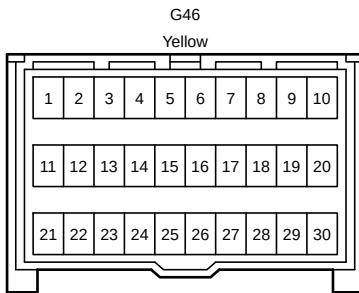


90980-12710

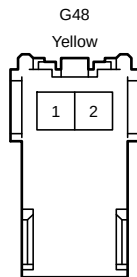


90980-12253

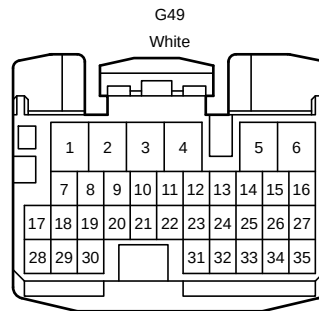


90980-12529

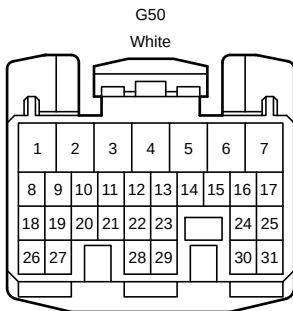


90980-12525

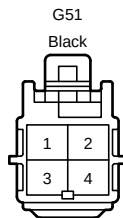


90980-11136

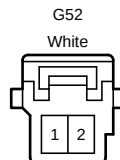


90980-12937

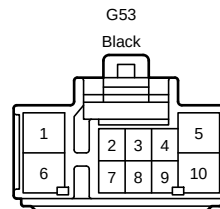


90980-10993

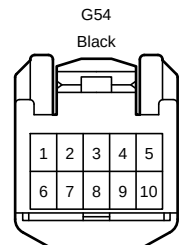


90980-12361

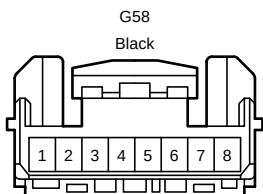

90980-12558




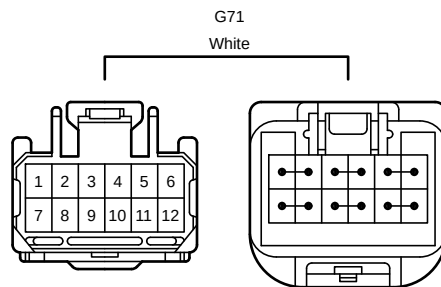


90980-11661

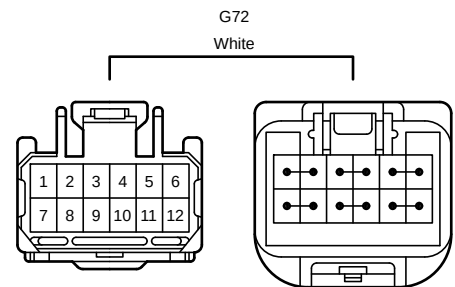

90980-11661

Position of Parts in Instrument Panel (LHD)

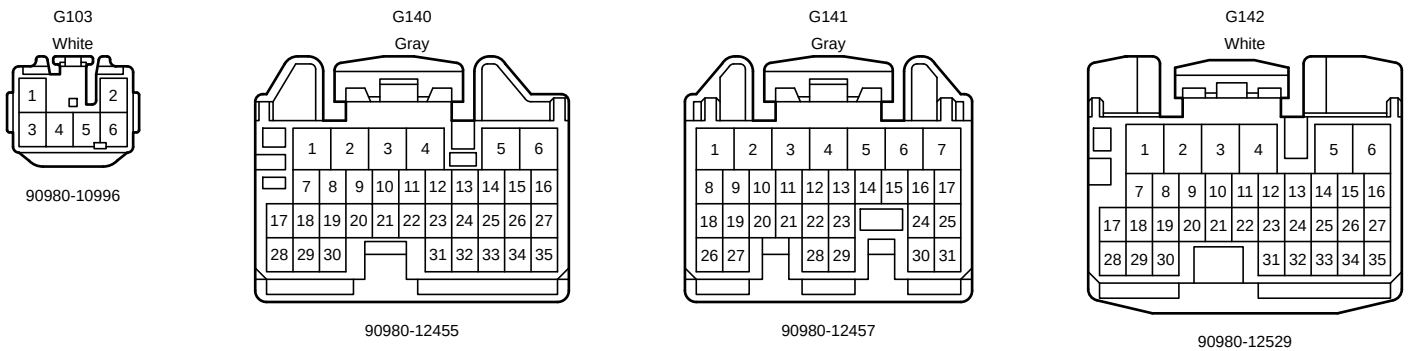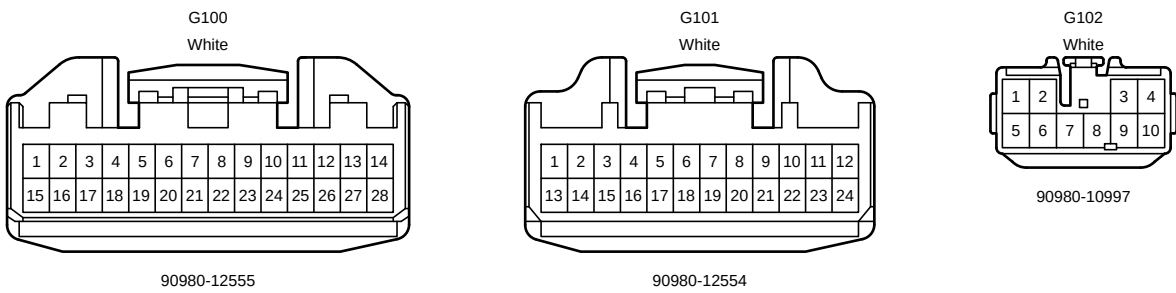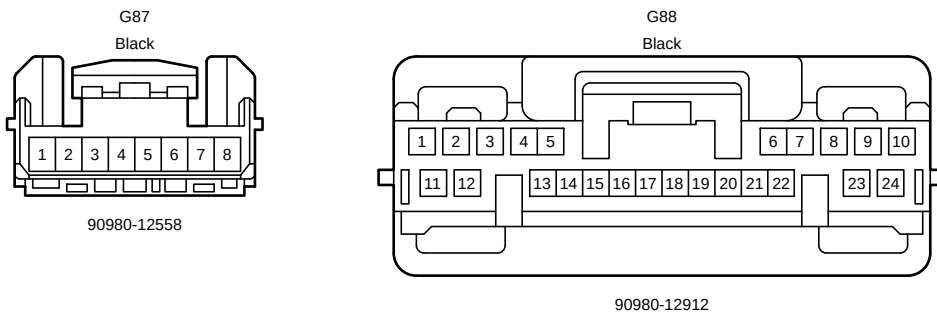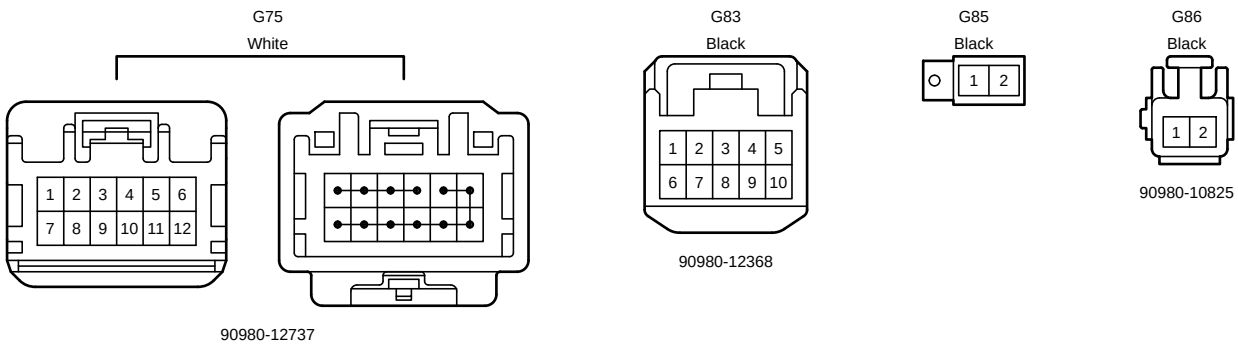

Position of Parts in Instrument Panel (LHD)

