


Position of Parts in Instrument Panel (LHD)

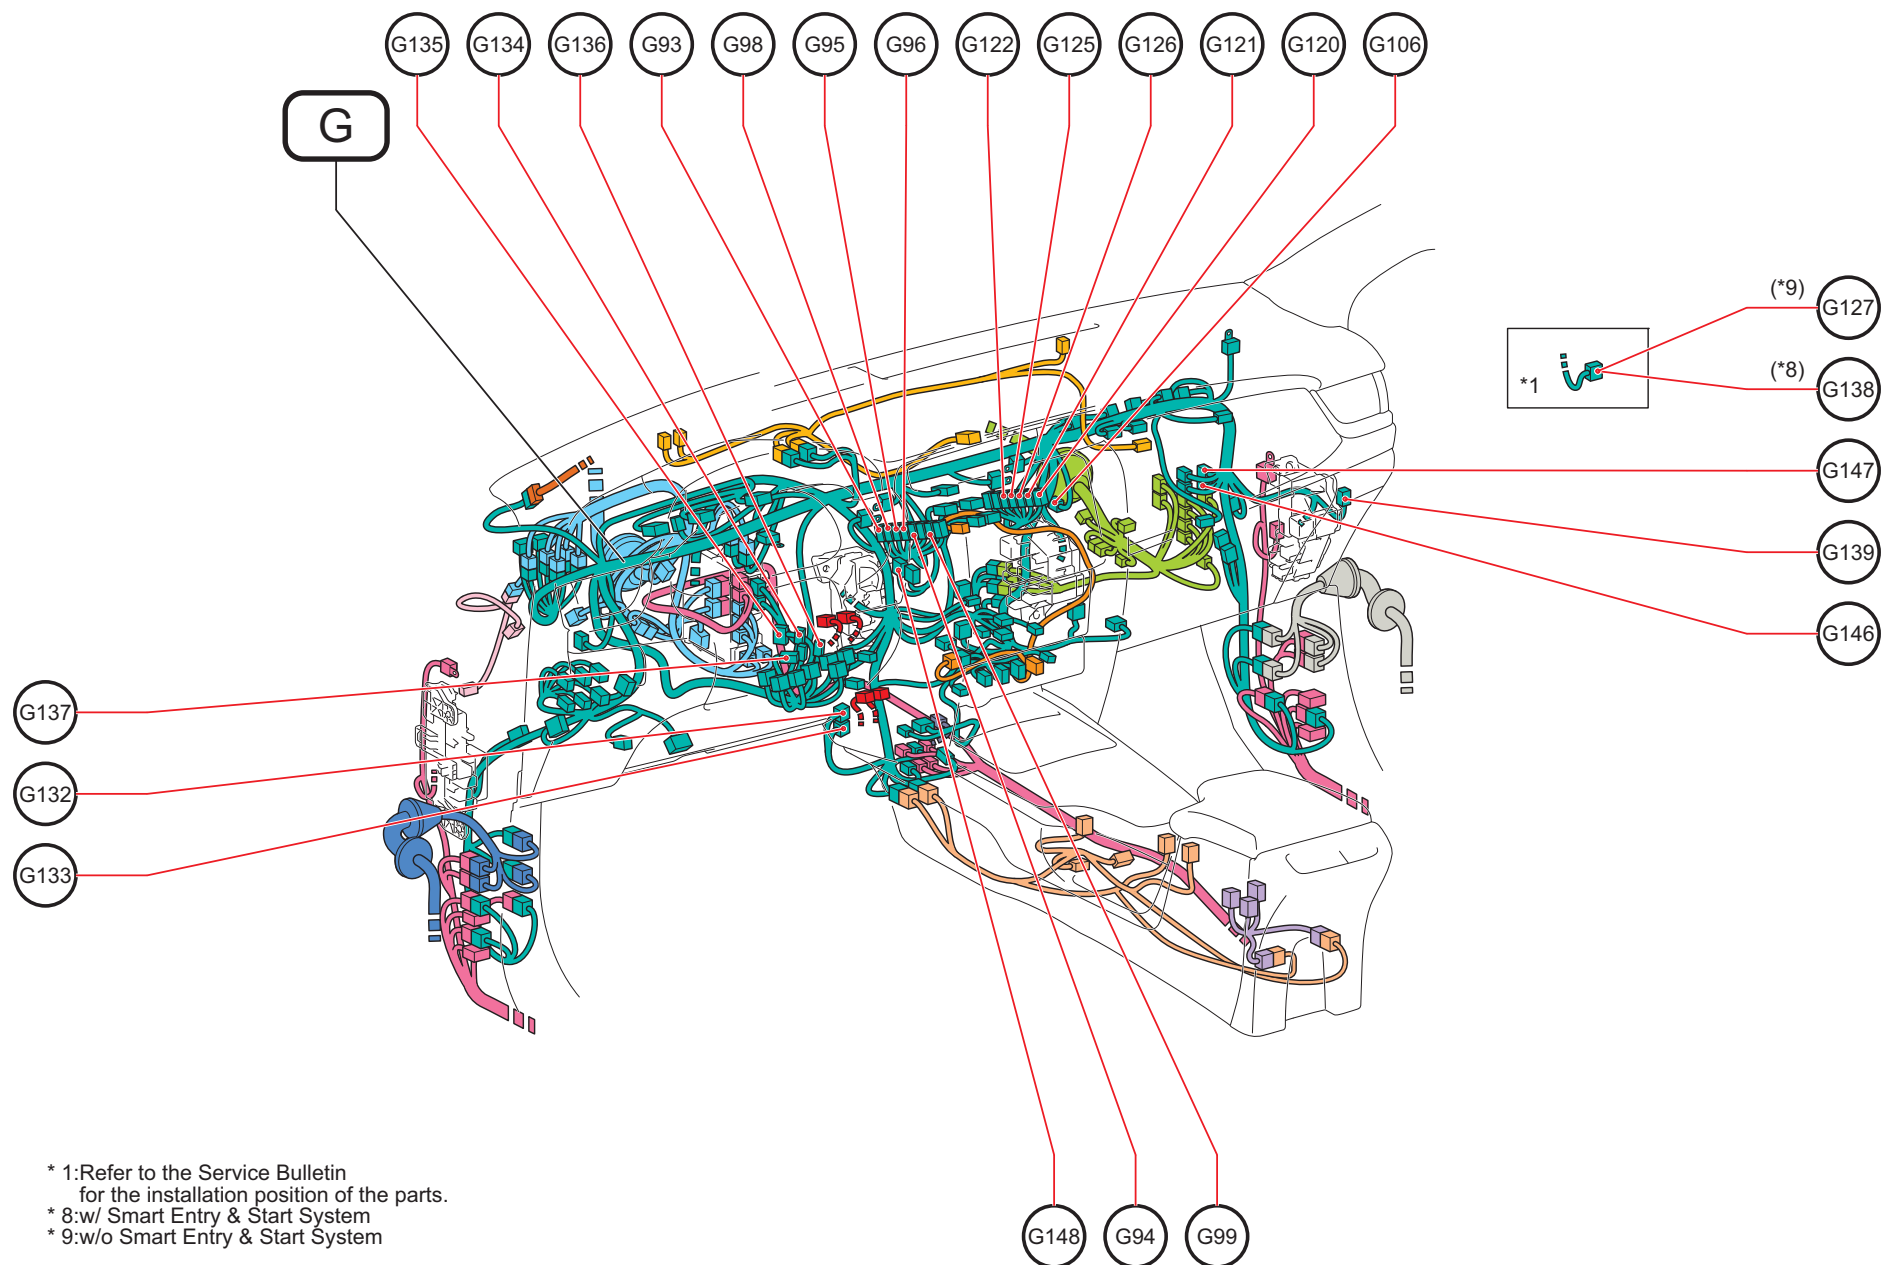

G93	No. 1 CAN Junction Connector
G94	No. 1 CAN Junction Connector
G95	No. 1 CAN Junction Connector
G96	No. 1 CAN Junction Connector
G98	No. 1 CAN Junction Connector
G99	No. 1 CAN Junction Connector
G106	No. 1 Blower Damper Servo Sub-Assembly
G120	No. 2 CAN Junction Connector
G121	No. 2 CAN Junction Connector
G122	No. 2 CAN Junction Connector
G125	No. 2 CAN Junction Connector
G126	No. 2 CAN Junction Connector
G127	Transponder Key ECU Assembly
G132	Quick Heater Assembly
G133	Quick Heater Assembly
G134	Key Inter Lock Solenoid
G135	Ignition or Starter Switch Assembly
G136	Un-Lock Warning Switch Assembly
G137	Transponder Key Coil
G138	ID Code Box
G139	Airbag Cut Off Switch Cylinder Sub-Assembly
G146	Transmission Control ECU Assembly
G147	Transmission Control ECU Assembly
G148	No. 30 Junction Connector

Position of Parts in Instrument Panel (LHD)

