



Position of Parts in Instrument Panel (LHD)

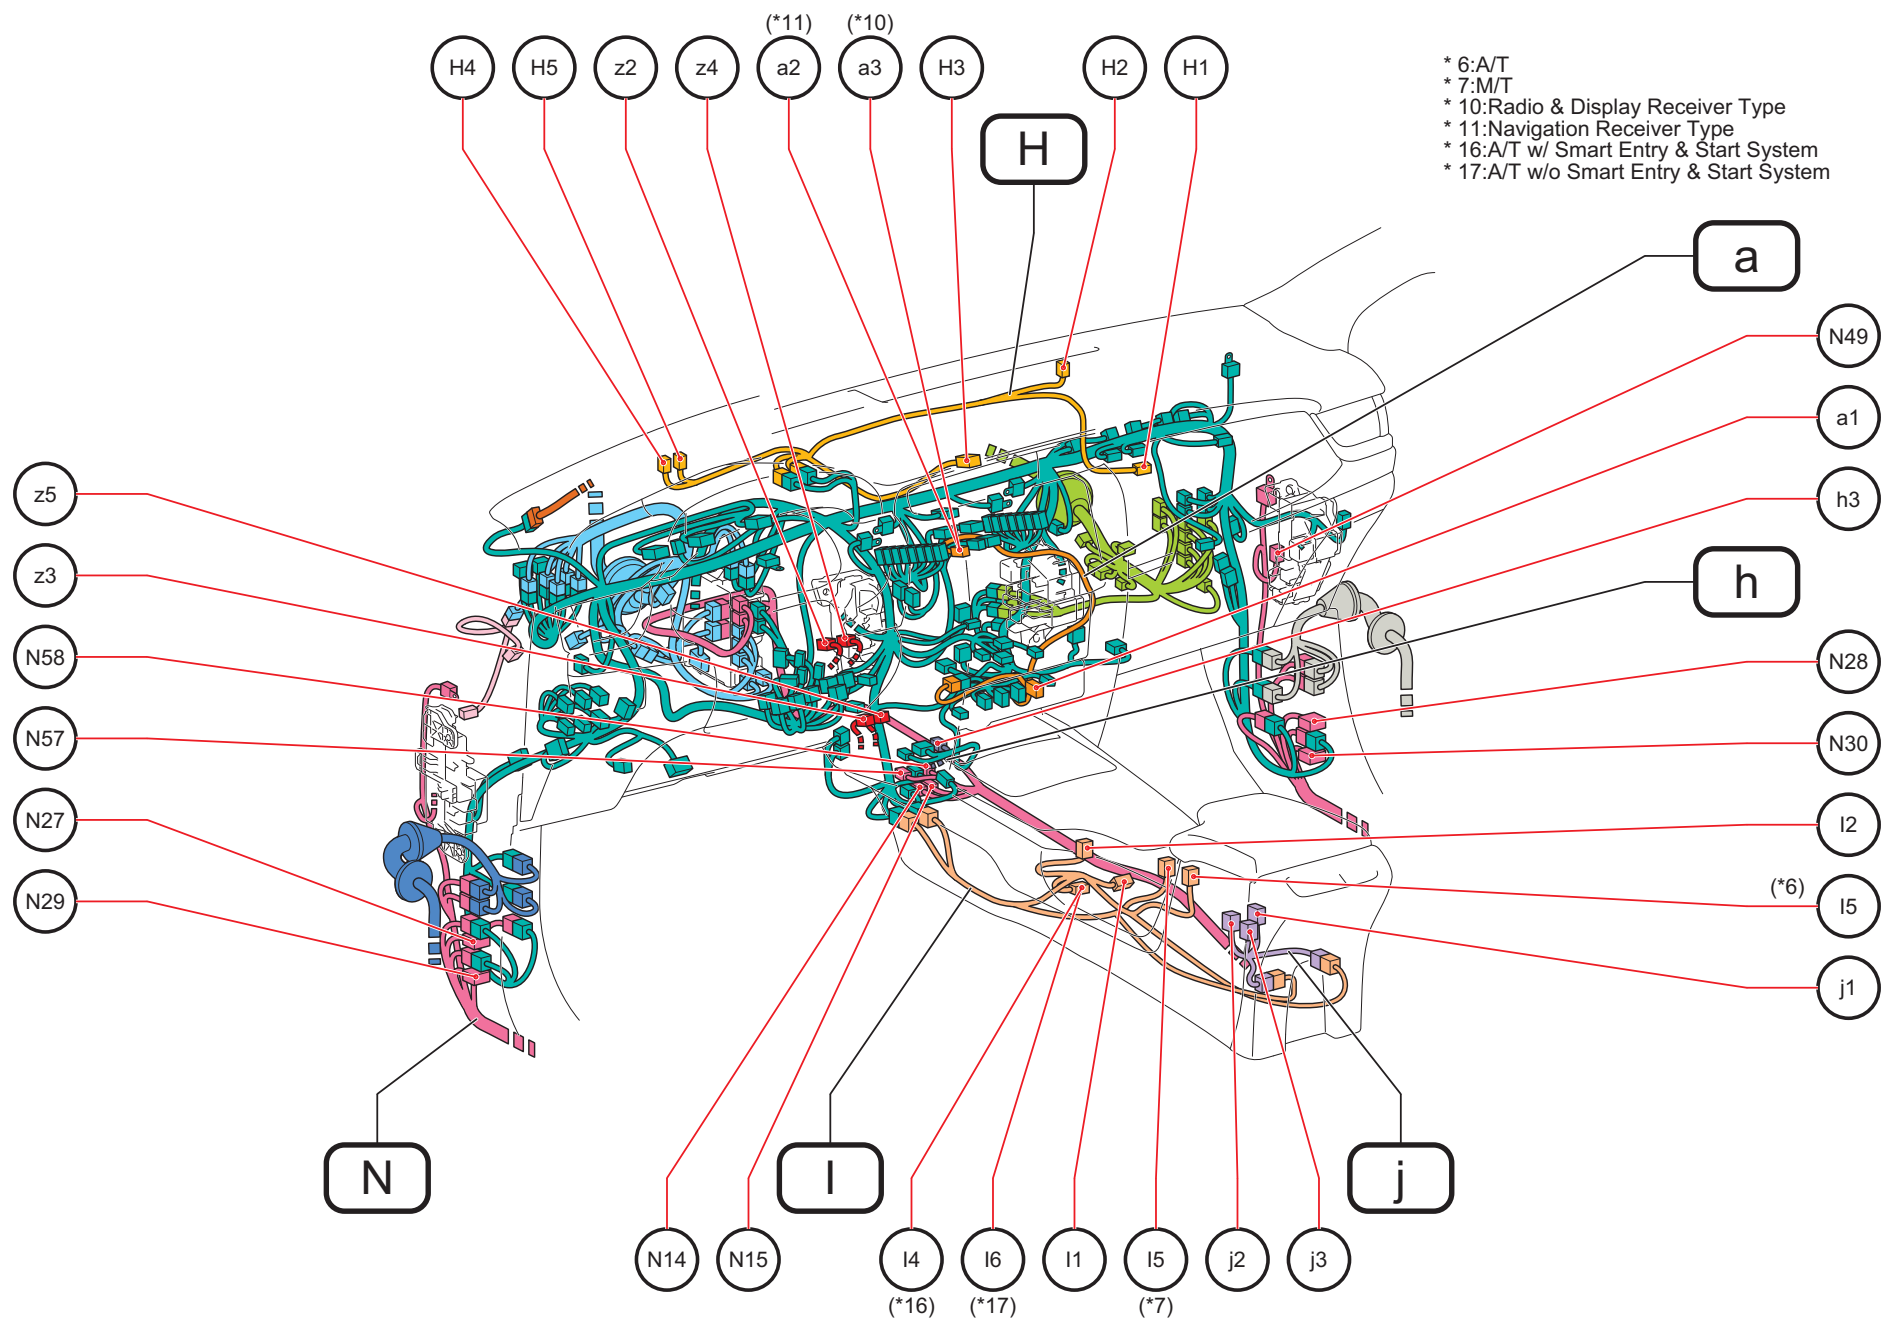


Position of Parts in Instrument Panel (LHD)

H1	Instrument Panel Passenger Airbag without Door Assembly
H2	Theft Warning Indicator Light Assembly
H3	Clock Assembly
H4	Cooler (Solar Sensor) Thermistor
H5	Automatic Light Control Sensor
I1	Transmission Control Switch (Transmission Floor Shift Assembly)
I2	Shift Position Indicator (Position Indicator Housing Assembly)
I4	Shift Lock Control ECU (Transmission Floor Shift Assembly)
I5	Combination Switch Assembly
I6	Shift Lock Control ECU (Transmission Floor Shift Assembly)
N14	Airbag Sensor Assembly
N15	Airbag Sensor Assembly
N27	No. 21 Junction Connector
N28	No. 22 Junction Connector
N29	No. 23 Junction Connector
N30	No. 24 Junction Connector
N49	Door Control Battery
N57	Airbag Sensor Assembly
N58	Airbag Sensor Assembly
a1	No. 1 Stereo Jack Adapter Assembly
a2	Navigation Receiver Assembly
a3	Radio & Display Receiver Assembly
h3	A/C Amplifier Assembly , A/C Harness Assembly
j1	Differential Lock Switch
j2	VSC Off Switch
j3	Tire Pressure Warning Reset Switch (Tire Pressure Warning Switch)
z2	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z3	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z4	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z5	Spiral Cable Sub-Assembly , Steering Wheel Assembly

 
Position of Parts in Instrument Panel (LHD)




90980-12224

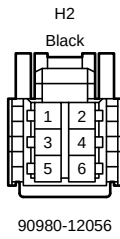


90980-12056

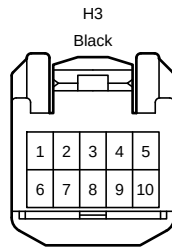


90980-12361

 


90980-11918

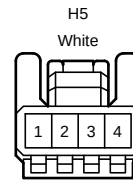


82824-50130

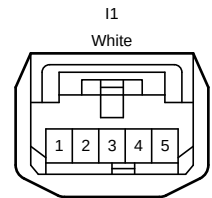


90980-12954

 


90980-11918

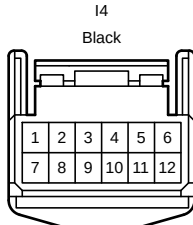


90980-12559

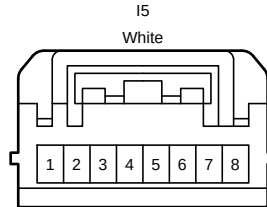


90980-12550

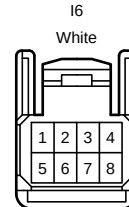


90980-12551

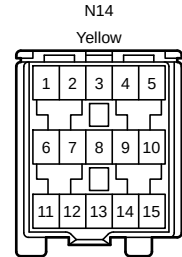


90980-12449

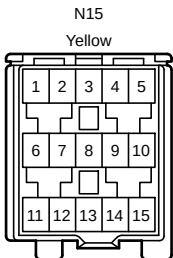


90980-12450

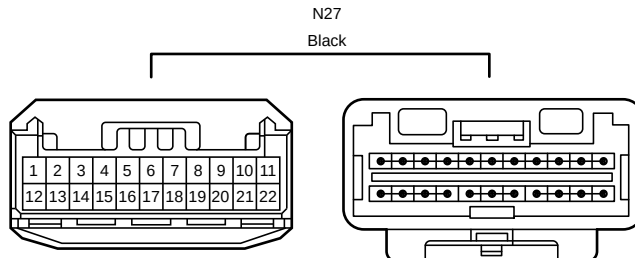


90980-12B54

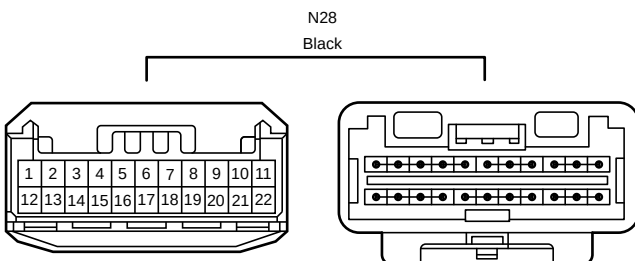


90980-12B54

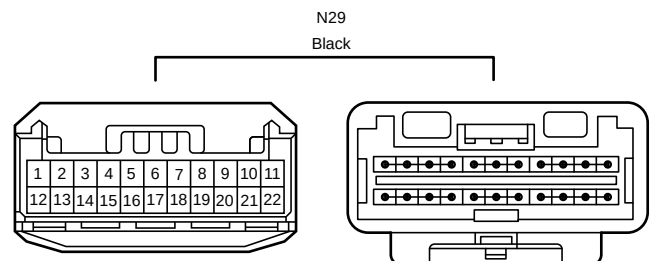


90980-12B54

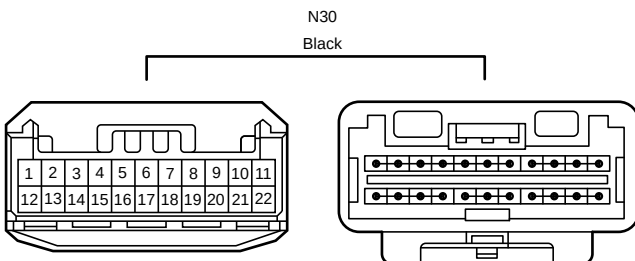

90980-12B54

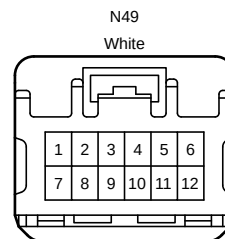

90980-12737

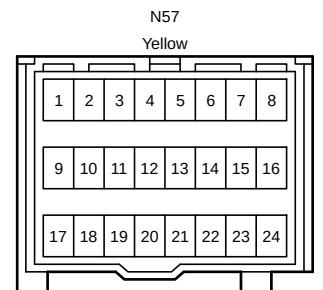

90980-12392

Position of Parts in Instrument Panel (LHD)

