

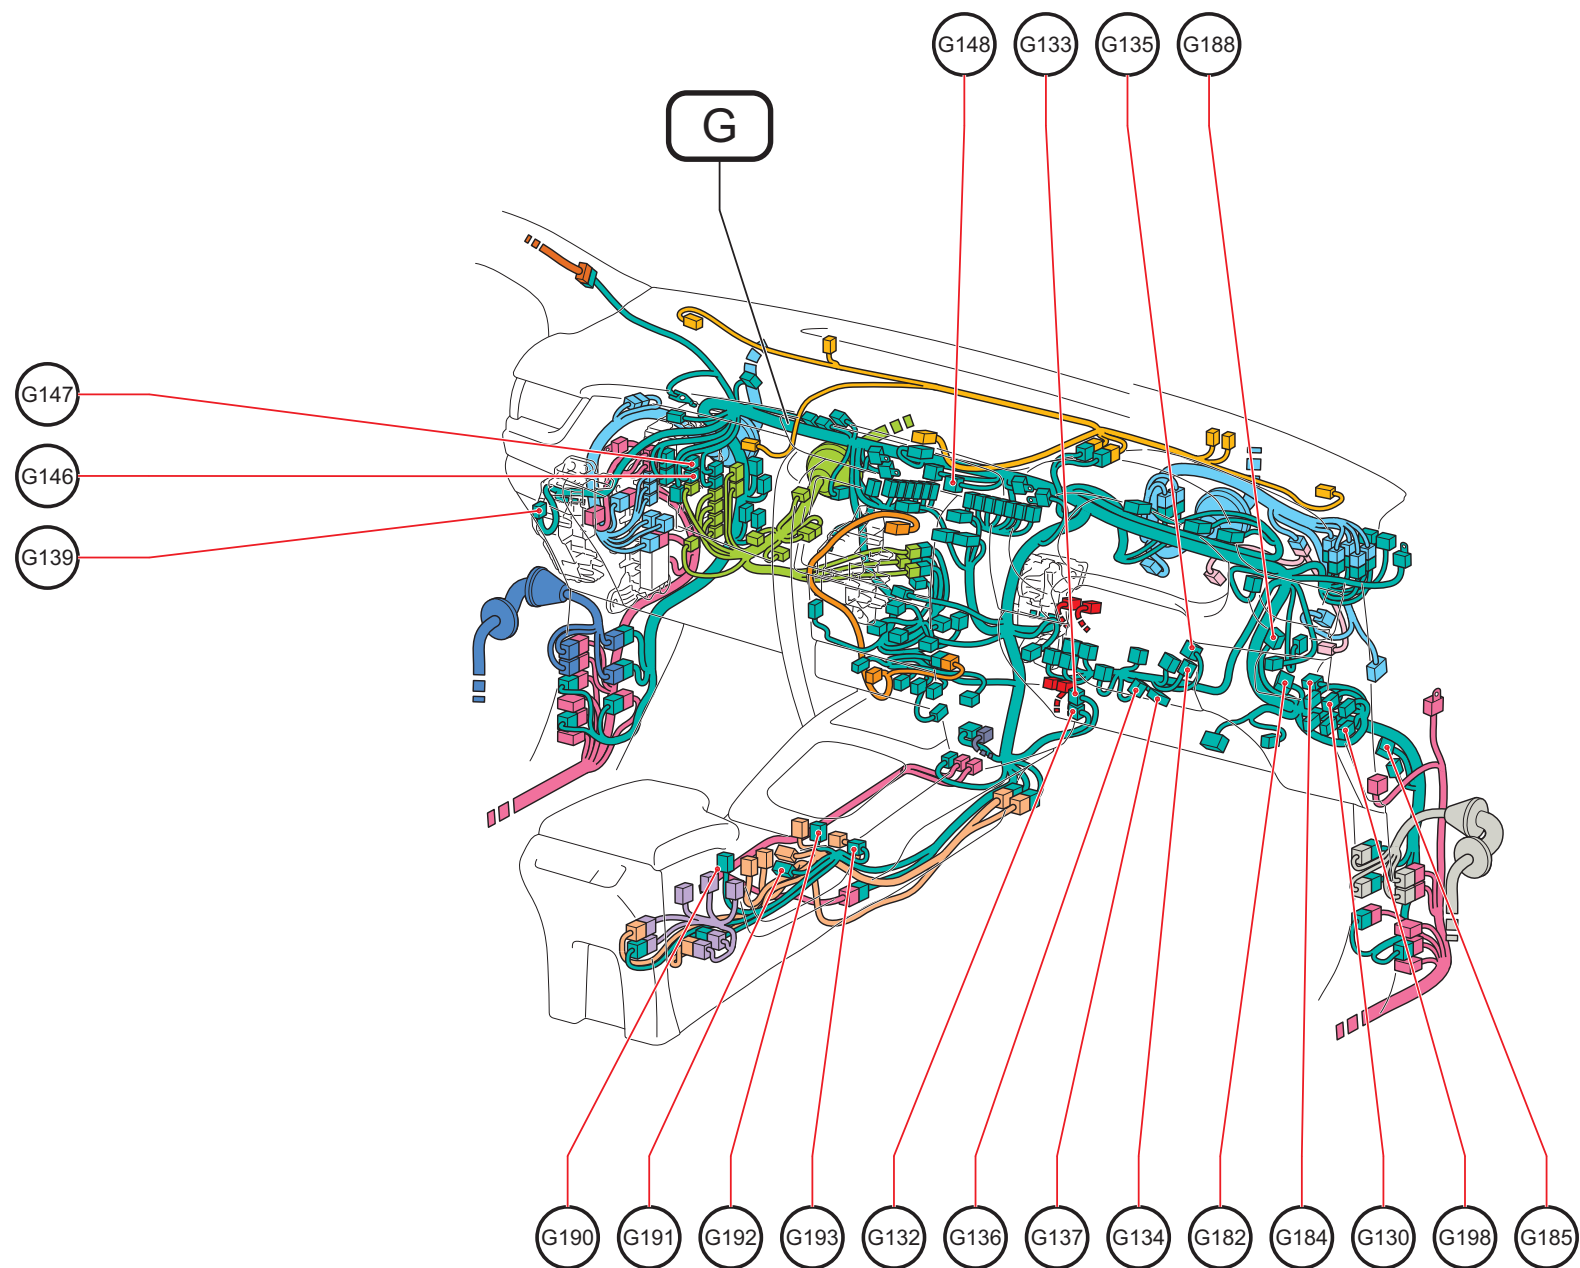
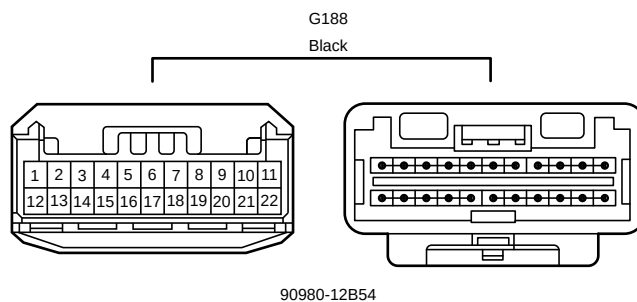
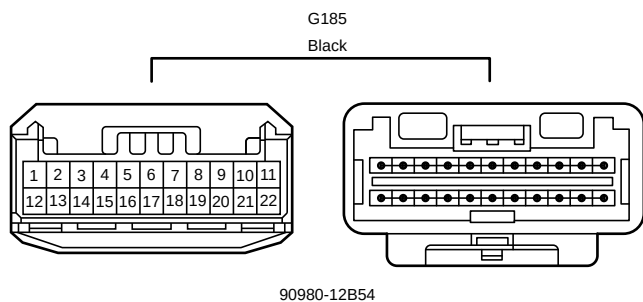
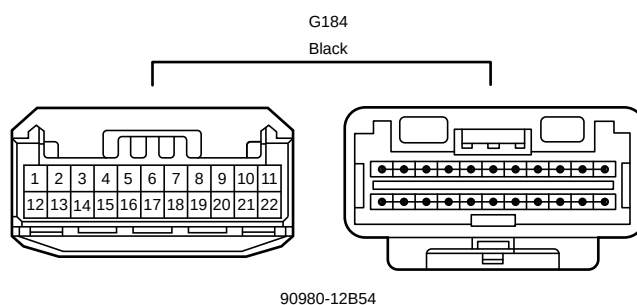
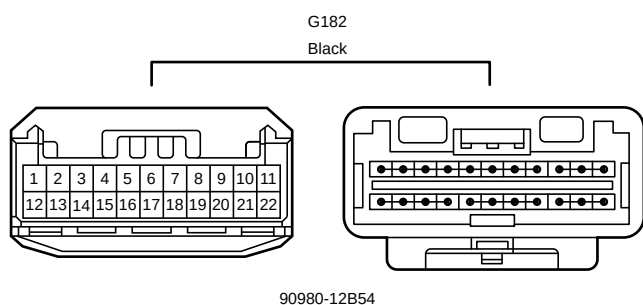
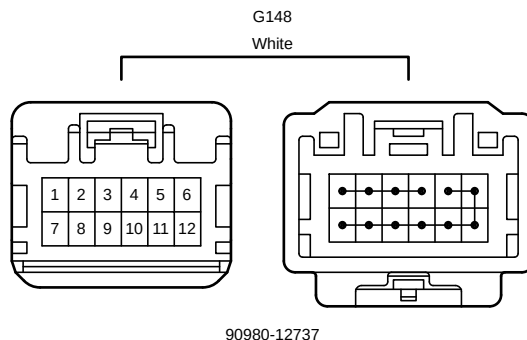
 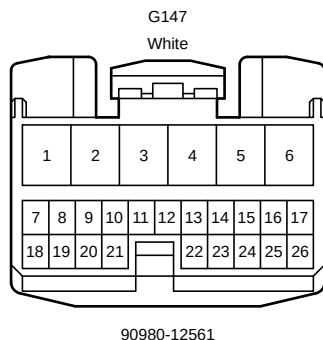
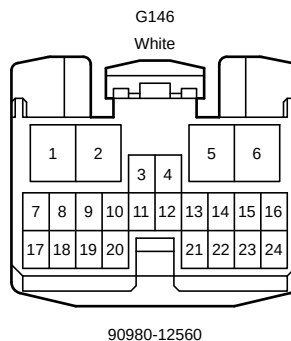
 
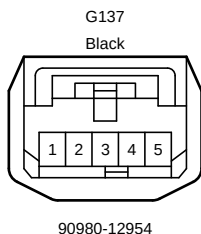
 
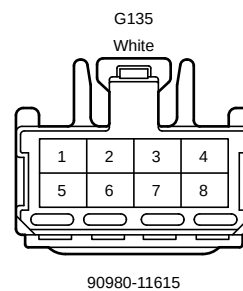

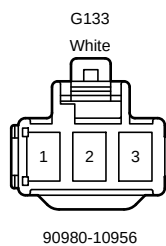


Position of Parts in Instrument Panel (RHD)

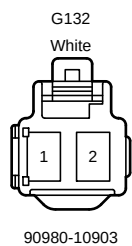


G130 Idle Up Switch
G132 Quick Heater Assembly
G133 Quick Heater Assembly
G134 Key Inter Lock Solenoid
G135 Ignition or Starter Switch Assembly
G136 Un-Lock Warning Switch Assembly
G137 Transponder Key Coil
G139 Airbag Cut Off Switch Cylinder Sub-Assembly
G146 Transmission Control ECU Assembly
G147 Transmission Control ECU Assembly
G148 No. 30 Junction Connector
G182 No. 44 Junction Connector
G184 No. 46 Junction Connector
G185 No. 47 Junction Connector
G188 No. 49 Junction Connector
G190 Combination Switch Assembly
G191 Transmission Control Switch (Transmission Floor Shift Assembly)
G192 Shift Position Indicator (Position Indicator Housing Assembly)
G193 Shift Lock Control ECU (Transmission Floor Shift Assembly)
G198 Diesel Particulate Reduction Switch Assembly


Position of Parts in Instrument Panel (RHD)

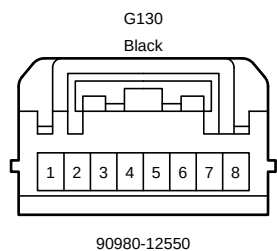


Position of Parts in Instrument Panel (RHD)

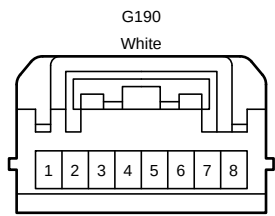


90980-12550

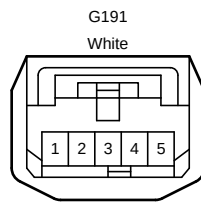


90980-12954

 

90980-11918

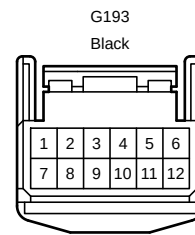

90980-12559

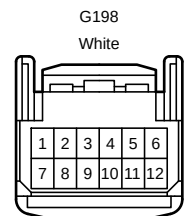

90980-12552